

# **Future Railway Mobile Communication System**

### **Use cases**

Source: FRMCS Functional Working Group

& Architecture and Technology

Group

Date: 7<sup>th</sup> of March 2019

Reference: MG-7900 Version: 1.0.0 No of pages: 521

ISBN 978-2-7461-2605-3
Warning
No part of this publication may be copied, reproduced or distributed by any means whatsoever, including electronic, except for private and individual use, without the express permission of the International Union of Railways (UIC). The same applies for translation, adaptation or transformation, arrangement or reproduction by any method or procedure whatsoever. The sole exceptions – noting the author's name and the source –are "analyses and brief quotations justified by the critical, argumentative, educational, scientific or informative nature
of the publication into which they are incorporated" (Articles L 122-4 and L122-5 of the French Intellectual Property Code).

© International Union of Railways (UIC) - Paris, 2017

**Document history** 

Version	Date	Details
1.0.0		Creation of the document, based on documents FU-7110-1.0.0 and FW-AT2504-1.0.0

## Part 1:

# **Future Railway Mobile Communication System**

**Functional use cases** 

**Document history** 

ocument histor	у					
Version	Date	Details				
0.0.1	24 <sup>th</sup> of February 2016	Creation of the first draft				
0.0.2	6 <sup>th</sup> of April 2016	Update after FWG#13				
0.0.3	11 <sup>th</sup> of May 2016	Update after FWG#14				
0.0.4	21st of June 2016	Update in preparation for FWG#15				
0.0.5	22 <sup>nd</sup> of June 2016	Update after FWG#15				
0.0.6	22 <sup>nd</sup> of June 2016	Version ready to send to NG2R for first check				
0.0.7	7 <sup>th</sup> of September 2016	Update after FWG#16				
0.0.8	12 <sup>th</sup> of October 2016	Update after FWG#17				
0.0.9	16 <sup>th</sup> of November 2016	Input for FWG#18				
0.0.10	23 <sup>rd</sup> of November 2016	Update after FWG#18				
0.0.11	10 <sup>th</sup> of January 2017	Input for FWG#19				
0.0.12	18 <sup>th</sup> of January 2017	Update after FWG#19				
0.0.13	1 <sup>st</sup> of February 2017	After review of Railway emergency communication by ETSI/RT				
		Input for FWG#20				
0.0.14	17 <sup>th</sup> of February 2017	Updates for input to FWG#20				
0.0.15	22 <sup>nd</sup> of February 2017	Update after FWG#20				
0.0.16	27 <sup>th</sup> of March 2017	Updates for input to FWG#21				
0.0.17	29 <sup>th</sup> of March 2017	Update after FWG#21				
0.0.18	31st of March 2017 Update while creating inputs to ETSI/RT #65 meeting					
0.0.19	12 <sup>th</sup> of April 2017	Reordering chapter to align with URS v2.0				
		ISBN number added				
		Review RT#65 added				
		Version ready for 3GPP Release-15 work				
0.1.0	12 <sup>th</sup> of April 2017	Base document for publication on UIC website				
0.1.1	12 <sup>th</sup> of April 2017	Version including ongoing work of FWG Updates for input to FWG#22				
0.1.2	12 <sup>th</sup> of April 2017	Clean version for input FWG#22				
0.1.3	10 <sup>th</sup> of May 2017	Update after FWG#22				
0.1.3	10 <sup>55</sup> Of May 2017	Agreed by FRMCS FWG#22 as draft version				
		Version ready for final correction check before publication (yellow marked parts to be deleted before publication)				
0.2.0	12 <sup>th</sup> of May 2017	DRAFT version, approved by FRMCS Functional working group.				
0.2.1	21st of June 2017	Updates after FWG#23				

Version	Date	Details				
0.2.2	4 <sup>th</sup> of September 2017	Updates for input to FWG#24				
0.2.3	6 <sup>th</sup> of September 2017	Updates after FWG#24				
0.2.4	9 <sup>th</sup> of October 2017	Updates for input to FWG#25				
0.2.5	11 <sup>th</sup> of October 2017	Updates after FWG#25				
0.2.6	20 <sup>th</sup> of November 2017	Updates for input to FWG#26				
0.2.7	22 <sup>nd</sup> of November 2017	Updates after FWG#26				
0.2.8	12 <sup>th</sup> of January 2018	Updates for input to FWG#27				
0.2.9	18 <sup>th</sup> of January 2018	Updates after FWG#27				
0.2.10	19 <sup>th</sup> of February 2018	Updates for input to FWG#28				
0.2.11	20 <sup>th</sup> of February 2018	Updates after FWG#28				
0.2.12	19 <sup>th</sup> of March 2018	Updates for input to FWG#29				
0.2.13	21st of March 2018	Updates after FWG#29				
0.2.14	16 <sup>th</sup> of April 2018	Updates for input to FWG#30				
0.2.15	25 <sup>th</sup> of April 2018	Updates after FWG#30				
0.2.16	11 <sup>th</sup> of June 2018	Updates for input to FWG#31				
0.2.17	13 <sup>th</sup> of June 2018	Updates after FWG#31				
0.2.18	1st of September 2018	Updates for input to FWG#32				
0.2.19	5 <sup>th</sup> of September 2018	Updates after FWG#32				
0.2.20	8 <sup>th</sup> of October 2018	Updates for input to FWG#33				
0.2.21	10 <sup>th</sup> of October 2018	Updates after FWG#33				
0.2.22	19 <sup>th</sup> of November 2018	Updates for input to FWG#34				
0.2.23	21st of November 2018	Updates after FWG#34				
0.2.24	14 <sup>th</sup> of January 2019	Updates for input to FWG#35				
0.2.25	15 <sup>th</sup> of January 2019	Updates after FWG#35				
0.3.0	15 <sup>th</sup> of January 2019	9 Version endorsed by FWG#35, ready for publication				
1.0.0	12 <sup>th</sup> of February 2019	Version endorsed by FRMCS Steering committee #16				

#### Key to contributors:

Name	Company
Erik van Bommel	ProRail
Begoña Domingo	European Union Agency for Railways
Chiel Spaans	European Union Agency for Railways
Markus Gross	ÖBB
Jani Lehtinen	Cinia, on behalf of FTA
Christian Naenni	SBB
Christof Muster	SBB
Peter Kuehn	Deutsche Bahn
Patrick Marsch	Deutsche Bahn
Peter Kotti	Trafikverket
Vincent Caudron	Infrabel
Dan Mandoc	Network Rail
Bogdan Burdulean	Network Rail
Jean-Pierre Martinez	SNCF
Pierre Juventy	SNCF
Edwin Bottelier	NS-Reizigers
Eelco Nicodem	NS

### **Table of Contents**

Docui	ment history	
1	List of abbreviations	.10
2	List of definitions	.11
3	Introduction	.15
4	Generic pre-conditions	.20
5	Device Power on and shut-down related use cases	
6	On-train outgoing voice communication from the driver towards the	
	oller(s) of the train related use cases	.26
7	On-train incoming voice communication from the controller towards a driver	
	d use cases	
8	Multi-train voice communication for drivers including ground user(s) related	. 02
	ases	36
9	Banking Voice Communication related use cases	
	Trackside maintenance voice communication related use cases	
10		
11	Shunting voice communication related use cases	
12	Public emergency call related use cases	
13	Ground to ground voice communication related use cases	
14	Automatic Train Control data communication related use cases	
15	Automatic Train Operation data communication related use cases	
16	Data communication for Possession Management related use cases	
17	Trackside Maintenance Warning System communication related use cases	
18	Remote control of engines communication related use cases	
19	Monitoring and control of critical infrastructure related use cases	
20	Railway emergency communication related use cases	
21	On-train safety device to ground communication related use cases	133
22	Public train emergency communication related use cases	140
23	Working alone related use cases	164
24	Voice recording and access to recorded data related use cases	170
25	Data recording and access to recorded data	174
26	Shunting data communication related use cases	
27	Train Integrity monitoring data communication related use cases	
28	Public emergency warning related use cases	
29	On-train outgoing voice communication from train staff towards a ground us	
	d use cases	
30	On-train incoming voice communication from a ground user towards train st	
	d use cases	
31	Railway staff emergency communication related use cases	
32	Critical real time video related use cases	
33	Critical advisory messaging services – safety related – related use cases2	
34	Virtual Coupling data communication related use cases	
3 <del>4</del> 35	On-train wireless backbone communications related use cases	
36	Train parking protection related use cases	24 I
37	Multi-Train voice communication for drivers excluding ground user(s) related	
	ases	
38	On-train voice communication related use cases	
39	Lineside telephony related use cases	260
40	On-train voice communication towards passengers (Public Address) related	
	ases2	
41	Station Public Address related use cases	269

42	2 Communication at stations and depots related use cases	273
43	3 On-Train Telemetry communications related use cases	280
44	Infrastructure Telemetry communications related use cases	285
4	On-train remote equipment control related use cases	290
46	Monitoring and Control of Non-Critical Infrastructure related use cases	295
47	7 Non critical real Time Video communication related use cases	300
48	Wireless on-train data communication for train staff related use cases	304
49	Wireless internet for railway staff on platforms related use cases	308
50	Train driver advisory - train performance related use cases	312
5		
52	2 Messaging Services related use cases	323
53	3 Transfer of data related use cases	331
54	Record and broadcast of information related use cases	336
5	Transfer of CCTV archives related use cases	342
56	Real time video call related use cases	346
57	7 Augmented reality data communication related use cases	353
58	Information Help Point for public related use cases	358
59	Emergency Help Point for public related use cases	363
60	Wireless internet on-train for passengers related use cases	368
6	1 Wireless internet for passengers on platforms related use cases	372
62		376
63	Multi user talker control related use cases	383
64	1 Role management related use cases	392
6		
66		
67	1 1	
68		
69	, , , , ,	
70		
7	3	
72		
73		
74	100000000000000000000000000000000000000	
7		
76		
	ppendix A – URS vs Use case matrix	
A	opendix B – use cases where off-network use is required	454

#### 1 List of abbreviations

ATC Automatic Train Control
ATO Automatic Train Operation
CCTV Closed Circuit Television
COTS Commercial off The Shelf

DSD Driver Safety Device

ETCS European Train Control System

FRMCS Future Railway Mobile Communications System

GSM-R Global System for Mobile Communications – Railway

HMI Human-Machine Interface (this term encompasses all Human-Machine

Interfaces including the Driver-Machine Interface and the Controller-Machine

Interface)

IM Infrastructure Manager

ISO International Organisation for Standardisation

JRU Juridical Recorder Unit
MOTS Modified Off The Shelf

OPE TSI Operations and Traffic Management Technical Specification for Interoperability

PSA Public Safety Authority

PSAP Public Safety Answering Point

RU Railway Undertaking

TAF TSI Telematics Applications for Freight Technical Specification for Interoperability

TAP TSI Telematics Applications for Passenger services Technical Specification for

Interoperability

TSI Technical Specification for Interoperability

URS User Requirements Specification

#### 2 List of definitions

#### Application

Provides a solution for a communication need that is considered necessary for current and future railway operations.

#### Bi-directional

Two-way communication.

#### Connected

Users with ongoing communication are put together/connected into one communication.

#### Controller

An individual responsible for the conduct of some aspect of train operations. For the purposes of this specification, the following functional identities of controllers are defined:

- Signaller.
- Railway Undertaking (RU) controller.
- Infrastructure Manager (IM) controller.
- Power supply controller.
- Etc.

Dependent upon local circumstances, a number of functional identities can be carried out by a single controller or a single functional identity can be carried out by a number of controllers.

#### Data communication

Exchange of information in the form of data, including video (excluding voice communication).

#### Depot

The term covers all depots, yards and sidings and other locations where trains operate outside the main line.

#### Driver

A person capable and authorised to drive trains, including locomotives, shunting locomotives, work trains, maintenance railway vehicles or trains for the carriage of passengers or goods by rail in an autonomous, responsible and safe manner

#### Driver safety device

An on-train system that monitors the alertness of the driver and provides warnings and alarms to other systems as appropriate.

#### Emergency operation

The operational state of the railway when a current unforeseen or unplanned event has occurred which has life threatening or extreme loss implication and which requires immediate attention

#### **Entitled Controller**

A controller that is responsible for traffic regulation within a defined geographic area, and that is directly responsible for the safe operations of trains within their defined area of responsibility.

#### European Union Agency for Railways

The agency for railway safety and interoperability established by Regulation (EC) No 881/2004 of the European Parliament and the Council of 29th April 2004 establishing a European Railway Agency, currently named the European Union Agency for Railways.

#### External system

A back office type of system connected to the FRMCS system, such as traffic management systems, tracking systems, planning systems, weather report system, etc.

#### FRMCS user equipment

Combination of hardware and software to be able to use FRMCS.

#### Functional identity

A description of the function performed by a called or calling party. The functional identity can include characters and numbers. This is used within the functional addressing scheme to identify an end user/system by function or identity rather than by a specific item of radio equipment or user subscription.

#### **Ground User**

A user that is not on-board a train. The user could be stationary or moving, connected via wire or wireless.

#### Initiator context dependent addressing

Previously known in the GSM-R system as location dependent addressing which describes the process of addressing a particular function (typically a controller). However for future requirements the term has been changed to incorporate a broader scope such as:

- initiator location
- initiator travel direction
- initiator functional identity

initiator status (e.g. involved in a shunting communication)

Join

Users with ongoing communication are put together/connected into one communication.

#### Lineside Telephony

A communication service installed at a fixed location that can be connected to a fixed or mobile network.

#### Location information

The information on the location of a user device. This can consist of the following elements:

- Geographic Location,
- Velocity (the combination of speed and direction),
- Infra Location (additional information specifying railway infra elements; for example: signal 123, switch 456, track section 789A, etcetera), and
- Quality of Service information (horizontal and vertical accuracy, response time, QoS class, accuracy of Infra Location).

#### Network operator

The entity responsible for operating the FRMCS network.

#### **Normal Operation**

The state of the railway when it is fully functional and operating as planned. Normal operation also includes any maintenance activities that do not affect the ability to provide a fully functional operational railway.

#### **Public**

Persons on trains, on platforms, at stations, on platforms, at level crossings, etc. not being railway staff.

#### Public emergency call

A user-to-user voice communication, which is used to notify non-railway authorities (such as Police, Ambulance, or fire services) of an emergency situation.

#### Public emergency operator

The nominated user who is responsible for answering public emergency calls.

#### Railway staff

Personal employed by the railways other than driver, controllers, trackside staff or train staff.

#### Shunting team

A group of people manoeuvring trains in order to change their location or composition.

#### Trackside staff

Staff working as trackside maintenance and/or shunting members.

Train

A connected line of railroad car(s)/vehicle(s), with or without a locomotive.

Train Staff

Railway staff that are on-board a train but are not drivers, for example conductors, catering staff, security staff etc.

#### Uni-directional

One-way communication, like a broadcast.

#### Usability

International standard, ISO 9241-11, defines usability as: The extent to which a product can be used by specified users to achieve specified goals with effectiveness, efficiency and satisfaction in a specified context of use.

User

A human user or a machine making use of the FRMCS. Users can be connected to the FRMCS system wired or wireless.

#### Voice communication

Exchange of information in the form of voice, regardless of the transmission method (voice is not considered as data in this document).

#### 3 Introduction

#### 3.1 Background

Globally, many railway infrastructure managers and railway undertakings currently use an interoperable radio communications network, GSM-R (Global System for Mobile Communications – Rail), for operational voice communications and to provide the data bearer for ETCS (European Train Control System). In the European Union this is legally mandated in the Technical Specifications for Interoperability that are applicable in the European Member States. Voice and data communications are also used for various other applications.

GSM-R is a MOTS (modified off the shelf technology) system based around manufacturers' commercial GSM (Global System for Mobile Communications) offerings, enhanced to deliver specific "R" (railway) functionality. Due to the product modifications required to provide "R" functionality, and the need to utilise non-commercial radio spectrum, much of the equipment utilised for GSM-R comprises manufacturers' special-build equipment and/or software variants. The use of MOTS technology for GSM-R has proven expensive for the railways, both in-terms of capital and operational expenditure.

The predicted obsolescence of GSM-R by 2030, combined with the long term life expectancy of ETCS (2050) and the Railway business needs, have led to the European Railway community initiating work to identify a successor for GSM-R. The successor has to be future proof, learn from past mistakes and comply with Railway requirements. This document is one of the first steps in this process, where the railways' needs are identified and defined in a consistent and technology agnostic way, the foundation for next steps on defining the Future Railway Mobile Communications System (FRMCS).

#### 3.2 Definition of a functional use case

A functional use case, also called use case in this document, is defined as a list of actions or event steps, typically defining the interactions between a role and a system, to achieve a goal. The actor can be a human, an external system, or time.

A use case is initiated by a user with a particular goal in mind, and completes successfully when that goal is satisfied. It describes the sequence of interactions between actors and the system necessary to deliver the service that satisfies the goal. It also includes possible variants of this sequence, e.g., alternative sequences that may also satisfy the goal, as well as sequences that may lead to failure to complete the service because of exceptional behaviour, error handling, etc. The system is treated as a "black box", and the interactions with system, including system responses, are as perceived from outside the system.

Thus, use cases capture who (actor) does what (interaction) with the system, for what purpose (goal), without dealing with system internals. A complete set of use cases specifies the different ways to use the system, and therefore defines the expected behaviour of the system, bounding the scope of the system.

#### 3.3 Purpose of the document

The aim of the FRMCS Use Case document is to specify the use cases related to the application listed in the FRMCS URS document. The list of use cases do not need to follow the list of applications in the URS. Multiple use cases can be used within an application. Also, the same use cases can be used in different applications.

#### 3.4 Benefits

One of the benefits of writing down the use cases is that, besides the fact to have a clear definition of the railways' expectation of the FRMCS system, it can be used for testing, validation and/or certification of the new FRMCS system and/or applications.

#### 3.5 How to write use cases

In order to write the use cases in a consistent way, we have chosen to apply the following structure:

- Description
- Pre-conditions
- Service Flows
- Post-conditions
- Communication attributes (only for relevant communication use cases)
- Related application interfaces
- HMI related criteria

The use cases are written in normal flow but also alternative flows and exception cases are taken into account.

All use cases will be combined into one document. This could maybe be split later, for example to speed up the review process of use cases.

While writing the use cases, relevant specifications will be taken into account. For Europe the TSIs for ENE, TAF, TAP, OPE, etc., are considered.

While writing the use cases the HMI itself is not specified, but the interaction with the HMI is specified in the use cases when it has an influence on the usability of the FRMCS system.

#### 3.6 Review process

A vital step in agreeing use cases is the review process. Since not all participants of the FWG have all the knowledge in order to write the 100% correct use cases, help is needed from other groups that have the knowledge but also have the responsibility to make decisions on use cases. All relevant groups must agree in order to build the communication system in a consistent way. In order to reach this goal, it is proposed to use the existing CCM process.

#### 3.7 Formalisation

After all the use cases are written, agreed by all relevant groups, the use cases can be published and used as a reference document. The exact way how this is done is not clear yet and will be defined later.

The use case document will be used to eventually be able to create the FRMCS system to fulfil the communication needs.

The use case document also needs to be maintained, which implies change control management to the use case document.

#### 3.8 Reading guide

This use case document is structured in the following way:

- ⇒ in chapter 4 the generic conditions are defined
- ⇒ In chapter 5 the generic use cases are defined before the user is able to perform an FRMCS application.
- ⇒ In chapter 6 and onwards all use cases are defined. See appendix A for the reference to the URS application.

Before reading this FRMCS Use case document, the reader should first take the FRMCS URS document into account, in order to better understand the content of this use case document.

#### 3.9 Document framework

The functional use cases document is part of a set of documents. The document framework of figure 1 applies. Please note that this is not a chronological order of the workflow.

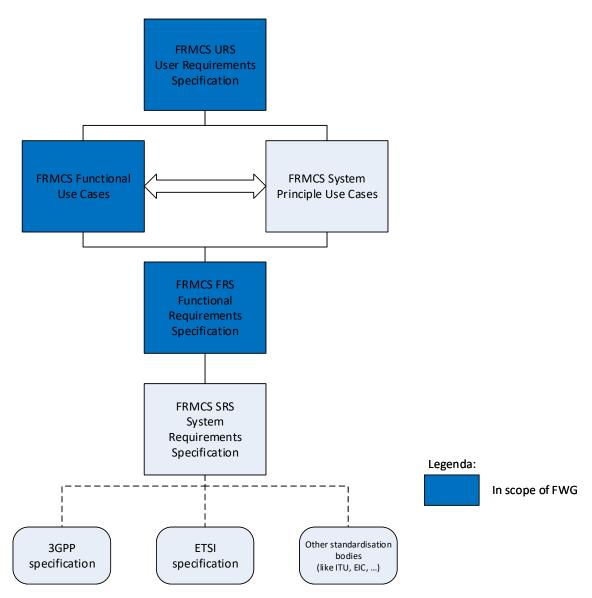


Figure 1: Document framework

### 4 Generic pre-conditions

Before reading the use cases itself, it is required to take into account a number of generic pre-conditions. The following conditions apply, in random order:

- ⇒ All use cases are considered to be On-network, unless otherwise specified in the use cases in this document. For more detail see appendix B.
- ⇒ The user experience is that the communication service is always available, for both voice and data. Simultaneous usage of application is possible.
- ⇒ The GSM-R user equipment is considered not to be part of the FRMCS system;

#### 5 Device Power on and shut-down related use cases

#### 5.1 Introduction

In this chapter the device power on and shut-down use cases are defined:

- Power on the user device
- First access to the system after power on
- Controlled power down user device
- Uncontrolled power down user device

Please refer to chapter 64.2 when reading the use cases in this chapter.

- 5.2 Use case: Power on the user device
- 5.2.1 Description
- 5.2.1.1 This use case provides the user with a powered on end user device.
- 5.2.1.2 This use case is available in both on-network and off-network conditions.
- 5.2.2 Pre-conditions
- 5.2.2.1 The end user device is switched off.
- 5.2.3 Service flows

Successful self-test

- 5.2.3.1 The user switches on the end user device.
- 5.2.3.2 The end user device performs a self-test. If the test is successful, the user is informed about this.
- 5.2.3.3 The device selects an FRMCS network. The home FRMCS network is prefered.
- 5.2.3.4 The user is informed about to which FRMCS network the end user device is attached.

Unsuccessful self-test

- 5.2.3.5 The user switches on the end user device.
- 5.2.3.6 The end user device performs a self-test. If the test is not succesful, the user is informed about this.
- 5.2.3.7 The device selects an FRMCS network. The home FRMCS network is prefered.
- 5.2.3.8 The user is informed about to which FRMCS network the end user device is attached.
- 5.2.4 Post-conditions
- 5.2.4.1 The device is switched on and attached to the network. The user is informed about the results of the self-test.
- 5.2.4.2 The device is reachable by its subscriber identity.
- 5.2.5 Related URS application interfaces
- 5.2.5.1 None.

#### 5.2.6 HMI related criteria

5.2.6.1 The power on of the end user device are a simple action.

- 5.3 Use case: Access to the system after power on
- 5.3.1 Description
- 5.3.1.1 This use case enables the end user device to be logged in into the FRMCS system and the equipment type is identified.
- 5.3.2 Pre-conditions
- 5.3.2.1 The device is powered on and attached to the FRMCS network.
- 5.3.2.2 The device has a subscriber identity.
- 5.3.2.3 This use case is available in both on-network and off-network conditions.
- 5.3.3 Service flows
- 5.3.3.1 On the end user device the applicable FRMCS application(s) starts-up and become active.
- 5.3.3.2 The end user device is logged in into the FRMCS system.
- 5.3.3.3 The type of end user device is initialised by the FRMCS system.
- 5.3.4 Post-conditions
- 5.3.4.1 The FRMCS application(s) are running on the device.
- 5.3.4.2 The end user device is logged in into the FRMCS system.
- 5.3.4.3 The equipment type is initialised.
- 5.3.5 Related URS application interfaces
- 5.3.5.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application
8.7	Authorisation of application

- 5.3.6 HMI related criteria
- 5.3.6.1 None.

- 5.4 Use case: Controlled power down user device
- 5.4.1 Description
- 5.4.1.1 This use case provides the user with an powered down end user device.
- 5.4.2 Pre-conditions
- 5.4.2.1 The end user device is switched on.
- 5.4.3 Service flows
- 5.4.3.1 The user switches off the device.
- 5.4.3.2 The FRMCS user equipment will deregister all identities which are active.
- 5.4.3.3 The user is logged out on the device.
- 5.4.3.4 The device is logged out from the FRMCS system.
- 5.4.3.5 The device detaches from the FRMCS network.
- 5.4.3.6 The device is switched off.
- 5.4.4 Post-conditions
- 5.4.4.1 The device is detached from the FRMCS system and switched off.
- 5.4.5 Related URS application interfaces
- 5.4.5.1 None.
- 5.4.6 HMI related criteria
- 5.4.6.1 The power off of the end user device are a simple action.

- 5.5 Use case: Uncontrolled power down user device
- 5.5.1 Description
- 5.5.1.1 This use case provides the beheavior when uncontrolled powering down the device.
- 5.5.2 Pre-conditions
- 5.5.2.1 The end user device is switched on.
- 5.5.3 Service flows
- 5.5.3.1 The device losses power.
- 5.5.3.2 The device is switched off.
- 5.5.3.3 The FRMCS system will deregister all identities which are active.
- 5.5.3.4 The FRMCS system logs out the user and the end user device.
- 5.5.4 Post-conditions
- 5.5.4.1 The device is detached from the FRMCS system and switched off.
- 5.5.5 Related URS application interfaces
- 5.5.5.1 None.
- 5.5.6 HMI related criteria
- 5.5.6.1 None.

# On-train outgoing voice communication from the driver towards the controller(s) of the train related use cases

#### 6.1 Introduction

In this chapter the use cases related to On-train outgoing voice communication from the driver towards the controller(s) of the train are defined. The following use cases are defined:

- Initiation of driver to controller(s) voice communication
- Join a driver to controller(s) voice communication
- Termination of driver to controller(s) voice communication
- Service interworking and service continuation with GSM-R
- 6.2 Use case: Initiation of driver to controller(s) voice communication
- 6.2.1 Description
- 6.2.1.1 The driver is able to initiate a voice communication to the controller(s) that was, is, or will be responsible for the movement of the train.
- 6.2.2 Pre-conditions
- 6.2.2.1 The driver is authorised to initiate the voice communication to the controller. This is managed by the authorisation of voice communication application.
- 6.2.2.2 The driver is authorised to use the On-train outgoing voice communication from the driver towards the controller(s) of the train application by the application authorisation of application.
- 6.2.3 Service flows
  - Driver to responsible controller(s)
- 6.2.3.1 The driver initiates the voice communication to the controller. The QoS class of the communication is managed by the QoS class application. The voice communication requests the QoS class which matches the application category of CRITICAL VOICE (see [QoS]) within the FRMCS system.
- 6.2.3.2 The FRMCS system determines the responsible controller(s), based on e.g.:
  - location information provided by the locations services application, and/or
  - functional identity provided by the role management and presence application.
  - System configuration on which controller is responsible for which part of the track/station/etc.
- 6.2.3.3 The FRMCS system establishes the voice communication to the controller(s) within a setup time specified as NORMAL (see [QoS]). The information from the role management and presence application is used to present the identities to the driver and controller(s). Also the location of the driver is presented to the controller(s) which is retrived from the location services application.
- 6.2.3.4 The talker control is managed by the multi user talker control application.
- 6.2.3.5 The voice communication is recorded by the Voice recording and access to recorded data application.
- 6.2.3.6 The arbitration is managed by the arbitration application.

- Driver to another controller(s)
- 6.2.3.7 The driver initiates the voice communication to the controller who was or will be responsible for the movement of the train. The addressing is performed by selecting an entry from a list or entered manually. The QoS class of the communication is managed by the QoS class application. The voice communication requests the QoS class which matches the application category of CRITICAL VOICE (see [QoS]) within the FRMCS system.
- 6.2.3.8 The FRMCS system presents the list of controllers to the driver, based on, amongst others, the following criteria:
  - location information provided by the locations services application, and/or
  - functional identity provided by the role management and presence application.
  - System configuration on which controller is responsible for which part of the track/station/etc.
- 6.2.3.9 The FRMCS system establishes the voice communication to the controller(s) within a setup time specified as NORMAL (see [QoS]). The information from the role management and presence application is used to present the identities to the driver and controller. Also the location of the driver is presented to the controller which is retrived from the location services application.
- 6.2.3.10 The talker control is managed by the multi user talker control application.
- 6.2.3.11 The voice communication is recorded by the Voice recording and access to recorded data application.
- 6.2.3.12 The arbitration is managed by the arbitration application.
- 6.2.4 Post-conditions
- 6.2.4.1 The driver is connected to the requested controller.
- 6.2.5 Communication attributes

URS Ref.	Туре	Symmetry Up/Down	Distribution	Latency	Bandwidth	Reliability	Setup	Speed
5.1	Bi- directional Voice	50/50	User-to-User/ Multi-user	Low	Low	High	Normal	High

- 6.2.6 Related URS application interfaces
- 6.2.6.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application			
8.11	Inviting-a-user messaging			
8.2	Multi-user talker control			
8.3	Role management and presence			
8.4	Location services			

8.5	Authorisation of voice communication				
8.7	Authorisation of application				
8.8	QoS Class negotiation				
8.12	Arbitration				
5.19 Voice recording and access to recorded data					

#### 6.2.7 HMI related criteria

6.2.7.1 The initiation of a voice communication are achieved with the minimum of interaction (for example, a single button press or selection from a list). Where selection from a list is determined to be the preferred option, then the list is accessed with the minimum of interaction and be intuitive.

- 6.3 Use case: Join a driver to controller(s) voice communication
- 6.3.1 Description
- 6.3.1.1 A controller is able to connect to an ongoing driver to controller(s) voice communication
- 6.3.2 Pre-conditions
- 6.3.2.1 The controller is authorised to connect to a driver to controller(s) voice communication. This is managed by the authorisation of voice communication application.
- 6.3.2.2 The controller is authorised to use the driver to controller(s) voice communication application by the application authorisation of application.
- 6.3.2.3 The addressed driver is involved in an ongoing driver to controller(s) voice communication.
- 6.3.3 Service flows
- 6.3.3.1 The controller requests to connect to an existing driver to controller(s) voice communication to a driver by selecting or dialling the corresponding functional identity. The QoS class of the communication is managed by the QoS class application. The voice communication requests the QoS class which matches the application category of CRITICAL VOICE (see [QoS]) within the FRMCS system.
- 6.3.3.2 The FRMCS system connects the controller requesting to join to the ongoing driver to controller(s) voice communication. The information from the role management and presence application is used to present the identity to both the driver and the controleer(s). The requesting controller is informed if the voice communication is either user-to-user or multi-user.
- 6.3.3.3 The talker control is managed by the multi user talker control application.
- 6.3.3.4 The arbitration is managed by the arbitration application.
- 6.3.3.5 The communication is recorded by the Voice recording and access to recorded data application.
- 6.3.4 Post-conditions
- 6.3.4.1 The controller has been connected to the ongoing driver to controller(s) voice communication
- 6.3.5 Related URS application interfaces
- 6.3.5.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.
- 6.3.6 HMI related criteria
- 6.3.6.1 Joining a voice communication is achieved with the minimum of interaction (for example, a single button press or selection from a list). Where selection from a list is determined to be the preferred option, then the list is accessed with the minimum of interaction and be intuitive.

- 6.4 Use case: Termination of driver to controller(s) voice communication
- 6.4.1 Description
- 6.4.1.1 The driver is able to terminate the driver to controller voice communication.
- 6.4.1.2 The controller(s) is/are able to put on hold, leave or terminate the driver to controller voice communication.
- 6.4.2 Pre-conditions
- 6.4.2.1 The driver to controller voice communication is ongoing.
- 6.4.3 Service flows

Driver termination

- 6.4.3.1 The driver is able to terminate the voice communication.
- 6.4.3.2 The FRMCS system terminates the voice communication. All involved controllers are informed.

Controller on hold

- 6.4.3.3 A controller is able to put the driver to controller voice communication on hold in the case that more than one controller is part of the voice communication.
- 6.4.3.4 After the controller has put the voice communication on hold, the communication remains in the FRMCS system, and the controller is able to be part of the communication again.

Controller leaving

6.4.3.5 A controller is able to leave the driver to controller voice communication in the case that more than one controller is part of the voice communication.

Controller termination

- 6.4.3.6 Any controller is able to terminate the driver to controller voice communication.
- 6.4.3.7 The FRMCS system terminates the voice communication. All involved users are informed.
- 6.4.4 Post-conditions
- 6.4.4.1 A controller has left the voice communication or the driver to controller voice communication is terminated.
- 6.4.5 HMI related criteria
- 6.4.5.1 The initiation of a voice communication are achieved with the minimum of interaction (for example, a single button press or selection from a list). Where selection from a list is determined to be the preferred option, then the list is accessed with the minimum of interaction and be intuitive.
- 6.5 Use case: Service interworking and service continuation with GSM-R
- 6.5.1 Description
- 6.5.1.1 For migration purposes the service interworking and service continuation between the GSM-R system and FRMCS system for driver to controller(s) voice communication needs to be clear.
- 6.5.1.2 Depending on the migration scenario a controller can be attached to the FRMCS system, to the GSM-R system or both. The driver can beattached either in the

- GSM-R system or in the FRMCS system. Functional identities are applicable in one system only.
- 6.5.1.3 This use case only applies to end user devices supporting both FRMCS and GSM-R systems.
- 6.5.2 Pre-conditions
- 6.5.2.1 None.
- 6.5.3 Service flows

Driver attached to GSM-R

- 6.5.3.1 When the driver is attached to the GSM-R system and is initiating voice communication to controller(s), the GSM-R system will route the voice communication to the controller(s) accordingly.
- 6.5.3.2 If the controller is located in the FRMCS system the GSM-R system can only route the call to the controller if the controller can be reached by an address or identity understood by the GSM-R system. The role management in FRMCS provides the appropriate address or identity e.g. by provide a mapping of GSM-R identities and FRMCS identities.
- 6.5.3.3 The information from the role management and presence application is used to route the communication and to present the identities of both driver and controller.

Driver attached to FRMCS

6.5.3.4 When the driver is active in the FRMCS system and is initiating voice communication to controller(s), the FRMCS system will route the communication to the controller(s) accordingly. The information from the role management and presence application is used to route the communication and to present the identities of both driver and controller. The role management in FRMCS provides the appropriate address or identity e.g. by provide a mapping of GSM-R identities and FRMCS identities.

Driver moving from GSM-R to FRMCS

6.5.3.5 When the GSM-R user equipment of the driver is detached from the GSM-R system the FRMCS end user device provides service continuation by setting up the communication via the FRMCS system. An interruption of voice communication is acceptable.

Driver moving from FRMCS to GSM-R

- 6.5.3.6 When the FRMCS user equipment of the driver is detached from the FRMCS system the FRMCS end user device provides service continuation bysetting up the communication via the GSM-R system. An interruption of voice communication is acceptable.
- 6.5.4 Post-conditions
- 6.5.4.1 None.
- 6.5.5 Related URS application interfaces
- 6.5.5.1 None.
- 6.5.6 HMI related criteria
- 6.5.6.1 None.

## 7 On-train incoming voice communication from the controller towards a driver related use cases

#### 7.1 Introduction

In this chapter the use cases related to On-train incoming voice communication from the controller to the driver of the train are defined. The following use cases are defined:

- Initiation of controller to a driver voice communication
- Termination of controller to a driver voice communication
- Service interworking and service continuation with GSM-R

#### 7.2 Use case: Initiation of controller to driver voice communication

#### 7.2.1 Description

7.2.1.1 An entitled controller is able to set up a voice communication to a driver based on any type of identity, as defined in role management.

#### 7.2.2 Pre-conditions

- 7.2.2.1 The controller is entitled to initiate the voice communication to the driver. This is managed by the authorisation of communication application.
- 7.2.2.2 The controller is entitled to use the On-train incoming voice communication from the controller towards a driver application by the application authorisation of application.

#### 7.2.3 Service flows

- 7.2.3.1 The controller initiates the voice communication to the driver. The QoS class of the communication is managed by the QoS class application. The voice communication requests the QoS class which matches the application category of CRITICAL VOICE (see [QoS]) within the FRMCS system.
- 7.2.3.2 The FRMCS system determines the requested driver based on the identity provided by the controller.
- 7.2.3.3 The FRMCS system establishes the voice communication to the driver within a setup time specified as NORMAL (see [QoS]). The information from the role management and presence application is used to present the identities to the driver and controller. Also the location of the driver is presented to the controller(s) which is retrived from the location services application.
- 7.2.3.4 The talker control is managed by the multi user talker control application.
- 7.2.3.5 The arbitration is managed by the arbitration application.
- 7.2.3.6 The voice communication is recorded by the Voice recording and access to recorded data application.

#### 7.2.4 Post-conditions

7.2.4.1 The controller is connected to the requested driver.

#### 7.2.5 Communication attributes

URS Ref.	Туре	Symmetry Up/Down	Distribution	Latency	Bandwidth	Reliability	Setup	Speed
5.2	Bi- directional Voice	50/50	User-to-User	Low	Low	High	Normal	High

#### 7.2.6 Related URS application interfaces

7.2.6.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application
8.11	Inviting-a-user messaging
8.2	Multi-user talker control
8.3	Role management and presence
8.4	Location services
8.5	Authorisation of voice communication
8.7	Authorisation of application
8.8	QoS Class negotiation
8.12	Arbitration
5.19	Voice recording and access to recorded data

#### 7.2.7 HMI related criteria

7.2.7.1 The initiation of a voice communication is achieved with the minimum of interaction (for example, a single button press or selection from a list). Where selection from a list is determined to be the preferred option, then the list is accessed with the minimum of interaction and be intuitive.

- 7.3 Use case: Termination of controller to driver voice communication
- 7.3.1 Description
- 7.3.1.1 The driver is able to put on hold or terminate the controller to driver voice communication.
- 7.3.1.2 The controller is able to put on hold or terminate the driver to controller voice communication.
- 7.3.2 Pre-conditions
- 7.3.2.1 The controller to driver voice communication is ongoing.
- 7.3.3 Service flows

Driver on hold

- 7.3.3.1 A driver is able to put the controller to driver voice communication on hold.
- 7.3.3.2 After the driver has put the voice communication on hold, the communication remains in the FRMCS system, and the driver is able to be part of the communication again.

Driver termination

- 7.3.3.3 The driver is able to terminate the voice communication.
- 7.3.3.4 The FRMCS system terminates the voice communication. The controller is informed.

Controller on hold

- 7.3.3.5 A controller is able to put the controller to driver voice communication on hold.
- 7.3.3.6 After the controller has put the voice communication on hold, the communication remains in the FRMCS system, and the controller is able to be part of the communication again.

Controller termination

- 7.3.3.7 The controller is able to terminate the controller to driver voice communication.
- 7.3.3.8 The FRMCS system terminates the voice communication. The driver is informed.
- 7.3.4 Post-conditions
- 7.3.4.1 A controller has put on hold or terminated the voice communication, the driver has put on hold or terminated the voice communication, the voice communication was put on hold or terminated by FRMCS system.
- 7.3.4.2 The driver to controller voice communication is terminated.
- 7.3.5 HMI related criteria
- 7.3.5.1 All users are informed when a communication is terminated.

- 7.4 Use case: Service interworking and service continuation with GSM-R
- 7.4.1 Description
- 7.4.1.1 For migration purposes the service interworking and service continuation between the GSM-R system and FRMCS system for controller to driver voice communication needs to be clear.
- 7.4.1.2 Depending on the migration scenario a controller can be attached to the FRMCS system, to the GSM-R system or both. The driver can be attached either in the GSM-R system or in the FRMCS system. Functional identities are applicable in one system only.
- 7.4.1.3 This use case only applies to end user devices supporting both FRMCS and GSM-R systems.
- 7.4.2 Pre-conditions
- 7.4.2.1 None.
- 7.4.3 Service flows

Driver attached to GSM-R

7.4.3.1 When the driver is attached to the GSM-R system and the controller is initiating a voice communication to driver, the FRMCS system will route the voice communication to the driver through the GSM-R system. The information from the role management and presence application is used to route the communication and to present the identities of both driver and controller.

Driver attached to FRMCS

7.4.3.2 When the driver is active in the FRMCS system and the controller is initiating voice communication to the driver, the FRMCS system will route the communication to the driver accordingly. The information from the role management and presence application is used to route the communication and to present the identities of both driver and controller.

Driver moving from GSM-R to FRMCS

7.4.3.3 When the GSM-R user equipment of the driver is detached from the GSM-R system the FRMCS end user device provides service continuation by setting up the communication via the FRMCS system. An interruption of voice communication is acceptable.

Driver moving from FRMCS to GSM-R

- 7.4.3.4 When the FRMCS user equipment of the driver is detached from the FRMCS system the FRMCS end user device provides service continuation bysetting up the communication via the GSM-R system. An interruption of voice communication is acceptable.
- 7.4.4 Post-conditions
- 7.4.4.1 None.
- 7.4.5 Related URS application interfaces
- 7.4.5.1 None.
- 7.4.6 HMI related criteria
- 7.4.6.1 None.

# 8 Multi-train voice communication for drivers including ground user(s) related use cases

#### 8.1 Introduction

In this chapter the use cases related to Multi-train voice communication for drivers including ground user(s) are defined. The following use cases are defined:

- Initiation of Multi-train voice communication for drivers including ground user(s) communication
- Join a Multi-train voice communication for drivers including ground user(s) communication
- Terminate a Multi-train voice communication for drivers including ground user(s) communication
- Service interworking and service continuation with GSM-R
- 8.2 Use case: Initiation of Multi-train voice communication for drivers including ground user(s) communication
- 8.2.1 Description
- 8.2.1.1 A driver and/or a ground user is able to initiate a voice communication to other drivers and/or ground users.
- 8.2.2 Pre-conditions
- 8.2.2.1 The driver and the ground user are authorised to initiate the voice communication. This is managed by the authorisation of voice communication application.
- 8.2.2.2 The driver and the ground user are authorised to use the Multi-train voice communication for drivers including ground user(s) application by the application authorisation of application.
- 8.2.3 Service flows
- 8.2.3.1 The driver and/or ground user initiates the communication to the (other) driver(s) and/or ground users. The QoS class of the communication is managed by the QoS class application. The voice communication requests the QoS class which matchesthe application category of CRITICAL VOICE (see [QoS]) within the FRMCS system.
- 8.2.3.2 The FRMCS system determines the driver(s) and the ground user(s) to be included in the communication, based on:
  - location information of all users provided by the locations services application, and/or
  - functional identity of all users provided by the role management and presence application.
  - System configuration on which ground user is responsible for which part of the track/station/etc.
- 8.2.3.3 The FRMCS system establishes the voice communication within a setup time specified as NORMAL (see [QoS]). The information from the role management and presence application is used to present the identities to the driver(s) and ground user (s). The initiating driver is indicated to the ground user (s). Also the location of

- the driver(s) in the communication is presented to the ground user (s) which is retrived from the location services application.
- 8.2.3.4 The talker control is managed by the multi user talker control application.
- 8.2.3.5 The arbitration is managed by the arbitration application.
- 8.2.3.6 The communication is recorded by the Voice recording and access to recorded data application.
- 8.2.4 Post-conditions
- 8.2.4.1 The driver and/or the ground user is connected to requested driver(s) and/or ground user (s).
- 8.2.5 Communication attributes

URS Ref.	Туре	Symmetry Up/Down	Distribution	Latency	Bandwidth	Reliability	Setup	Speed
	Bi- directional Voice	50/50	Multi-user	Low	Low	High	Normal	High
5.3	Uni- directional Voice	0/100	Multi-user	Low	Low	High	Normal	High

- 8.2.6 Related URS application interfaces
- 8.2.6.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application				
8.11	Inviting-a-user messaging				
8.2	Multi-user talker control				
8.3	Role management and presence				
8.4	Location services				
8.5	Authorisation of voice communication				
8.7	Authorisation of application				
8.8	QoS Class negotiation				
8.12	Arbitration				
5.19	Voice recording and access to recorded data				

#### 8.2.7 HMI related criteria

8.2.7.1 The initiation of a voice communication is achieved with the minimum of interaction (for example, a single button press or selection from a list). Where selection from a list is determined to be the preferred option, then the list is accessed with the minimum of interaction and be intuitive.

# 8.3 Use case: join an on-going Multi-train voice communication for drivers including ground user(s) communication

## 8.3.1 Description

- 8.3.1.1 An entitled user is automatically connected to the ongoing multi-train voice communication when meeting conditions based on location and/or functional identities.
- 8.3.1.2 An entitled user may request to connect to an ongoing multi-train voice communication, that has been previously left, when meeting conditions based on location and/or functional identities.

#### 8.3.2 Pre-conditions

- 8.3.2.1 The user is authorised to connect to a voice communication for drivers including ground user(s). This is managed by the authorisation of voice communication application.
- 8.3.2.2 The user is authorised to use the voice communication for drivers including ground user(s) application by the application authorisation of application.
- 8.3.2.3 There is an ongoing voice communication for drivers including ground user(s) communication.

#### 8.3.3 Service flows

- 8.3.3.1 A user (Driver or Ground user) meets the criteria(location and/or functional identity) for beeing involved in the ongoing voice communication for drivers including ground user(s). The application sends automatically the request to connect to the ongoing voice communication for drivers including ground user(s) or the driver sends this request by selecting or dialling the corresponding functional identity.
- 8.3.3.2 The FRMCS system connects the user to the ongoing voice communication for drivers including ground user(s) communication.
- 8.3.3.3 The identity of involved users are presented to the parties in the call.
- 8.3.3.4 The talker control is managed by the multi user talker control application.
- 8.3.3.5 The arbitration is managed by the arbitration application.
- 8.3.3.6 The communication is recorded by the Voice recording and access to recorded data application.

## 8.3.4 Post-conditions

- 8.3.4.1 The user has been connected to the ongoing voice communication for drivers including ground user(s) communication.
- 8.3.5 HMI related criteria
- 8.3.5.1 None.

- 8.4 Use case: Terminate a Multi-train voice communication for drivers including ground user(s) communication
- 8.4.1 Description
- 8.4.1.1 The driver is able to put on hold or leave the voice communication.
- 8.4.1.2 The driver will be automatically disconnected from the voice communication when the conditions to be included in it are not fulfilled.
- 8.4.1.3 The ground user(s) is/are able to either put on hold, leave or terminate the voice communication.
- 8.4.2 Pre-conditions
- 8.4.2.1 The driver to ground user voice communication is ongoing.
- 8.4.3 Service flows

Driver on hold

- 8.4.3.1 The driver is able to put the voice communication on hold.
- 8.4.3.2 After the driver has put the voice communication on hold, the communication remains in the FRMCS system, and the driver is able to return to the communication again. When put on hold the other participants in the communication are informed and can continue the communication.

Driver leaving

- 8.4.3.3 The driver is able to leave the voice communication. The driver is not able to terminate the voice communication. When a driver has left the other participants in the communication are informed and can continue the communication if there are still driver(s) involved in the communication.
- 8.4.3.4 The driver will automatically leave the voice communication if the conditions to be included in it are not fulfilled.
- 8.4.3.5 The FRMCS system terminates the voice communication if the last driver has left (although (multiple) ground user s are still active in the communication). All involved users are informed.

Ground user on hold

- 8.4.3.6 A ground user is able to put the voice communication on hold in the case that more than one ground user is part of the voice communication.
- 8.4.3.7 After the ground user has put the voice communication on hold, the communication remains in the FRMCS system, and the ground user is able to be part of the communication again.

Ground user leaving

- 8.4.3.8 A ground user is able to leave the voice communication .
- 8.4.3.9 After the ground user has left the voice communication, the remaining users are informed.

Ground user termination

- 8.4.3.10 Any ground user is able to terminate the voice communication.
- 8.4.3.11 The FRMCS system terminates the voice communication. All involved users are informed.

#### 8.4.4 Post-conditions

8.4.4.1 A ground user or the driver has left the communication or the ground user or the system has terminated the communication.

## 8.4.5 Related URS application interfaces

8.4.5.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

## 8.4.6 HMI related criteria

8.4.6.1 The initiation of a voice communication, the action of putting it on hold or to connect to it is achieved with the minimum of interaction (for example, a single button press or selection from a list). Where selection from a list is determined to be the preferred option, then the list is accessed with the minimum of interaction and be intuitive.

- 8.5 Use case: Service interworking and service continuation with GSM-R
- 8.5.1 Description
- 8.5.1.1 For migration purposes the service interworking and service continuation between the GSM-R system and FRMCS system for Multi-train voice communication for drivers including ground user(s) communication needs to be defined.
- 8.5.1.2 Depending on the migration scenario a ground user or a driver can be attached to the FRMCS sytsem, to the GSM-R system or both. The driver can beattached either in the GSM-R system or in the FRMCS system. Functional identities are applicable in one system only.
- 8.5.1.3 This use case only applies to end user devices supporting both FRMCS and GSM-R systems.
- 8.5.2 Pre-conditions
- 8.5.2.1 None.
- 8.5.3 Service flows

Driver attached to GSM-R

- 8.5.3.1 When the driver is attached to the GSM-R system and is initiating voice communication to other drivers and ground user, the GSM-R system will route the voice communication to other drivers the ground user(s) accordingly.
- 8.5.3.2 The Multi-train voice communication for drivers including ground user(s) communication is linked together and controlled by the FRMCS system.
- 8.5.3.3 Service interworking between the talker control in the GSM-R system and the FRMCS system is required, but without changing the GSM-R system.
- 8.5.3.4 If the driver or the ground user is located in the FRMCS system the GSM-R system can only route the call if it can be reached by an address or identity understood by the GSM-R system. The role management in FRMCS provides the appropriate address or identity e.g. by provide a mapping of GSM-R identities and FRMCS identities.
- 8.5.3.5 The information from the role management and presence application is used to route the communication and to present the identities of both driver and ground user.

Driver attached to FRMCS

- 8.5.3.6 When the driver is active in the FRMCS system and is initiating voice communication to other drivers and ground user, the FRMCS system will route the communication to the ground user accordingly.
- 8.5.3.7 The Multi-train voice communication for drivers including ground user(s) communication is linked together and controlled by the FRMCS system.
- 8.5.3.8 Service interworking between the talker control in the GSM-R system and the FRMCS system is required, but without changing the GSM-R system.
- 8.5.3.9 The information from the role management and presence application is used to route the communication and to present the identities of both driver and ground user. The role management in FRMCS provides the appropriate address or identity e.g. by provide a mapping of GSM-R identities and FRMCS identities.

Driver moving from GSM-R to FRMCS

8.5.3.10 When the GSM-R user equipment of the driver is detached from the GSM-R system the FRMCS end user device provides service continuation by setting up the communication via the FRMCS system. An interruption of voice communication is acceptable.

Driver moving from FRMCS to GSM-R

- 8.5.3.11 When the FRMCS user equipment of the driver is detached from the FRMCS system the FRMCS end user device provides service continuation by setting up the communication via the GSM-R system. An interruption of voice communication is acceptable.
- 8.5.4 Post-conditions
- 8.5.4.1 None.
- 8.5.5 Related URS application interfaces
- 8.5.5.1 None.
- 8.5.6 HMI related criteria
- 8.5.6.1 None.

# 9 Banking Voice Communication related use cases

## 9.1 Introduction

In this chapter the use cases related to voice communication for banking operation are described, the following use cases are identified

- Notification of the driver(s)
- Initiate a banking voice communication
- Adding a controller to banking voice communication
- A controller joins a banking voice communication
- A controller leaves the banking voice communication
- Termination of banking voice communication
- Service interworking and service continuation with GSM-R

## 9.2 Use case: Notification of the driver(s)

## 9.2.1 Description

- 9.2.1.1 A train composition may consist of several locomotives e.g. one (or more) in the front and one (or more) at the end of train. The locomotive in the front is unable to steer the locomotive at the end. Thus a voice communication between the drivers of the locomotives is necessary.
- 9.2.1.2 The drivers of the different locomotives within the same train have the possibility to set-up voice communication.
- 9.2.1.3 All driver(s) of such a train gets the notification, if other driver(s) of the same train register to an already active train functional identity. As an example, driver 1 and driver 2 are registered to the same train number. Once driver 3 also registers to the same train number, driver 1 and 2 receive a notification of the activation.

#### 9.2.2 Pre-conditions

- 9.2.2.1 The drivers are authorised to initiate the banking voice communication. This is managed by the authorisation of communication application.
- 9.2.2.2 The drivers are authorised to use banking voice communication application by the application authorisation of application.

#### 9.2.3 Service flows

- 9.2.3.1 Other driver(s) of the same train, except the leading driver, register on their functional identities.
- 9.2.3.2 All driver(s) of the same train receive a notification each time another driver registers on a functional identity (of the same train).

#### 9.2.4 Post-conditions

- 9.2.4.1 The notification has been distributed to the driver(s).
- 9.2.5 Communication attributes

URS Ref.	Туре	Symmetry Up/Down	Distribution	Latency	Bandwidth	Reliability	Setup	Speed
5.4	Bi- directional Voice	50/50	User-to- User/Multi- user	Low	Low	High	Normal	Normal

## 9.2.6 Related URS application interfaces

9.2.6.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application				
8.11	Inviting-a-user messaging				
8.1	Secured Voice Communications				
8.2	Multi-user talker control				
8.3	Role management and presence				
8.4	Location services				
8.5	Authorisation of voice communication				
8.7	Authorisation of application				
8.8	QoS Class negotiation				
8.12	Arbitration				
5.19	Voice recording and access				

## 9.2.7 HMI related criteria

9.2.7.1 None.

## 9.3 Use case: Initiate a banking voice communication

## 9.3.1 Description

- 9.3.1.1 A train composition may consist of several locomotives e.g. one (or more) in the front and one (or more) at the end of train. The locomotive in the front is unable to steer the locomotive at the end. Thus a voice communication between the drivers of the locomotives is necessary.
- 9.3.1.2 The drivers of the different locomotives within the same train have the possibility to set-up voice communication. During such a ongoing voice communication an entitled controller can connect to this communication without any interaction of the driver(s). Thus, a driver is able to add an entitled controller to the ongoing voice communication during banking operation.
- 9.3.1.3 The voice communication during banking operation is permantly active until the train reached the area wherein no banking is longer needed.
- 9.3.1.4 This use case is available in both on-network and off-network conditions.

#### 9.3.2 Pre-conditions

- 9.3.2.1 The requesting driver is authorised to initiate the banking voice communication. This is managed by the authorisation of communication application.
- 9.3.2.2 The driver(s) are authorised to use banking voice communication application by the application authorisation of application.

#### 9.3.3 Service flows

- 9.3.3.1 The driver initiates the banking voice communication. The QoS class of the communication is managed by the QoS class application. The voice communication requests the QoS class which matches the application category of VOICE (see [QoS]) within the FRMCS system.
- 9.3.3.2 The FRMCS system establishes the banking voice communication to all drivers of the same train based on their functional identities, within a setup time specified as NORMAL (see [QoS]). The information from the role management and presence application is used to present the identities to the driver(s).
- 9.3.3.3 The talker control is managed by the multi user talker control application.
- 9.3.3.4 Based on operational needs assured voice communication can be used. If configured to be used, assured voice communication is automatically invoked.
- 9.3.3.5 The arbitration is managed by the arbitration application.
- 9.3.3.6 The voice communication is recorded by the Voice recording and access to recorded data application.

## 9.3.4 Post-conditions

9.3.4.1 The initating driver is connected to the all other driver(s) of the same train.

#### 9.3.5 HMI related criteria

9.3.5.1 The initiation of a voice communication is achieved with the minimum of interaction (for example a single button press or selection from list).

- 9.4 Use case: Adding a controller to banking voice communication
- 9.4.1 Description
- 9.4.1.1 During an ongoing voice communication used for banking operation, a driver is able to add an entitled controller to the communication.
- 9.4.2 Pre-conditions
- 9.4.2.1 The requesting driver is authorised to use the banking voice communication. This is managed by the authorisation of communication application.
- 9.4.2.2 The controller is authorised to use the banking voice communication application by the application authorisation of application.
- 9.4.2.3 A banking voice communication between drivers of the same train is established.
- 9.4.3 Service flows
  - Driver to responsible controller(s)
- 9.4.3.1 One of the drivers requests that a controller connects to the ongoing voice communication. The QoS class of the communication is managed by the QoS class application. The voice communication requests the QoS class which matches the application category of VOICE (see [QoS]) within the FRMCS system.
- 9.4.3.2 The FRMCS system determines the responsible controller, based on e.g.:
  - Location information provided by the locations services application, and/or
  - Functional identity provided by the role management and presence application.
  - System configuration on which controller is responsible for which part of the track/station/etc.
- 9.4.3.3 The FRMCS system establishes the voice communication to the controller and connects the controller into the ongoing banking voice communication within a setup time specified as NORMAL (see [QoS]). The information from the role management and presence application is used to present the identity of the controller to the driver(s) and of the driver(s) to the controller.
- 9.4.3.4 The talker control is managed by the multi user talker control application.
- 9.4.3.5 The arbitration is managed by the arbitration application.
- 9.4.3.6 The communication is recorded by the Voice recording and access to recorded data application.
  - Driver to another controller(s)
- 9.4.3.7 One of the drivers requests that the controller who was or will be responsible for the movement of the train connects to the ongoing voice communication. The addressing is performed by selecting an entry from a list or entered manually. The QoS profile of the communication is managed by the QoS Profile application. The voice communication requests the QoS profile which matches the application category of VOICE (see [QoS]) within the FRMCS system.
- 9.4.3.8 The FRMCS system presents the list of controllers to the driver, based on, amongst others, the following criteria:
  - location information provided by the locations services application, and/or

- functional identity provided by the role management and presence application.
- System configuration on which controller is responsible for which part of the track/station/etc.
- 9.4.3.9 The FRMCS system establishes the voice communication to the controller and connects the controller into the ongoing banking voice communication within a setup time specified as NORMAL (see [QoS]). The information from the role management and presence application is used to present the identities to the driver and controller. Also the location of the driver is presented to the controller which is retrived from the location services application.
- 9.4.3.10 The talker control is managed by the multi user talker control application.
- 9.4.3.11 The arbitration is managed by the arbitration application.
- 9.4.3.12 The voice communication is recorded by the Voice recording and access to recorded data application.
- 9.4.4 Post-conditions
- 9.4.4.1 The controller has been connected to an ongoing banking voice communication.
- 9.4.5 Related URS application interfaces
- 9.4.5.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.
- 9.4.6 HMI related criteria
- 9.4.6.1 The initiation of a voice communication is achieved with the minimum of interaction (for example a single button press or selection from list).

- 9.5 Use case: A controller joins a banking voice communication
- 9.5.1 Description
- 9.5.1.1 During the ongoing voice communication for banking operation an entitled controller can connect to the communication without any interaction of the driver(s).
- 9.5.2 Pre-conditions
- 9.5.2.1 The controller is authorised to use the banking voice communication. This is managed by the authorisation of communication application.
- 9.5.2.2 A banking voice communication between the drivers of the same train is established.
- 9.5.3 Service flows
- 9.5.3.1 The controller requests to connect to the already existing voice communication between the driver of a certain train that is in banking operation. The QoS class of the communication is managed by the QoS class application. The voice communication requests the QoS class which matches the application category of VOICE (see [QoS]) within the FRMCS system.
- 9.5.3.2 The FRMCS system establishes the voice communication to the already existing voice communication between the driver that are involved in the banking operation. The controller connects to the ongoing banking voice communication within a setup time specified as NORMAL (see [QoS]). The information from the role management and presence application is used to present the identity of the controller to the driver(s) and of the driver(s) to the controller.
- 9.5.3.3 The talker control is managed by the multi user talker control application.
- 9.5.3.4 The arbitration is managed by the arbitration application.
- 9.5.3.5 The communication is recorded by the Voice recording and access to recorded data application.
- 9.5.4 Post-conditions
- 9.5.4.1 The controller has been connected to an ongoing banking voice communication.
- 9.5.5 Related URS application interfaces
- 9.5.5.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.
- 9.5.6 HMI related criteria
- 9.5.6.1 The initiation of a voice communication is achieved with the minimum of interaction (for example a single button press or selection from list).

- 9.6 Use case: A controller leaves the banking voice communication
- 9.6.1 Description
- 9.6.1.1 A controller is able to leave an ongoing banking voice communication.
- 9.6.2 Pre-conditions
- 9.6.2.1 The controller is involved in an ongoing banking voice communication.
- 9.6.3 Service flows
- 9.6.3.1 The contoller selects to leave the ongoing banking voice communication.
- 9.6.3.2 The FRMCS system disconnects the controller from the ongoing banking voice communication. The information from the role management and presence application is used to inform remaining participants of the banking voice communication about the disconnection.
- 9.6.4 Post-conditions
- 9.6.4.1 The controller is no longer part of the banking voice communication.
- 9.6.5 Related URS application interfaces
- 9.6.5.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.
- 9.6.6 HMI related criteria
- 9.6.6.1 The leaving of a voice communication is achieved with the minimum of interaction (for example a single button press or selection from list).

- 9.7 Use case: Termination of banking voice communication
- 9.7.1 Description
- 9.7.1.1 The voice communication used for banking operation can be terminated by a driver.
- 9.7.2 Pre-conditions
- 9.7.2.1 A banking voice communication between the drivers of the same train is established.
- 9.7.2.2 At least one driver is authorised to terminate the banking voice communication. This is managed by the authorisation of voice communication application.
- 9.7.2.3 This use case is available in both on-network and off-network conditions.
- 9.7.3 Service flows
- 9.7.3.1 A driver selects to terminate the banking voice communication.
- 9.7.3.2 The FRMCS system terminates the banking voice communication. All involved users are informed.
- 9.7.4 Post-conditions
- 9.7.4.1 The banking voice communication has been terminated.
- 9.7.5 Related URS application interfaces
- 9.7.5.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.
- 9.7.6 HMI related criteria
- 9.7.6.1 The termination of a voice communication is achieved with the minimum of interaction (for example a single button press or selection from list).

- 9.8 Use case: service interworking and service continuation with GSM-R
- 9.8.1.1 For migration purposes the service interworking and service continuation between the GSM-R system and FRMCS system for banking voice needs to be defined.
- 9.8.1.2 Depending on the migration scenario a controller or a driver can be attached to the FRMCS system, to the GSM-R system or both. The driver can be attached either in the GSM-R system or in the FRMCS system. Functional identities are applicable in one system only.
- 9.8.1.3 This use case only applies to end user devices supporting both FRMCS and GSM-R systems.
- 9.8.2 Pre-conditions
- 9.8.2.1 None.
- 9.8.3 Service flows

Driver attached to GSM-R

- 9.8.3.1 When the driver is attached to the GSM-R system and is initiating voice communication to other drivers and controllers, the GSM-R system will route the voice communication to other drivers the controllers accordingly.
- 9.8.3.2 The banking voice communication is linked together and controlled by the FRMCS system.
- 9.8.3.3 Service interworking between the talker control in the GSM-R system and the FRMCS system is required, but without changing the GSM-R system.
- 9.8.3.4 If the driver or the controller is located in the FRMCS system the GSM-R system can only route the call if it can be reached by an address or identity understood by the GSM-R system. The role management in FRMCS provides the appropriate address or identity e.g. by provide a mapping of GSM-R identities and FRMCS identities.
- 9.8.3.5 The information from the role management and presence application is used to route the communication and to present the identities of both driver and ground user.

Driver attached to FRMCS

- 9.8.3.6 When the driver is active in the FRMCS system and is initiating banking voice communication to other drivers and controllers, the FRMCS system will route the communication to the ground user accordingly.
- 9.8.3.7 The banking voice communication is linked together and controlled by the FRMCS system.
- 9.8.3.8 Service interworking between the talker control in the GSM-R system and the FRMCS system is required, but without changing the GSM-R system.
- 9.8.3.9 The information from the role management and presence application is used to route the communication and to present the identities of both driver and ground user. The role management in FRMCS provides the appropriate address or identity e.g. by provide a mapping of GSM-R identities and FRMCS identities.

Driver moving from GSM-R to FRMCS

9.8.3.10 When the GSM-R user equipment of the driver is detached from the GSM-R system the FRMCS end user device provides service continuation by setting up the communication via the FRMCS system. An interruption of voice communication is acceptable.

## Driver moving from FRMCS to GSM-R

- 9.8.3.11 When the FRMCS user equipment of the driver is detached from the FRMCS system the FRMCS end user device provides service continuation by setting up the communication via the GSM-R system. An interruption of voice communication is acceptable.
- 9.8.4 Post-conditions
- 9.8.4.1 None.
- 9.8.5 Related URS application interfaces
- 9.8.5.1 None.
- 9.8.6 HMI related criteria
- 9.8.6.1 None.

# 10 Trackside maintenance voice communication related use cases

## 10.1 Introduction

In this chapter the use cases related to trackside maintenance voice communication including ground user(s) are defined. The following use cases are defined:

- Initiation of trackside maintenance voice communication
- Join a trackside maintenance voice communication
- Termination of trackside maintenance voice communication
- Service interworking and service continuation with GSM-R

#### 10.2 Use case: Initiation of trackside maintenance voice communication

## 10.2.1 Description

10.2.1.1 A trackside worker and/or a ground user is able to initiate a voice communication to other trackside workers and/or ground users.

#### 10.2.2 Pre-conditions

- 10.2.2.1 The trackside worker and the ground user are authorised to initiate the voice communication. This is managed by the authorisation of communication application.
- 10.2.2.2 The trackside worker and the ground user are authorised to use the trackside maintenance voice communication application by the application authorisation of application.
- 10.2.2.3 This use case is available in both on-network and off-network conditions.

#### 10.2.3 Service flows

- 10.2.3.1 The user can select from a list the communication to be initiated. In the list ongoing communications relevant to the trackside worker or the ground user are indicated.
- 10.2.3.2 The trackside worker or the ground user can connect to a selected ongoing voice communication.
- 10.2.3.3 The trackside worker and/or ground user initiates the communication to the other trackside workers and/or ground users. The QoS class of the communication is managed by the QoS class application. The voice communication requests the QoS class which matches the application category of VOICE (see [QoS]) within the FRMCS system.
- 10.2.3.4 The FRMCS system determines the trackside worker(s) and the ground user(s) to be included in the communication, based on:
  - location information of all users provided by the locations services application, and/or
  - functional identity of all users provided by the role management and presence application.
  - System configuration on which ground user is responsible for which part of the track/station/etc.

- 10.2.3.5 The FRMCS system establishes the voice communication within a setup time specified as NORMAL (see [QoS]). The information from the role management and presence application is used to present the identities to the trackside worker(s) and ground user (s). The initiating trackside worker is indicated to the ground user (s). Also the location of the trackside worker(s) in the communication is presented to the ground user (s) which is retrived from the location services application.
- 10.2.3.6 The talker control is managed by the multi user talker control application.
- 10.2.3.7 The trackside maintenance voice communication can be bi-directional or unidirectional.
- 10.2.3.8 The arbitration is managed by the arbitration application.
- 10.2.3.9 The communication is recorded by the Voice recording and access to recorded data application.

## 10.2.4 Post-conditions

10.2.4.1 The trackside worker and/or the ground user are connected to requested trackside worker(s) and/or ground user(s).

#### 10.2.5 Communication attributes

URS Ref.	Туре	Symmetry Up/Down	Distribution	Latency	Bandwidth	Reliability	Setup	Speed
	Bi- directional Voice	50/50	User-to- User/Multi- user	Low	Low	High	Normal	Normal
5.5	Uni- directional Voice	0/100	User-to- User/Multi- user	Low	Low	High	Normal	Normal

## 10.2.6 Related URS application interfaces

10.2.6.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application				
8.11	Inviting-a-user messaging				
8.2	Multi-user talker control				
8.3	Role management and presence				
8.4	Location services				
8.5	Authorisation of voice communication				
8.7	Authorisation of application				
8.8	QoS Class negotiation				
8.12	Arbitration				
5.19	Voice recording and access to recorded data				

## 10.2.7 HMI related criteria

10.2.7.1 The initiation of a voice communication is achieved with the minimum of interaction (for example, a single button press or selection from a list). Where selection from a list is determined to be the preferred option, then the list is accessed with the minimum of interaction and be intuitive.

## 10.3 Use case: Join a trackside maintenance voice communication

## 10.3.1 Description

10.3.1.1 An entitled user is able to connect to an ongoing trackside maintenance voice communication

#### 10.3.2 Pre-conditions

- 10.3.2.1 The user is authorised to connect to a trackside maintenance voice communication. This is managed by the authorisation of voice communication application.
- 10.3.2.2 The user is authorised to use the trackside maintenance voice communication application by the application authorisation of application.
- 10.3.2.3 The addressed trackside worker or a trackside worker team is involved in an ongoing trackside maintenance voice communication.
- 10.3.2.4 This use case is available in both on-network and off-network conditions.

#### 10.3.3 Service flows

- 10.3.3.1 The user requests to connect to an ongoing trackside maintenance voice communication to a trackside worker or a trackside worker team by selecting or dialling the corresponding functional identity. The QoS class of the communication is managed by the QoS class application. The voice communication requests the QoS class which matches the application category of VOICE (see [QoS]) within the FRMCS system.
- 10.3.3.2 The FRMCS system connects the user requesting to join to the ongoing trackside maintenance voice communication. The information from the role management and presence application is used to present the identity to the trackside workers. The initiating user is informed if the voice communication is either user-to-user or multiuser.
- 10.3.3.3 The talker control is managed by the multi user talker control application.
- 10.3.3.4 The arbitration is managed by the arbitration application.
- 10.3.3.5 The communication is recorded by the Voice recording and access to recorded data application.

#### 10.3.4 Post-conditions

10.3.4.1 The user has been connected to the ongoing trackside maintenance voice communication.

## 10.3.5 HMI related criteria

10.3.5.1 The joining of a voice communication is achieved with the minimum of interaction (for example, a single button press or selection from a list). Where selection from a list is determined to be the preferred option, then the list is accessed with the minimum of interaction and be intuitive.

- 10.4 Use case: Termination of trackside maintenance voice communication
- 10.4.1 Description
- 10.4.1.1 The trackside worker is able to either put on hold, leave or terminate the voice communication.
- 10.4.1.2 The ground user is able to either put on hold, leave or terminate the voice communication.
- 10.4.1.3 This use case is available in both on-network and off-network conditions.
- 10.4.2 Pre-conditions
- 10.4.2.1 The trackside maintenance voice communication is ongoing.
- 10.4.3 Service flows

on hold

- 10.4.3.1 The trackside worker or the ground user is able to put the voice communication on hold.
- 10.4.3.2 After the trackside worker or the ground user has put the voice communication on hold, the communication remains in the FRMCS system, and the trackside worker or the ground user is able to return to the communication again. When put on hold the other participants in the communication are informed and can continue the communication.

leaving

- 10.4.3.3 The trackside worker or the ground user is able to leave the voice communication. When a trackside worker has left the other participants in the communication are informed and can continue the communication if there are still trackside worker(s) or the ground user(s) involved in the communication.
- 10.4.3.4 The FRMCS system terminates the voice communication if the last trackside worker or the ground user has left. All involved users are informed.

  termination
- 10.4.3.5 An entitled track side worker or an entitled ground user is able to terminate the voice communication.
- 10.4.3.6 The FRMCS system terminates the voice communication. All involved users are informed.
- 10.4.4 Post-conditions
- 10.4.4.1 A ground user or the trackside worker has either put on hold, left or terminate the communication.
- 10.4.5 Related URS application interfaces
- 10.4.5.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.
- 10.4.6 HMI related criteria
- 10.4.6.1 The put on hold, leaving or terminating of a voice communication is achieved with the minimum of interaction (for example, a single button press or selection from a list). Where selection from a list is determined to be the preferred option, then the list is accessed with the minimum of interaction and be intuitive.

10.4.6.2 The FRMCS system presents to the user a list of active voice communications relevant for this user. The user is able to select and connect to this voice communication.

- 10.5 Use case: Service interworking and service continuation with GSM-R
- 10.5.1 Description
- 10.5.1.1 For migration purposes the service interworking and service continuation between the GSM-R system and FRMCS system for trackside maintenance voice communication including ground user(s) communication needs to be defined.
- 10.5.1.2 Depending on the migration scenario a ground user can be attached to the FRMCS system, to the GSM-R system or both. The trackside worker can be attached either in the GSM-R system or in the FRMCS system. Functional identities are applicable in one system only.
- 10.5.1.3 This use case only applies to end user devices supporting both FRMCS and GSM-R systems.
- 10.5.2 Pre-conditions
- 10.5.2.1 None.
- 10.5.3 Service flows
  - trackside worker attached to GSM-R
- 10.5.3.1 When the trackside worker is attached to the GSM-R system and is initiating voice communication to other trackside worker(s) and ground user(s), the GSM-R system will route the voice communication to other trackside worker(s) and the ground user(s) accordingly.
- 10.5.3.2 The trackside maintenance voice communication is linked together and controlled by the FRMCS system.
- 10.5.3.3 Service interworking between the talker control in the GSM-R system and the FRMCS system is required, but without changing the GSM-R system.
- 10.5.3.4 If the trackside worker or the ground user is located in the FRMCS system the GSM-R system can only route the call if it can be reached by an address or identity understood by the GSM-R system. The role management in FRMCS provides the appropriate address or identity e.g. by provide a mapping of GSM-R identities and FRMCS identities.
- 10.5.3.5 The information from the role management and presence application is used to route the communication and to present the identities of both trackside worker and ground user.
  - trackside worker attached to FRMCS
- 10.5.3.6 When the trackside worker is active in the FRMCS system and is initiating voice communication to other trackside worker(s) and ground user(s), the FRMCS system will route the communication to other trackside worker(s) the ground user(s) accordingly.
- 10.5.3.7 The trackside maintenance voice communication is linked together and controlled by the FRMCS system.
- 10.5.3.8 Service interworking between the talker control in the GSM-R system and the FRMCS system is required, but without changing the GSM-R system.
- 10.5.3.9 The information from the role management and presence application is used to route the communication and to present the identities of both trackside worker and ground user. The role management in FRMCS provides the appropriate address or identity e.g. by provide a mapping of GSM-R identities and FRMCS identities.
  - trackside worker moving from GSM-R to FRMCS

10.5.3.10 When the GSM-R user equipment of the trackside worker is detached from the GSM-R system the FRMCS end user device provides service continuation by setting up the communication via the FRMCS system. An interruption of voice communication is acceptable.

trackside worker moving from FRMCS to GSM-R

10.5.3.11 When the FRMCS user equipment of the trackside worker is detached from the FRMCS system the FRMCS end user device provides service continuation by setting up the communication via the GSM-R system. An interruption of voice communication is acceptable.

10.5.4 Post-conditions

10.5.4.1 None.

10.5.5 Related URS application interfaces

10.5.5.1 None.

10.5.6 HMI related criteria

10.5.6.1 None.

# 11 Shunting voice communication related use cases

## 11.1 Introduction

In this chapter the use cases related to shunting voice communication are defined. The following use cases are defined:

- Initiation of a shunting voice communication
- Invoke / stop supervision of the voice communication
- Inviting-a-user to a shunting voice communication
- Join a shunting voice communication
- Leave a shunting voice communication
- Service interworking and service continuation with GSM-R

## 11.2 Use case: initiation of a shunting voice communication

## 11.2.1 Description

- 11.2.1.1 A user is able to set up a shunting voice communication among shunting team member(s) and between shunting team member(s) and driver, entitled controller(s) and other ground users. The shunting voice communication could involve two or more users.
- 11.2.1.2 This use case is available in both on-network and off-network conditions.

#### 11.2.2 Pre-conditions

- 11.2.2.1 The user is authorised to initiate a shunting voice communication. This is managed by the authorisation of voice communication application.
- 11.2.2.2 The user is authorised to use the shunting voice communication application by the application authorisation of application.

#### 11.2.3 Service flows

Shunting team communication

- 11.2.3.1 The user initiates the shunting voice communication. The QoS class of the communication is managed by the QoS class application. The voice communication requests the QoS class which matches the application category of VOICE (see [QoS]) within the FRMCS system.
- 11.2.3.2 The FRMCS system determines the shunting team members to be included into the communication based on the functional identity of the initiator and the functional identities of the other users provided by the role management and presence application.
- 11.2.3.3 The FRMCS system establishes the shunting voice communication to the shunting team member(s) within a setup time specified as NORMAL (see [QoS]). The information from the role management and presence application is used to present the identities to the shunting team members.
- 11.2.3.4 The arbitration is managed by the arbitration application.
- 11.2.3.5 If configured for shunting voice communication, assured voice communication is automatically invoked.
- 11.2.3.6 The talker control is managed by the multi user talker control application.

11.2.3.7 The communication is recorded by the Voice recording and access to recorded data application.

Shunting team member to driver

- 11.2.3.8 The user initiates a shunting voice communication to a driver by selecting or dialling the driver's functional identity. The QoS class of the communication is managed by the QoS class application. The voice communication requests the QoS class which matches the application category of VOICE (see [QoS]) within the FRMCS system.
- 11.2.3.9 The FRMCS system establishes the shunting voice communication to the driver within a setup time specified as NORMAL (see [QoS]). The information from the role management and presence application is used to present the identities to the shunting team members.
- 11.2.3.10 If configured for shunting voice communication, assured voice communication is automatically invoked.
- 11.2.3.11 The talker control is managed by the multi user talker control application.
- 11.2.3.12 The arbitration is managed by the arbitration application.
- 11.2.3.13 The communication is recorded by the Voice recording and access to recorded data application.

#### 11.2.4 Post-conditions

Shunting team communication

11.2.4.1 The shunting members are connected to each other.

Shunting team member to driver

11.2.4.2 The shunting member is connected to a driver.

#### 11.2.5 Communication attributes

URS Ref.	Туре	Symmetry Up/Down	Distribution	Latency	Bandwidth	Reliability	Setup	Speed
5.6	Bi- directional Voice	50/50	User-to- User/Multi- user	Low	Low	High	Immediate	Low

## 11.2.6 Related URS application interfaces

11.2.6.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application				
8.1	Secured voice communication				
8.11	Inviting-a-user messaging				
5.18	Working alone				
8.2	Multi-user talker control				
8.3	Role management and presence				

8.4	Location services			
8.5	Authorisation of voice communication			
8.7	Authorisation of application			
8.8	QoS Class negotiation			
8.12	Arbitration			
5.19	Voice recording and access			

## 11.2.7 HMI related criteria

11.2.7.1 The user interface of the device used by the shunting team member are adapted to the work environment of trackside users (helmet with microphone, voice interaction).

- 11.3 Use case: invoke / stop supervision of the voice communication
- 11.3.1 Description
- 11.3.1.1 A entitled shunting team member is able to invoke and stop the supervision of an ongoing shunting voice communication by using the assured voice communication application.
- 11.3.1.2 This use case is available in both on-network and off-network conditions.
- 11.3.2 Pre-conditions
- 11.3.2.1 The end user device is part of a shunting voice communication.
- 11.3.3 Service flows

According to service flows from assured voice communication

11.3.4 Post-conditions

According to post-conditions from assured voice communication

- 11.3.5 HMI related criteria
- 11.3.5.1 None.

## 11.4 Use case: Inviting-a-user to a shunting voice communication

## 11.4.1 Description

- 11.4.1.1 A shunting team member can invite a controller, a ground user, a shunting member of the same team or of another team to an existing shunting voice communication.
- 11.4.1.2 This use case is available in both on-network and off-network conditions.
- 11.4.2 Pre-conditions
- 11.4.2.1 The end user device of the inviting user is part of a shunting voice communication.
- 11.4.3 Service flows

According to service flows from inviting-a-user use cases

11.4.4 Post-conditions

According to post-conditions from inviting-a-user use cases

- 11.4.5 HMI related criteria
- 11.4.5.1 None.

## 11.5 Use case: join a shunting voice communication

## 11.5.1 Description

- 11.5.1.1 An entitled user is able to connect to a shunting voice communication without prior invitation from the shunting team members.
- 11.5.1.2 This use case is available in both on-network and off-network conditions.

#### 11.5.2 Pre-conditions

- 11.5.2.1 The user is authorised to connect to a shunting voice communication. This is managed by the authorisation of voice communication application.
- 11.5.2.2 The user is authorised to use the shunting voice communication application by the application authorisation of application.
- 11.5.2.3 The addressed shunting team member or shunting team is involved in an ongoing shunting voice communication.

#### 11.5.3 Service flows

- 11.5.3.1 The user requests to connect to an ongoing shunting voice communication to a shunting team member or a shunting team by selecting or dialling the corresponding functional identity. The QoS class of the communication is managed by the QoS class application. The voice communication requests the QoS class which matches the application category of VOICE (see [QoS]) within the FRMCS system.
- 11.5.3.2 The FRMCS system connects the user requesting to join to the ongoing shunting voice communication. The information from the role management and presence application is used to present the identity to the shunting team members. The initiating user is informed if the voice communication is either user-to-user or multiuser.
- 11.5.3.3 The assured voice communication application is used.
- 11.5.3.4 The talker control is managed by the multi user talker control application.
- 11.5.3.5 The arbitration is managed by the arbitration application.
- 11.5.3.6 The communication is recorded by the Voice recording and access to recorded data application.

#### 11.5.4 Post-conditions

- 11.5.4.1 The user has been connected to the ongoing shunting voice communication.
- 11.5.5 HMI related criteria
- 11.5.5.1 None.

## 11.6 Use case: leave a shunting voice communication

## 11.6.1 Description

- 11.6.1.1 A user is able to leave an ongoing shunting voice communication (e.g. in order to connect to another shunting voice communication).
- 11.6.1.2 This use case is available in both on-network and off-network conditions.

#### 11.6.2 Pre-conditions

- 11.6.2.1 The user is involved in an ongoing shunting voice communication.
- 11.6.2.2 The user is not part of the assured voice communication.

#### 11.6.3 Service flows

- 11.6.3.1 The user requests to leave the ongoing shunting voice communication to the FRMCS system.
- 11.6.3.2 The FRMCS system disconnects the user from the ongoing shunting voice communication. The information from the role management and presence application is used to inform remaining shunting team members about the disconnection.
- 11.6.3.3 If only one user is remaining in the shunting voice communication, the FRMCS system automatically terminates the shunting voice communication.

#### 11.6.4 Post-conditions

- 11.6.4.1 The user is no more involved in the shunting voice communication.
- 11.6.4.2 If applicable, the shunting voice communication is terminated.

#### 11.6.5 HMI related criteria

11.6.5.1 None.

- 11.7 Use case: service interworking and service continuation with GSM-R
- 11.7.1 Description
- 11.7.1.1 For migration purposes the service interworking and service continuation between the GSM-R system and FRMCS system for shunting voice communication needs to be defined.
- 11.7.1.2 Depending on the migration scenario it is considered that shunting team members are part of the FRMCS system. The driver to be involved in shunting voice communication can be attached to either the FRMCS system or to the GSM-R system.
- 11.7.1.3 This use case only applies to end user devices supporting both FRMCS and GSM-R systems.
- 11.7.2 Pre-conditions
- 11.7.2.1 None.
- 11.7.3 Service flows

Driver attached to GSM-R

- 11.7.3.1 When the driver is attached to the GSM-R system and a shunting team member intiates voice communication with the driver, the GSM-R system will route the voice communication accordingly.
- 11.7.3.2 The shunting voice communication is linked together and controlled by the FRMCS system.
- 11.7.3.3 Service interworking between the talker control in the GSM-R system and the FRMCS system is required, but without changing the GSM-R system.
- 11.7.3.4 The information from the role management and presence application is used to route the communication and to present the identities of both trackside worker and ground user.
- 11.7.4 Post-conditions
- 11.7.4.1 None.
- 11.7.5 HMI related criteria
- 11.7.5.1 None.

# 12 Public emergency call related use cases

#### 12.1 Introduction

In this chapter the use cases related to public emergency call are defined. The following use cases are defined:

- Initiation of a public emergency call
- Termination of a public emergency call
- Call back the public emergency call initiator
- Service interworking and service continuation with GSM-R

## 12.2 Use case: Initiation of a public emergency call

## 12.2.1 Description

- 12.2.1.1 If enabled by the FRMCS system, an FRMCS user is be able to report an emergency situation to an officer of the Public Safety Answering Point (PSAP) that will be responsible of bringing assistance or organizing response. The public emergency call can be initiated by using FRMCS system or by using a public network. In the second case, only the end user device is in the scope of this use case description.
- 12.2.1.2 If enabled by the FRMCS system, a user of a public network is be able to report an emergency situation to an officer of the Public Safety Answering Point (PSAP) that will be responsible of bringing assistance or organizing response. The public emergency call can be initiated by using FRMCS system or by using a public network. In the second case, only the end user device is in the scope of this use case description.

#### 12.2.2 Pre-conditions

- 12.2.2.1 The end user device is or is not attached to the FRMCS system.
- 12.2.2.2 The FRMCS system is connected to the Public Safety Answering Point.

#### 12.2.3 Service flows

- 12.2.3.1 The user initiates the public emergency call voice communication by dialling a short code (european 112 or national short code). The QoS class of the communication is managed by the QoS class application. The voice communication requests the QoS class which matches the application category of CRITICAL VOICE (see [QoS]) within the FRMCS system.
- 12.2.3.2 The FRMCS system determines the responsible PSAP based on the location information provided by the locations services application and/or based on the system configuration.
- 12.2.3.3 The FRMCS system establishes the voice communication to the PSAP within a setup time specified as IMMEDIATE (see [QoS]).
- 12.2.3.4 The subscriber identity of the initiating user of a public emergency call voice communication is forwarded to the PSAP officer. If no subscriber identity is available, the device identity of the end user device of the initiating user of a public emergency call voice communication is forwarded to the PSAP officer.
- 12.2.3.5 The voice communication is recorded by the voice recording and access application.

12.2.3.6 The arbitration is managed by the arbitration application.

#### 12.2.4 Post-conditions

12.2.4.1 The PSAP officer has received the public emergency call.

## 12.2.5 Communication attributes

URS Ref.	Туре	Symmetry Up/Down	Distribution	Latency	Bandwidth	Reliability	Setup	Speed
5.7	Bi- directional Voice	50/50	User-to-User	Low	Low	High	Normal	High

## 12.2.6 Related URS application interfaces

12.2.6.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application				
8.3	Role management and presence				
8.4	Location services				
8.8	QoS Class negotiation				
8.12	Arbitration				
5.19	Voice recording and access				
5.20	Data recording and access				

#### 12.2.7 HMI related criteria

- 12.2.7.1 The opportunity for the user to make/dial an accidental public emergency call is reduced to a minimum.
- 12.2.7.2 The end user device is designed in such a way that public emergency calls is possible even if the terminal has a PIN-coded lock of the keypad.
- 12.2.7.3 There is a clear distinction on the HMI display between this function and the railway emergency communication function.

- 12.3 Use case: Termination of a public emergency call
- 12.3.1 Description
- 12.3.1.1 Both the initiating user and the PSAP officer are able to terminate the public emergency call voice communication.
- 12.3.1.2 The PSAP officer is able to put on hold the public emergency communication.
- 12.3.2 Pre-conditions
- 12.3.2.1 The public emergency call is ongoing.
- 12.3.3 Service flows

PSAP officer on hold

- 12.3.3.1 A PSAP officer is able to put the public emergency call on hold.
- 12.3.3.2 After the PSAP officer has put the voice communication on hold, the communication remains in the FRMCS system, and the PSAP officer is able to be part of the communication again.

**Termination** 

- 12.3.3.3 The user and/or the PSAP officer is able to terminate the public emergency call.
- 12.3.3.4 The FRMCS system terminates the voice communication. All involved users are informed.
- 12.3.4 Post-conditions
- 12.3.4.1 The public emergency call voice communication is terminated.
- 12.3.5 HMI related criteria
- 12.3.5.1 None.

- 12.4 Use case: Call back the public emergency call initiator
- 12.4.1 Description
- 12.4.1.1 The PSAP officer is able to establish the communication towards the user who previously initiated the public emergency call (e.g. in the case the initial call was dropped).
- 12.4.2 Pre-conditions
- 12.4.2.1 The public emergency call initiator is reachable via FRMCS system or a public network.
- 12.4.2.2 The FRMCS system is connected to the Public Safety Answering Point.
- 12.4.3 Service flows
- 12.4.3.1 The PSAP officer initiates the voice communication by using the subscriber identity or the device identity of the previous calling user of a public emergency call. The QoS class of the communication is managed by the QoS class application. The voice communication requests the QoS class which matches the application category of CRITICAL VOICE (see [QoS]) within the FRMCS system.
- 12.4.3.2 The FRMCS system establishes the voice communication to the public emergency initiator within a setup time specified as IMMEDIATE (see [QoS]).
- 12.4.3.3 The arbitration is managed by the arbitration application.
- 12.4.3.4 The voice communication is recorded by the voice recording and access application.
- 12.4.4 Post-conditions
- 12.4.4.1 The call-back of the public emergency call is ongoing.
- 12.4.5 HMI related criteria
- 12.4.5.1 None.

1	2	.5	5	l	Ic	26	2	0	2	c	۵	c	Δ	r۱	νi	^	۵	٠i	n	t	וב	W	V	$\cap$	rl	٥i	n	a	1	2	n	Ч	-	26	וב	1	٠i،		Δ			'n	ıť	in	11	2	ti	$\cap$	n	V	۸/i	+I	1	C-	10	21	//	_[	2
	_		,		ノこ	סכ	,	U	а	יס	$\overline{}$	 יס	$\overline{}$		VΙ	U	C		ш	ш	<i>5</i> 1	V	٧V	U	Ιſ	VI.		u		a	l l'	u	- 0	סכ	71	v	יוו	יט	$\overline{}$	·	·	"	H	ш	ıu	а	ш	U	ч і	· v	·V I	ш		$\sim$	4 📞	יוכ	٧ı	_	ı

12.5.1.1 No service interworking and service continuation with GSM-R is required.

# 13 Ground to ground voice communication related use cases

#### 13.1 Introduction

In this chapter the use cases related to ground voice communication between ground users are defined. The following use cases are defined:

- Initiation of ground to ground user voice communication
- Inviting-a-user to a ground voice communication
- Join a ground voice communication
- Leaving a ground voice communication
- Service interworking and service continuation with GSM-R

Ground voice communication serves different purposes in passenger railway operations for example:

- Instructing individual- or groups of staff members regarding unplanned trainor work- schedule adjustments affecting them.
- Managing passenger support activities such as disabled assistance at station and on platforms

# 13.2 Use case: Initiation of ground to ground user(s) voice communication

#### 13.2.1 Description

13.2.1.1 A ground user is able to set up voice communication to one or more other ground user(s).

#### 13.2.2 Pre-conditions

- 13.2.2.1 The ground user is authorised to initiate the voice communication to other ground user(s). This is managed by the authorisation of voice communication application
- 13.2.2.2 The ground user is authorised to use the Ground to ground voice communication application by the application authorisation of application

#### 13.2.3 Service flows

- 13.2.3.1 The user initiates the ground voice communication. The QoS class of the communication is managed by the QoS class application. The voice communication requests the QoS class which matches the application category of VOICE (see [QoS]) within the FRMCS system.
- 13.2.3.2 The FRMCS system determines the staff team members to be included into the communication based on functional identity or the applicable area/station and presence application.
- 13.2.3.3 The FRMCS system establishes the ground voice communication to the staff team member(s) within a setup time specified as NORMAL (see [QoS]). The information from the role management and presence application is used to present the identities to the staff team members.
- 13.2.3.4 The arbitration is managed by the arbitration application.
- 13.2.3.5 If configured for ground voice communication, assured voice communication is automatically invoked.
- 13.2.3.6 The talker control is managed by the multi user talker control application.

13.2.3.7 If configured for ground voice communication the communication is recorded by the Voice recording and access to recorded data application.

#### 13.2.4 Post-conditions

13.2.4.1 The staff team members are connected to each other

#### 13.2.5 Communication attributes

URS Ref.	Туре	Symmetry Up/Down	Distribution	Latency	Bandwidth	Reliability	Setup	Speed
5.8	Bi- directional Voice	50/50	User-to-User	Low	Low	Normal	Normal	High

## 13.2.6 Related URS application interfaces

13.2.6.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application
8.1	Secured voice communication
8.11	Inviting a user messaging
8.2	Multi-user talker control
8.3	Role management and presence
8.4	Location services
8.5	Authorisation of voice communication
8.7	Authorisation of application
8.8	QoS Class negotiation
8.12	Arbitration
5.19	Voice recording and access

#### 13.2.7 HMI related criteria

13.2.7.1 The initiation of a voice communication is achieved with the minimum of interaction (for example a single button press or selection from list). Where selection from a list is determined to be the preferred option, then the list is accessed with the minimum of interaction and be intuitive.

- 13.3 Use case: Inviting-a-user to a ground voice communication
- 13.3.1 Description
- 13.3.1.1 A ground user can invite a controller, a ground user, a staff team member of the same team or of another team to an existing ground voice communication.
- 13.3.2 Pre-conditions
- 13.3.2.1 The end user device of the inviting user is part of a ground voice communication.
- 13.3.3 Service flows

According to service flows from inviting-a-user use cases

13.3.4 Post-conditions

According to post-conditions from inviting-a-user use cases

- 13.3.5 HMI related criteria
- 13.3.5.1 None.

# 13.4 Use case: Join a ground voice communication

## 13.4.1 Description

13.4.1.1 An entitled user is able to connecting to an ongoing ground voice communication without prior invitation from the ground voice communication members.

#### 13.4.2 Pre-conditions

- 13.4.2.1 The user is authorised to connect to a ground voice communication. This is managed by the authorisation of voice communication application.
- 13.4.2.2 The user is authorised to use the ground voice communication application by the application authorisation of application.
- 13.4.2.3 The addressed ground user or staff team is involved in an ongoing ground voice communication.

#### 13.4.3 Service flows

- 13.4.3.1 The user requests to connect to an ongoing ground voice communication to a ground user or a staff team by selecting (or dailing) the corresponding functional identity. The QoS class of the communication is managed by the QoS class application. The voice communication requests the QoS class which matches the application category of VOICE (see [QoS]) within the FRMCS system.
- 13.4.3.2 The FRMCS system connects the user requesting to join to the ongoing ground voice communication. The information from the role management and presence application is used to present the identity to the ground voice communication members. The initiating user is informed if the voice communication is either user-to-user or multi-user.
- 13.4.3.3 The assured voice communication application is used.
- 13.4.3.4 The talker control is managed by the multi user talker control application.
- 13.4.3.5 The arbitration is managed by the arbitration application.
- 13.4.3.6 The communication is recorded by the Voice recording and access to recorded data application.

#### 13.4.4 Post-conditions

13.4.4.1 The user has been connected to the ongoing ground voice communication.

#### 13.4.5 HMI related criteria

13.4.5.1 None.

- 13.5 Use case: leave a ground voice communication
- 13.5.1 Description
- 13.5.1.1 A user is able to leave an ongoing ground voice communication (e.g. in order to connect to another ground voice communication).
- 13.5.2 Pre-conditions
- 13.5.2.1 The user is involved in an ongoing ground voice communication.
- 13.5.2.2 The user is not part of the assured voice communication.
- 13.5.3 Service flows
- 13.5.3.1 The user requests to leave the ongoing ground voice communication to the FRMCS system.
- 13.5.3.2 The FRMCS system disconnects the user from the ongoing ground voice communication. The information from the role management and presence application is used to inform remaining ground voice communication members about the disconnection.
- 13.5.3.3 If only one user is remaining in the ground voice communication, the FRMCS system automatically terminates the ground voice communication.
- 13.5.4 Post-conditions
- 13.5.4.1 The user is no longer involved in the ground voice communication.
- 13.5.4.2 If applicable, the ground voice communication is terminated.
- 13.5.5 HMI related criteria
- 13.5.5.1 None.

1	3	.6	3	U	S	Д	C	а	C	6	٠.	C	: 6	۱	v	i٢	1	2	ir	٦ŧ	ρ	r	۸	ıc	٦r	ŀ	di	n	a	-	a	n	d		9	۵	r	νi	c	9			$\cap$	n	ti	n	П	a	ti	$\cap$	n	١	۸ı	it	h	(	7	9	N	/ _	-F	2
	u		,	$\mathbf{\mathcal{C}}$	o	$\overline{}$	$\mathbf{c}$	ч	.O	-		-	) <b>L</b>	<i>,</i> I	v	10	ハ	,		11		1	٧V		JΙ	-11	M	ш	u	- (	a		u	١.,	יכ	$\overline{}$		VΙ	ľ	,	, 1	יט	U		u		u	а	u	v		l V	/ V	I L		_ \	_	$\boldsymbol{\smile}$	ıν	1		u

13.6.1.1 No service interworking and service interworking with GSM-R is required.

# 14 Automatic Train Control data communication related use cases

#### 14.1 Introduction

In this chapter the use cases related automatic train control (ATC) data communication are described, the following use cases are identified

- Initiation of an Automatic Train Control data communication
- Termination of an Automatic Train Control data communication
- · Service interworking and service continuation with GSM-R

# 14.2 Description

- 14.2.1.1 Automatic Train Control (ATC) is the application which performs some or all of the functions that ensures the safe movement of a train. ATC supervises the train ensuring that speed and movement limits are kept and the train proceeds only when it is allowed to do so.
- 14.2.1.2 Some ATC systems require radio communication to interchange safety relevant data between a train and the corresponding control center or between a train and other trackside elements.
- 14.2.1.3 Some ATC systems may require communication between on-board applications of different trains.
- 14.2.1.4 The users in this case are the Automatic Train Control applications both on-board of the trains and in the control center at the trackside (ground system) or in the trackside elements.
- 14.2.1.5 ATC is considered to be user-to-user communication. In some cases, it could be user-to-multi-user communication.
- 14.2.1.6 Some modes of ATC operation require real time video between a train and the corresponding trackside control center. Please refer to the Critical Real Time Video data communication use cases.
- 14.2.1.7 Some modes of ATC operation require off-net communications. This requirement does not correspond to the mode of operation where communication is established between the application on-board of the train and in the control center at the trackside (ground system). It may correspond to other modes of operation where communication is established between the application on-board of the trains and/or trackside elements.

## 14.3 Use case: Initiation of an Automatic Train Control data communication

#### 14.3.1 Pre-conditions

- 14.3.1.1 The initiating application is authorised to initiate the Automatic Train Control data communication. This is managed by the authorisation of communication application.
- 14.3.1.2 The receiving application is authorised to use the Automatic Train Control data communication. This is managed by the authorisation of communication application.

#### 14.3.2 Service flows

- 14.3.2.1 The initiating application (e.g. on-board of the train or the control center at the track side) initiates the Automatic Train Control data communication to the receiving side (e.g. control center at the trackside or on-board of the train). The QoS profile of the communication is managed by the QoS Profile application. The data communication requests the QoS profile which matches the application category of CRITICAL DATA or VERY CRITICAL DATA (see [QoS]) within the FRMCS system, depending on the application needs.
- 14.3.2.2 The FRMCS system establishes the bearer service required for the data communication within a setup time specified as IMMEDIATE (see [QoS]).
- 14.3.2.3 The arbitration is managed by the arbitration application.
- 14.3.2.4 The communication is recorded by the Data recording and access to recorded data application.

#### 14.3.3 Post-conditions

- 14.3.3.1 The initating application is connected to the receiving application.
- 14.3.3.2 Data can be exchanged between the Automatic Train Control applications.

#### 14.3.4 Communication attributes

URS Ref.	Туре	Symmetry Up/Down	Distribution	Latency	Bandwidth	Reliability	Setup	Speed
5.9	Bi- directional Data	50/50	User-to- User/Multi- user	Low	Low	High	Immediate	High

#### 14.3.5 Related URS application interfaces

14.3.5.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application
5.10	Automatic Train Operation Communication
5.20	Data recording and access to recorded data
5.27	Critical Real time video
6.20	Transfer of data
8.3	Role management
8.4	Location services
8.5	Authorisation of communication
8.7	Authorisation of application
8.8	QoS Class negotiation
8.12	Arbitration

# 14.4 Use case: Termination of an Automatic Train Control data communication

#### 14.4.1 Pre-conditions

14.4.1.1 The Automatic Train Control applications onboard and trackside have a data connection initiated.

#### 14.4.2 Service flows

- 14.4.2.1 The terminating application (e.g. on-board of the train or the control center at the track side) terminates the Automatic Train Control data communication with the receiving side application (e.g. control center at the trackside or on-board of the train).
- 14.4.2.2 The FRMCS system terminates the bearer service required for the data communication.
- 14.4.3 Post-conditions
- 14.4.3.1 The terminating Automatic Train Control data application is disconnected from the receiving application.
- 14.4.4 Related URS application interfaces
- 14.4.4.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.
- 14.4.5 HMI related criteria
- 14.4.5.1 None.

- 14.5 Use case: service interworking and service continuation with GSM-R
- 14.5.1 Description
- 14.5.1.1 For migration purposes the service interworking and service continuation between the GSM-R system and FRMCS system for Automatic Train Control data communication needs to be clear.
- 14.5.1.2 Depending on the migration scenario a control center can be attached to the FRMCS system, to the GSM-R system or both. The on-board ATC application can be attached either in the GSM-R system or in the FRMCS system. Functional identities are applicable in one system only.
- 14.5.1.3 This use case only applies to end user devices supporting both FRMCS and GSM-R systems.
- 14.5.1.4 ATC is supported with a circuit switched (CS) bearer and a packet switched (PS) bearer in the GSM-R system. For service interworking and service continuation only the PS bearer is required.
- 14.5.2 Pre-conditions
- 14.5.2.1 None.
- 14.5.3 Service flows

Initiating ATC application attached to GSM-R

- 14.5.3.1 When the initiating ATC application is attached to the GSM-R system and is initiating data communication to another ATC application, the GSM-R system will route the data communication accordingly.
- 14.5.3.2 If the other ATC application is attached to the FRMCS system the GSM-R system can only route the data communication if the destination can be reached by an address or identity understood by the GSM-R system. The role management in FRMCS provides the appropriate address or identity e.g. by providing a mapping of GSM-R identities and FRMCS identities.
- 14.5.3.3 The information from the role management and presence application is used to route the communication and to present the identities.
  - Initiating ATC application attached to FRMCS
- 14.5.3.4 When the initiating ATC application is attached to the FRMCS system and is initiating data communication to another ATC application, the FRMCS system will route the communication accordingly.
- 14.5.3.5 If the other ATC application is attached to the GSM-R system the FRMCS system can only route the data communication if the destination can be reached by an address or identity understood by the FRMCS system. The role management in FRMCS provides the appropriate address or identity e.g. by providing a mapping of GSM-R identities and FRMCS identities.
- 14.5.3.6 The information from the role management and presence application is used to route the communication and to present the identities.
  - ATC application moving from GSM-R to FRMCS
- 14.5.3.7 When the ATC application is detached from the GSM-R system the FRMCS end user device provides service continuation by setting up the communication via the FRMCS system. An interruption of data communication is acceptable.
  - ATC application moving from FRMCS to GSM-R

- 14.5.3.8 When the ATC application is detached from the FRMCS system the FRMCS end user device provides service continuation by setting up the communication via the GSM-R system. An interruption of data communication is acceptable.
- 14.5.4 Post-conditions
- 14.5.4.1 None.
- 14.5.5 Related URS application interfaces
- 14.5.5.1 None.
- 14.5.6 HMI related criteria
- 14.5.6.1 None.

# 15 Automatic Train Operation data communication related use cases

#### 15.1 Introduction

In this chapter the use cases related automatic train operation (ATO) communication are described, the following use cases are identified

- Initiation of an Automatic Train Operation data communication
- Termination of an Automatic Train Operation data communication
- Service interworking and service continuation with GSM-R

# 15.2 Description

- 15.2.1.1 Automatic Train Operation (ATO) is the application which performs some or all of the functions of automatic speed regulation, accurate stopping, door opening and closing, performance level regulation, and other functions assigned to a train driver or train attendant.
- 15.2.1.2 Some ATO systems require radio communication to interchange performance and/or safety relevant data between a train and the corresponding trackside control center, between trains or between trains and other ATO components.
- 15.2.1.3 The users in this case are the ATO application on-board of the train,in the control center at the trackside (ground system) and in other ATO components.
- 15.2.1.4 ATO is considered to be user-to-user communication. In some cases, it could be user-to-multi-user communication
- 15.2.1.5 Some modes of ATO operation require real time video between a train and the corresponding trackside control center. Please refer to the Critical Real Time Video data communication use cases.
- 15.2.1.6 Some ATO systems may require communication between applications of different components (both in on-network and off-network). This requirement does not correspond to the mode of operation where communication is established between the application on-board of the train and in the control center at the trackside (ground system).

# 15.3 Use case: Initiation of an Automatic Train Operation data communication

#### 15.3.1 Description

- 15.3.1.1 The application is able to initiate data communication.
- 15.3.1.2 This use case is available in both on-network and off-network conditions.

## 15.3.2 Pre-conditions

- 15.3.2.1 The initiating application is authorised to initiate the Automatic Train Operation data communication. This is managed by the authorisation of communication application.
- 15.3.2.2 The receiving application is authorised to use the automatic train operation data communication. This is managed by the authorisation of communication application.

#### 15.3.3 Service flows

- 15.3.3.1 The initiating application (e.g. on-board of the train or the control center at the track side) initiates the Automatic Train Operation data communication to the receiving side (e.g. control center at the trackside or on-board of the train). The QoS profile of the communication is managed by the QoS Profile application. The data communication requests the QoS profile which matches the application category of NON-CRITICAL DATA or CRITICAL DATA (see [QoS]) within the FRMCS system, depending on the application needs (e.g. the grade of automation and related frequency of transmission of segment and journey profiles, etc., which also translate into latency requirements).
- 15.3.3.2 The FRMCS system establishes the bearer service required for the data communication within a setup time specified as IMMEDIATE (see [QoS]).
- 15.3.3.3 The arbitration is managed by the arbitration application.
- 15.3.3.4 The communication is recorded by the Data recording and access to recorded data application .

#### 15.3.4 Post-conditions

- 15.3.4.1 The initating application is connected to the receiving application.
- 15.3.4.2 Data can be exchanged between the Automatic Train Operation applications.

#### 15.3.5 Communication attributes

URS Ref.	Туре	Symmetry Up/Down	Distribution	Latency	Bandwidth	Reliability	Setup	Speed
	Bi- directional Data	50/50	User-to- User/Multi- user	Low	Low	High	Immediate	High
5.10	Uni- directional Data	0/100	User-to- User/Multi- user	Low	Low	High	Immediate	High

#### 15.3.6 Related URS application interfaces

15.3.6.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application
5.10	Automatic Train Control Communication
5.20	Data recording and access to recorded data
5.27	Critical Real time video
6.20	Transfer of data
8.3	Role management
8.4	Location services
8.6	Authorisation of communication

8.7	Authorisation of application
8.8	QoS Class negotiation
8.12	Arbitration
8.9	Safety application key management communication

# 15.4 Use case: Termination of an Automatic Train Operation data communication

### 15.4.1 Description

- 15.4.1.1 The application is able to terminate data communication.
- 15.4.1.2 This use case is available in both on-network and off-network conditions.
- 15.4.2 Pre-conditions
- 15.4.2.1 The Automatic Train Operation applications have a data connection initiated.
- 15.4.3 Service flows
- 15.4.3.1 The terminating application (e.g. on-board of the train or the control center at the track side) terminates the Automatic Train Operation data communication with the receiving side application (e.g. control center at the trackside or on-board of the train).
- 15.4.3.2 The FRMCS system terminates the bearer service required for the data communication.
- 15.4.4 Post-conditions
- 15.4.4.1 The terminating Automatic Train Operation data application is disconnected from the receiving application.
- 15.4.5 Related URS application interfaces
- 15.4.5.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.
- 15.4.6 HMI related criteria
- 15.4.6.1 None.

- 15.5 Use case: service interworking and service continuation with GSM-R
- 15.5.1 Description
- 15.5.1.1 For migration purposes the service interworking and service continuation between the GSM-R system and FRMCS system for Automatic Train Operation data communication needs to be clear.
- 15.5.1.2 Depending on the migration scenario a control center can be attached to the FRMCS system, to the GSM-R system or both. The on-board ATO application can be attached either in the GSM-R system or in the FRMCS system. Functional identities are applicable in one system only.
- 15.5.1.3 This use case only applies to end user devices supporting both FRMCS and GSM-R systems.
- 15.5.1.4 ATO interworking is only supported with a packet switched (PS) bearer in the GSM-R system.
- 15.5.2 Pre-conditions
- 15.5.2.1 None.
- 15.5.3 Service flows
  - Initiating ATO application attached to GSM-R
- 15.5.3.1 When the initiating ATO application is attached to the GSM-R system and is initiating data communication to another ATO application, the GSM-R system will route the data communication accordingly.
- 15.5.3.2 If the other ATO application is attached to the FRMCS system the GSM-R system can only route the data communication if the destination can be reached by an address or identity understood by the GSM-R system. The role management in FRMCS provides the appropriate address or identity e.g. by providing a mapping of GSM-R identities and FRMCS identities.
- 15.5.3.3 The information from the role management and presence application is used to route the communication and to present the identities.
  - Initiating ATO application attached to FRMCS
- 15.5.3.4 When the initiating ATO application is attached to the FRMCS system and is initiating data communication to another ATO application, the FRMCS system will route the communication accordingly.
- 15.5.3.5 If the other ATO application is attached to the GSM-R system the FRMCS system can only route the data communication if the destination can be reached by an address or identity understood by the FRMCS system. The role management in FRMCS provides the appropriate address or identity e.g. by providing a mapping of GSM-R identities and FRMCS identities.
- 15.5.3.6 The information from the role management and presence application is used to route the communication and to present the identities.
  - ATO application moving from GSM-R to FRMCS
- 15.5.3.7 When the ATO application is detached from the GSM-R system the FRMCS end user device provides service continuation by setting up the communication via the FRMCS system. An interruption of data communication is acceptable.
  - ATO application moving from FRMCS to GSM-R

- 15.5.3.8 When the ATO application is detached from the FRMCS system the FRMCS end user device provides service continuation by setting up the communication via the GSM-R system. An interruption of data communication is acceptable.
- 15.5.4 Post-conditions
- 15.5.4.1 None.
- 15.5.5 Related URS application interfaces
- 15.5.5.1 None.
- 15.5.6 HMI related criteria
- 15.5.6.1 None.

# 16 Data communication for Possession Management related use cases

#### 16.1 Introduction

In this chapter the use cases related to possession management data communication are described, the following use cases are identified:

- Initiation of a possession management data communication
- Termination of a possession management data communication
- Service interworking and service continuation with GSM-R

# 16.2 Use case: Initiation of a possession management data communication

# 16.2.1 Description

- 16.2.1.1 The possession management application supports the processes involved in taking possession of an area of railway infrastructure for engineering purposes (for example for track maintenance). This application is intended to allow track side workers to remotely take control of infrastructure elements to perform safe engineering works on those elements. The application provides the communication bearer in a safe and secure way.
- 16.2.1.2 The possession management application is able to initiate data communication to the track possession management system, to request or release the possession of a certain track section.

#### 16.2.2 Pre-conditions

- 16.2.2.1 The initiating application is authorised to initiate the possession management data communication. This is managed by the authorisation of data communication application.
- 16.2.2.2 The receiving system is authorised to use the possession management data communication.

#### 16.2.3 Service flows

- 16.2.3.1 The initiating application (the possession management) initiates the possession management data communication to the receiving side (the possession management system). The assured data communication application is used for the possession management data communication. The data communication requests the QoS class which matches the application category of CRITICAL DATA (see [QoS]) within the FRMCS system.
- 16.2.3.2 The arbitration is managed by the arbitration application.
- 16.2.3.3 The communication is recorded by the Data recording and access to recorded data application.

#### 16.2.4 Post-conditions

- 16.2.4.1 The initating application is connected to the receiving application.
- 16.2.4.2 Data can be exchanged between the possession management application and the possession management system.

#### 16.2.5 Communication attributes

URS Ref.	Туре	Symmetry Up/Down	Distribution	Latency	Bandwidth	Reliability	Setup	Speed
5.11	Bi- directional Data	50/50	User-to-User	Normal	Low	High	Normal	Normal

# 16.2.7 Related URS application interfaces

16.2.7.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application
5.20	Data recording and access
6.20	Transfer of data
8.3	Role management and presence
8.4	Location services
8.6	Authorisation of data communication
8.7	Authorisation of application
8.8	QoS Class negotiation
8.12	Arbitration
8.10	Secure data communication

#### 16.2.8 HMI related criteria

16.2.8.1 The initation of the communication does not require any human interaction. This is automatically performed when the application is started.

- 16.3 Use case: Termination of a possession management data communication
- 16.3.1 Description
- 16.3.1.1 The possession management application is able to terminate possession management data communication.
- 16.3.2 Pre-conditions
- 16.3.2.1 The possession management communication is ongoing.
- 16.3.3 Service flows
- 16.3.3.1 The possession management application terminates the possession management data communication with the possession management system.
- 16.3.4 Post-conditions
- 16.3.4.1 The communication between the possession management application and the possession management system is disconnected.
- 16.3.5 HMI related criteria
- 16.3.5.1 The termination of the communication does not require any human interaction.

40	4	1.1	and the second second second	1.7		4.5	
16.	/	TICA CACA.	CARVICA INTAI	Working and	CARVICA	CONTINUISTION	with GSM-R
10.	_	USE GASE.	SCIVICE IIILCI	working and		Continuation	WILLI GOIVI-I L

16.4.1.1 No service interworking and service continuation with GSM-R is required.

# 17 Trackside Maintenance Warning System communication related use cases

#### 17.1 Introduction

In this chapter the use cases related to Trackside Maintenance Warning System communication are described, the following use cases are identified:

- Initiation of a Trackside Maintenance Warning System communication
- Termination of a Trackside Maintenance Warning System communication
- · Service interworking and service continuation with GSM-R

# 17.2 Description

- 17.2.1.1 Generally trackside maintenance occurs during daily train operation. For safety reasons trackside maintenance staff need to be informed about approaching trains entering the area of maintenance. Thus the intention of a trackside warning system is to inform trackside staff about the approaching train.
- 17.2.1.2 Trackside warning system consist of several specific sensors and warning entites. The sensors are responsible to detect the approaching train and warning entities indicate trackside workers about the approaching train. A warning entity provide this indication in form of visual signal e.g. flashing light and an audio signal e.g. tone. In addition, the local maintenance staff will receive the train approaching indication on its FRMCS Equipment. When the train has left the track section, the warning system withdraw the indication.
- 17.2.1.3 Sensors and warning entities constitutes the warning system that requires continues communication between the sensors and the warning entities. In addition, it encompasses the communication among the warning system and the FRMCS Equipment of the local maintenance staff.
- 17.2.1.4 Due to the fact that such a warning system deployment is temporary and not always fixed network communication facilities are available at the track, FRMCS System provides necessary mobile communication services for the trackside warning system.
- 17.2.1.5 The trackside maintenance warning application is able to initiate data communication to the application on the end user devices of trackside maintenance workers and/or trackside maintenance warning system in the applicable area/track.
- 17.2.1.6 When a train/track approaches an area where the trackside workers are working, an automatic warning information is send to the application on the end user devices of the trackside maintenance workers and/or the trackside maintenance warning system. The detection of the approaching train is not managed by the FRMCS system.
- 17.3 Use case: Initiation of a trackside maintenance warning system communication

#### 17.3.1 Pre-conditions

17.3.1.1 The initiating application is authorised to initiate the trackside maintenance warning system communication. This is managed by the authorisation of data communication application.

- 17.3.1.2 The receiving application is authorised to use the trackside maintenance warning system communication.
- 17.3.1.3 This use case is available in both on-network and off-network conditions.

#### 17.3.2 Service flows

- 17.3.2.1 The initiating application (the trackside maintenance warning system) initiates the trackside maintenance warning system communication to the receiving side (the trackside workers in the applicable area). The secure data communication application is used for the trackside maintenance warming system communication. The communication requests the QoS class which matches the application category of CRITICAL DATA (see [QoS]) within the FRMCS system.
- 17.3.2.2 The arbitration is managed by the arbitration application.
- 17.3.2.3 The communication is recorded by the Data recording application.

#### 17.3.3 Post-conditions

- 17.3.3.1 The initating application is connected to the receiving application.
- 17.3.3.2 Data can be exchanged between the trackside maintenance warning system application and the application on the end user devices of the trackside workers.

#### 17.3.4 Communication attributes

URS Ref.	Туре	Symmetry Up/Down	Distribution	Latency	Bandwidth	Reliability	Setup	Speed
5.12	Bi- directional Data	20/80	User-to- User/Multi- user	Low	Low	High	Immediate	Normal

### 17.3.5 Related URS application interfaces

17.3.5.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application			
5.20	Data recording and access			
6.13	Real time video			
6.20	Transfer of data			
8.3	Role management and presence			
8.4	Location services			
8.6	Authorisation of data communication			
8.7	Authorisation of application			
8.8	QoS Class negotiation			
8.12	Arbitration			
8.10	Secure data communication			

# 17.3.6 HMI related criteria

17.3.6.1 The initation of the communication does not require any human interaction. This is automatically performed when the application is started.

# 17.4 Use case: Termination of a trackside maintenance warning system communication

# 17.4.1 Description

- 17.4.1.1 The trackside maintenance warning application is able to terminate data communication.
- 17.4.1.2 This use case is available in both on-network and off-network conditions.

#### 17.4.2 Pre-conditions

17.4.2.1 The trackside maintenance warning system communication is ongoing.

#### 17.4.3 Service flows

17.4.3.1 The trackside maintenance warning application terminates the trackside maintenance warning system communication with the receiving trackside worker applications.

#### 17.4.4 Post-conditions

17.4.4.1 The communication between the trackside maintenance warning application and the receiving trackside worker applications is disconnected.

#### 17.4.5 HMI related criteria

- 17.4.5.1 The beginning and end of the approaching train alarm is obvious for the trackside maintenance workers.
- 17.4.5.2 The status of the communications link with the trackside maintenance warning system is easy to determine by trackside workers when it becomes inactive.

4.0		_		and the second second	and the second s	the second secon	and the second second second	111 OOLA D
1	7.5	S 1	lled caed.	CARVICA	ntarwarking	and carvica	continuation	with GSM-R
	/	, (	USE CASE.	30171001	TILET WOLKING	and service	continuation	WILLI GOIVITI

17.5.1.1 No service interworking and service continuation with GSM-R is required.

# 18 Remote control of engines communication related use cases

#### 18.1 Introduction

In this chapter the use cases related to remote control of engines communication are described, the following use cases are identified

- Initiation of a Remote control of engines communication
- Termination of a Remote control of engines communication
- Service interworking and service continuation with GSM-R

# 18.2 Description

- 18.2.1.1 It is possible to set up secure data communication between the on-board control system of the engine and user with a remote control device. The users in this case are applications both onboard and on the remote control device.
- 18.3 Use case: Initiation of a remote control of engines communication

#### 18.3.1 Pre-conditions

- 18.3.1.1 The initiating application is authorised to initiate remote control of engines communication. This is managed by the authorisation of data communication application.
- 18.3.1.2 The receiving application is authorised to use the remote control of engines communication.
- 18.3.1.3 This use case is available in both on-network and off-network conditions.

#### 18.3.2 Service flows

- 18.3.2.1 The initiating application initiates the remote control of engines communication to the receiving side. The secure data communication application is used for the remote control of engines communication. The communication requests the QoS class which matches the application category of CRITICAL DATA (see [QoS]) within the FRMCS system.
- 18.3.2.2 The arbitration is managed by the arbitration application.
- 18.3.2.3 The communication is recorded by the Data recording application.
- 18.3.2.4 The remote control of engines communication is available in both on-network and off-network situation.

#### 18.3.3 Post-conditions

- 18.3.3.1 The initating application is connected to the receiving application.
- 18.3.3.2 Data can be exchanged between the remote control of engines applications.

#### 18.3.4 Communication attributes

URS Ref.	Туре	Symmetry Up/Down	Distribution	Latency	Bandwidth	Reliability	Setup	Speed

5.13	Bi- directional 50/50 Data	User-to-User	Low	Low	High	Normal	Normal	
------	----------------------------------	--------------	-----	-----	------	--------	--------	--

# 18.3.5 Related URS application interfaces

18.3.5.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application			
8.3	Role management and presence			
8.4	Location services			
8.6	Authorisation of data communication			
8.7	Authorisation of application			
8.8	QoS Class negotiation			
8.12	Arbitration			
5.20	Data recording and access			
6.20	Transfer of data			
8.10	Secure data communication			

#### 18.3.6 HMI related criteria

18.3.6.1 The initation of the communication does not require any human interaction. This is automatically performed when the application is started.

- 18.4 Use case: Termination of a remote control of engines communication
- 18.4.1 Description
- 18.4.1.1 The remote control of engines application is able to terminate data communication.
- 18.4.2 Pre-conditions
- 18.4.2.1 The remote control of engines applications have a data communication initiated.
- 18.4.2.2 Both applications are authorised to use the remote control of engines data communication.
- 18.4.2.3 This use case is available in both on-network and off-network conditions.
- 18.4.3 Service flows
- 18.4.3.1 The terminating application terminates the remote control of engines communication with the receiving side application.
- 18.4.4 Post-conditions
- 18.4.4.1 The terminating remote control of engines application is disconnected from the receiving application.
- 18.4.4.2 Data cannot be exchanged between the remote control of engines applications.
- 18.4.5 Related URS application interfaces
- 18.4.5.1 No criteria related to this use case: no human interaction is expected to manage the data communication.
- 18.4.6 HMI related criteria
- 18.4.6.1 None.

4.0		1.1	and the second second second	1.0		and the second second	111 OOM D
18.	h	TICA CACA:	CARVICA INTAR	Working and	CARVICA	continuation	with GSM-R
10.	J	USE Case.	SELVICE HILEI	WUINIIU allu	30  VIUC	Continuation	WILLI GOIVITI

18.5.1.1 No service interworking and service continuation with GSM-R is required.

# 19 Monitoring and control of critical infrastructure related use cases

#### 19.1 Introduction

In this chapter the use cases related to Monitoring and control of critical infrastructure communication are described, the following use cases are identified

- Initiation of Monitoring and control of critical infrastructure communication
- Termination of a Monitoring and control of critical infrastructure
- Service interworking and service continuation with GSM-R

# 19.2 Use case: Initiation of a Monitoring and control of critical infrastructure communication

# 19.2.1 Description

19.2.1.1 It is possible to set up data communication between infrastructure systems and a ground based or train based system in order to monitor or control critical infrastructure such as train detection, signals and indicators, movable infrastructure, level crossing elements, including barrier controls vehicle sensors, lighting controls and alarms.

#### 19.2.2 Pre-conditions

- 19.2.2.1 The initiating application is authorised to initiate Monitoring and control of critical infrastructure communication. This is managed by the authorisation of data communication application.
- 19.2.2.2 The receiving application is authorised to use the Monitoring and control of critical infrastructure communication.

#### 19.2.3 Service flows

- 19.2.3.1 The initiating application initiates the Monitoring and control of critical infrastructure communication to the receiving side. The assured data communication application is used for the Monitoring and control of critical infrastructure communication. The communication requests the QoS class which matches the application category of CRITICAL DATA (see [QoS]) within the FRMCS system.
- 19.2.3.2 The FRMCS system establishes the bearer service required for the data communication within a setup time specified as NORMAL (see [QoS]).
- 19.2.3.3 The arbitration is managed by the arbitration application.
- 19.2.3.4 The communication is recorded by the Data recording and access to recorded data application.

#### 19.2.4 Post-conditions

- 19.2.4.1 The initating application is connected to the receiving application.
- 19.2.4.2 Data can be exchanged between the Monitoring and control of critical infrastructure applications.

#### 19.2.5 Communication attributes

URS Ref.	Туре	Symmetry Up/Down	Distribution	Latency	Bandwidth	Reliability	Setup	Speed
5.14	Bi- directional Data	50/50	User-to-User	Low	Low	High	Normal	Normal

## 19.2.6 Related URS application interfaces

19.2.6.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application			
8.3	Role management and presence			
8.4	Location services			
8.6	Authorisation of data communication			
8.7	Authorisation of application			
8.8	QoS Class negotiation			
8.12	Arbitration			
8.10	Secure data communication			
5.20	Data recording and access			
6.20	Transfer of data			

#### 19.2.7 HMI related criteria

19.2.7.1 No criteria related to this use case: no human interaction is expected to manage the data communication.

# 19.3 Use case: Termination of a Monitoring and control of critical infrastructure communication

# 19.3.1 Description

19.3.1.1 It is possible to terminate data communication between infrastructure systems and a ground based or train based system in order to monitor or control critical infrastructure.

#### 19.3.2 Pre-conditions

- 19.3.2.1 The Monitoring and control of critical infrastructure applications have a data communication initiated.
- 19.3.2.2 Both applications are authorised to use the Monitoring and control of critical infrastructure communication.

#### 19.3.3 Service flows

19.3.3.1 The terminating application terminates the Monitoring and control of critical infrastructure communication with the receiving side application.

#### 19.3.4 Post-conditions

- 19.3.4.1 The terminating Monitoring and control of critical infrastructure application is disconnected from the receiving application.
- 19.3.4.2 Data cannot be exchanged between the Monitoring and control of critical infrastructure applications.

#### 19.3.5 HMI related criteria

19.3.5.1 No criteria related to this use case: no human interaction is expected to manage the data communication.

- 19.4 Use case: service interworking and service continuation with GSM-R
- 19.4.1 Description
- 19.4.1.1 For migration purposes the service interworking and service continuation between the GSM-R system and FRMCS system for Monitoring and control of critical infrastructure datacommunication needs to be clear.
- 19.4.1.2 This use case only applies to end user devices supporting both FRMCS and GSM-R systems.
- 19.4.1.3 For service interworking and service continuation only the packet switched (PS) bearer service is considered.
- 19.4.2 Pre-conditions
- 19.4.2.1 None.
- 19.4.3 Service flows
  - Initiating Monitoring and control of critical infrastructure communication application attached to GSM-R
- 19.4.3.1 When the initiating Monitoring and control of critical infrastructure communication application is attached to the GSM-R system and is initiating data communication to another application, the GSM-R system will route the data communication accordingly.
- 19.4.3.2 If the other application is attached to the FRMCS system the GSM-R system can only route the data communication if the destination can be reached by an address or identity understood by the GSM-R system. The role management in FRMCS provides the appropriate address or identity e.g. by providing a mapping of GSM-R identities and FRMCS identities.
- 19.4.3.3 The information from the role management and presence application is used to route the communication and to present the identities.
  - Initiating Monitoring and control of critical infrastructure communication application attached to FRMCS
- 19.4.3.4 When the initiating application is attached to the FRMCS system and is initiating data communication to another Monitoring and control of critical infrastructure application, the FRMCS system will route the communication accordingly.
- 19.4.3.5 If the other application is attached to the GSM-R system the FRMCS system can only route the data communication if the destination can be reached by an address or identity understood by the FRMCS system. The role management in FRMCS provides the appropriate address or identity e.g. by providing a mapping of GSM-R identities and FRMCS identities.
- 19.4.3.6 The information from the role management and presence application is used to route the communication and to present the identities.
  - Monitoring and control of critical infrastructure application moving from GSM-R to FRMCS
- 19.4.3.7 When the Monitoring and control of critical infrastructure application is detached from the GSM-R system the FRMCS end user device provides service continuation by setting up the communication via the FRMCS system. An interruption of data communication is acceptable.
  - Monitoring and control of critical infrastructure application moving from FRMCS to GSM-R

- 19.4.3.8 When the Monitoring and control of critical infrastructure application is detached from the FRMCS system the FRMCS end user device provides service continuation by setting up the communication via the GSM-R system. An interruption of data communication is acceptable.
- 19.4.4 Post-conditions
- 19.4.4.1 None.
- 19.4.5 Related URS application interfaces
- 19.4.5.1 None.
- 19.4.6 HMI related criteria
- 19.4.6.1 None.

# 20 Railway emergency communication related use cases

# 20.1 Introduction

In this chapter the use cases related to Railway emergency communication are defined. The following use cases are defined:

- Initiation of the Railway emergency alert
- New entry to the Railway emergency alert
- Changing of the Railway emergency alert
- · Leaving of the Railway emergency alert
- Termination of the Railway emergency alert;
- Initiation of railway emergency voice communication
- Termination of railway emergency voice communication
- Initiation of Data communication during Railway Emergency Alert
- Service interworking and service continuation with GSM-R
- Interface to train borne recorder.

#### 20.2 General overview

Railway Emergency Communication serves two main purposes in railway operation

- 1. Alert drivers or other railway staff about an emergency situation. Receiving such alert will result in immediate actions to be taken by the recipients. These actions are defined by operational rules, e.g. a driver has to slow down train speed to 40km/h, drive on sight, etc.
- 2. Based on operational rules, additional information about the emergency situation can be exchanged using voice and/or data communication.

While the alert needs to be setup very fast, the information part that may follow is less time critical and not always required. The Railway Emergency Communication consists of:

- a) A mandatory alert phase indicating the emergency situation;
- b) An optional voice and/or data communication phase depending on operational situation and / or operational rules.

The alert receives priority handling which is linked to the application category within the FRMCS system (see [QoS]).

When an railway emergency alert is triggered by a user, the FRMCS system determines which other FRMCS users receives an alert, depending on following conditions:

- Location, accuracy of the location, track, functional identity, direction of movement, speed of the initiator
- Location, accuracy of the location, track, functional identity, direction of movement, speed of other users which are concerned of the emergency situation
- Any additional information provided by the initiator

In the alert condition, only users who may be involved in the emergency situation receive an alert. Figure x-x outlines this principle.

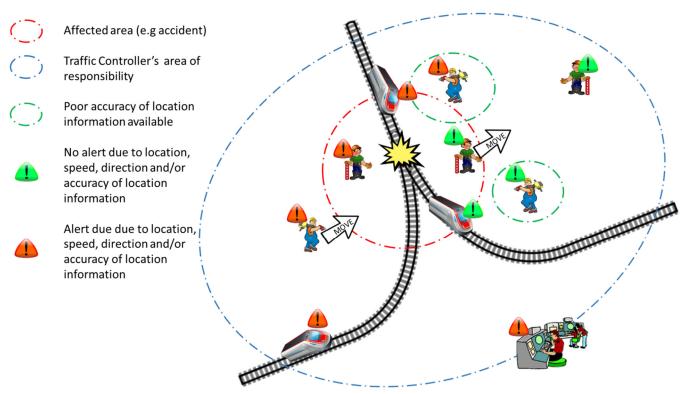


Figure x-x

Independently of any ongoing interactions between the user and the end user device, the railway emergency alert has to be continuously indicated to the user up to the condition when the railway emergency situation is over (alert is terminated).

While an alert is active, the FRMCS system continuously check's

- if additional users do match to the conditions of the Railway emergency alert. The user entered the emergency area/location/etc will receive the alert and
- If a user does not fulfil the conditions to be alerted, because the user has moved away from the emergency situation. In this case, the alert will be withdrawn from this user.

A controller is be able to change the conditions while an alert is active.

While an alert is active on an end user device, the user is still be able to establish and/or receive other types of communications. If a railway emergency voice communication is established by the user of an ongoing alert, any other ongoing voice communications are terminated.

# 20.3 Use case: Initiation of the Railway emergency alert

# 20.3.1 Description

20.3.1.1 A user is able to initiate the Railway emergency alert to users that are informed about the emergency situation, e.g. that fulfil the conditions of the emergency situation. The user can be e.g. a mobile user, a driver, an external system, a controller, maintenance staff or a member of a shunting team.

#### 20.3.2 Pre-conditions

20.3.2.1 The user is authorised to initiate the Railway emergency alert. This is managed by the application authorisation of application.

#### 20.3.3 Service flows

20.3.3.1 In any service flow, a mobile user, e.g. a driver, maintenance staff or a member of a shunting team, is not able to leave or terminate the Railway emergency alert.

Controller initiated

- 20.3.3.2 The controller provides the FRMCS system with conditions (to e.g. train number/area/track section/station) selecting the appropriate recepients of the Railway emergency alert. The criteria can be pre-configured for comfortable selection by the controller. The controller may need to confirm the selection on his end user device.
- 20.3.3.3 The FRMCS system will determine, based on the conditions, which users receives the Railway emergency alert.
- 20.3.3.4 The FRMCS system alerts the selected users within a setup time specified as IMMEDIATE (see [QoS]). The alert notification can include additional information (e.g. text, voice prompts) which is forwarded to and presented on the end user device to the user.
- 20.3.3.5 The priority of the Railway emergency alert is managed by the arbitration application. The QoS class of the communication is managed by the QoS class application. The alert has the QoS class which matches the application category of CRITICAL DATA (see [QoS]).
- 20.3.3.6 In the case that a mobile user is already active in another Railway emergency alert, the new alert is not send by the FRMCS system to the end user device. The waiting alert is sent as soon as the user is no longer involved in an ongoing Railway emergency alert.
- 20.3.3.7 The controller(s) are informed which users are alerted.
- 20.3.3.8 The end user device of a controller shows multiple alerts when active.
- 20.3.3.9 The communication is recorded by the Data recording and access to recorded data application.

External system initiated

- 20.3.3.10 The external system provides the FRMCS system with conditions (to e.g. train number/area/track section/station) selecting the appropriate recepients of the Railway emergency alert.
- 20.3.3.11 The FRMCS system will determine, based on the conditions, which users receive the Railway emergency alert.
- 20.3.3.12 The FRMCS system alerts the selected users within a setup time specified as IMMEDIATE (see [QoS]). The alert notification can include additional information

- (e.g. text, voice prompts) which is forwarded to and presented on the end user device to the user.
- 20.3.3.13 The priority of the Railway emergency alert is managed by the arbitration application. The QoS class of the communication is managed by the QoS class application. The alert has the QoS class which matches the application category of CRITICAL DATA (see [QoS]).
- 20.3.3.14 In the case that a mobile user is already active in another Railway emergency alert, the new alert is not send by the FRMCS system to the end user device. The waiting alert is sent as soon as the user is no longer involved in an ongoing Railway emergency alert.
- 20.3.3.15 The controller(s) are informed which users are alerted and which external system initiated the alert.
- 20.3.3.16 The end user device of a controller shows multiple alerts when active.
- 20.3.3.17 The communication is recorded by the Data recording and access to recorded data application.

Mobile user initaited

- 20.3.3.18 A mobile user, like a driver, maintenance staff member or a member of a shunting team, presses the Railway emergency button (see also 20.3.7.1).
- 20.3.3.19 The end user equipment requests the alert communication to the FRMCS system.
- 20.3.3.20 The FRMCS system will determine the users to be included in the Railway emergency alert. This is based on the location information of the initiator and certain criteria (e.g. functional identity, track area, accuracy of the location, maximum track speed, station, shunting yard, location information of users).
- 20.3.3.21 The FRMCS system alerts the selected users within a setup time specified as IMMEDIATE (see [QoS]). The alert notification can include additional information (e.g. text, voice prompts) which is forwarded to and presented on the end user device to the user.
- 20.3.3.22 The priority of the Railway emergency alert is managed by the arbitration application. The QoS class of the communication is managed by the QoS class application. The alert has the QoS class which matches the application category of CRITICAL DATA (see [QoS]).
- 20.3.3.23 In the case that a mobile user is already active in another Railway emergency alert, the new alert is not send by the FRMCS system to the end user device. The waiting alert is sent as soon as the user is no longer involved in an ongoing Railway emergency alert.
- 20.3.3.24 The controller(s) are informed which users are alerted, including which user initiated the alert.
- 20.3.3.25 The end user device of a controller shows multiple alerts when active.
- 20.3.3.26 The communication is recorded by the Data recording and access to recorded data application.
- 20.3.4 Post-conditions
- 20.3.4.1 The applicable receipients are alerted.
- 20.3.5 Communication attributes

URS Ref.	Туре	Symmetry Up/Down	Distribution	Latency	Bandwidth	Reliability	Setup	Speed
	Bi- directional Voice	50/50	User-to- User/Multi- user	Low	Low	High	Immediate	High
5.15	Bi- directional data	50/50	User-to- User/Multi- user	Low	Low	High	Immediate	High

# 20.3.6 Related URS application interfaces

20.3.6.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application
8.3	Role management and presence
8.4	Location services
8.5	Authorisation of voice communication
8.6	Authorisation of data communication
8.7	Authorisation of application
8.8	QoS Class negotiation
8.12	Arbitration
5.20	Data recording and access to recorded data
6.20	Transfer of data

#### 20.3.7 HMI related criteria

- 20.3.7.1 The initiation of a railway emergency alert is achieved with the minimum of interaction (for example, a single button press or selection from a list). Where selection from a list is determined to be the preferred option, then the list is accessed with the minimum of interaction and be intuitive.
- 20.3.7.2 On the end user device the initiation of a railway emergency alert is protected against unintentional use.
- 20.3.7.3 Independently of any actions between the user and the end user device, the railway emergency alert is always and continuously presented to the user up to the point when the railway emergency alert is terminated.
- 20.3.7.4 While an alert is active on an end user device, the user is still able to use other applications.
- 20.3.7.5 A mobile user, e.g. a driver, maintenance staff or a member of a shunting team, is not able to leave or terminate the Railway emergency alert.

# 20.4 Use case: New entry to the Railway emergency alert

# 20.4.1 Description

20.4.1.1 The FRMCS system continuously check's if additional users meet the conditions of the Railway emergency alert. The user can be e.g. a mobile user, a driver, maintenance staff, a member of a shunting team or a controller. The additional users receive the Railway emergency alert.

#### 20.4.2 Pre-conditions

- 20.4.2.1 The user is authorised to receive the Railway emergency alert. This is managed by the application authorisation of application.
- 20.4.2.2 There is an onging Railway emergency alert.

# 20.4.3 Service flows

- 20.4.3.1 The FRMCS system continuously check's if additional users meet the conditions of the Railway emergency alert. The user can be e.g. a mobile user, a driver, maintenance staff, a member of a shunting team or a controller. The additional users receive the Railway emergency alert.
- 20.4.3.2 The FRMCS system alerts the selected users within a setup time specified as IMMEDIATE (see [QoS]). The alert notification can include additional information (e.g. text, voice prompts) which is forwarded to and presented on the end user device to the user.
- 20.4.3.3 The priority of the Railway emergency alert is managed by the arbitration application. The QoS class of the communication is managed by the QoS class application. The alert has the QoS class which matches the application category of CRITICAL DATA (see [QoS]).
- 20.4.3.4 In the case of an ongoing Railway emergency voice communication, the additional user is added to the ongoing voice communication.
- 20.4.3.5 In the case that a mobile user is already active in another Railway emergency alert, the new alert is not send by the FRMCS system to the end user device. The waiting alert is sent as soon as the user is no longer involved in an ongoing Railway emergency alert.
- 20.4.3.6 A mobile user, e.g. a driver, maintenance staff or a member of a shunting team, is not able to leave or terminate the Railway emergency alert.
- 20.4.3.7 The controller(s) are informed which users are additionally alerted.
- 20.4.3.8 The end user device of a controller shows multiple alerts when active.
- 20.4.3.9 The communication is recorded by the Data recording and access to recorded data application.

#### 20.4.4 Post-conditions

20.4.4.1 The additional receipients are alerted.

# 20.4.5 Related URS application interfaces

20.4.5.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application
5.20	Data recording and access to recorded data

6.20	Transfer of data
8.3	Role management and presence
8.4	Location services
8.5	Authorisation of voice communication
8.6	Authorisation of data communication
8.7	Authorisation of application
8.8	QoS Class negotiation
8.12	Arbitration

#### 20.4.6 HMI related criteria

- 20.4.6.1 Independently of any actions between the user and the end user device, the railway emergency alert is always and continuously presented to the user up to the point when the railway emergency alert is terminated.
- 20.4.6.2 While an alert is active on an end user device, the user is still able to use other applications.
- 20.4.6.3 A mobile user, e.g. a driver ,maintenance staff or a member of a shunting team, is not able to leave or terminate the Railway emergency alert.

# 20.5 Use case: Changing of the Railway emergency alert

## 20.5.1 Description

20.5.1.1 The controller or an external system is able to provide the FRMCS system with a changed conditions selecting the appropriate recepients of the Railway emergency alert. The change may result in an expansion or a reduction of users that is informed about the emergency situation.

#### 20.5.2 Pre-conditions

- 20.5.2.1 The user is authorised to initiate the Railway emergency alert. This is managed by the application authorisation of application.
- 20.5.2.2 There is an onging Railway emergency alert.

## 20.5.3 Service flows

- 20.5.3.1 The controller or an external system is able to provide the FRMCS system with a changed conditions selecting the appropriate recepients of the Railway emergency alert. The change of the selection could imply the merge of multiple ongoing Railway emergency alerts.
- 20.5.3.2 The FRMCS system continuously check's if users still meet the conditions of the Railway emergency alert. The user can be e.g. a mobile user, a driver, maintenance staff, a member of a shunting team or a controller.
- 20.5.3.3 The FRMCS system sends the Railway emergency alert to all additional selected users within a setup time specified as IMMEDIATE (see [QoS]). The alert notification can include additional information (e.g. text, voice prompts) which is forwarded to and presented on the end user device to the user.

- 20.5.3.4 The priority of the Railway emergency alert is managed by the arbitration application. The QoS class of the communication is managed by the QoS class application. The alert has the QoS class which matches the application category of CRITICAL DATA (see [QoS]).
- 20.5.3.5 In the case of an ongoing Railway emergency voice communication, the additional user is added to the ongoing voice communication.
- 20.5.3.6 In the case of an ongoing Data communication during Railway emergency alert, the additional user is added to the ongoing Data communication during Railway emergency alert.
- 20.5.3.7 In the case that a mobile user is already active in another Railway emergency alert, the new alert is not send by the FRMCS system to the end user device. The waiting alert is sent as soon as the user is no longer involved in an ongoing Railway emergency alert.
- 20.5.3.8 A mobile user, e.g. a driver, maintenance staff or a member of a shunting team, is not able to leave or terminate the Railway emergency alert.
- 20.5.3.9 The FRMCS system informs the users for whom the Railway emergency alert is no longer applicable and terminates the alert of these users. The termination notification of the alert can include additional information (e.g. text, voice prompts) which is presented on the end user device to the user.
- 20.5.3.10 The priority of the Railway emergency alert is managed by the arbitration application. The QoS class of the communication is managed by the QoS class application. The alert has the QoS class which matches the application category of CRITICAL DATA (see [QoS]).
- 20.5.3.11 In the case a user no longer meets the conditions of the Railway emergency alert and if there is an ongoing Railway emergency voice communication, the user will remain in the ongoing Railway emergency voice communication.
- 20.5.3.12 The controller is informed which users are still part of the Railway emergency alert. Users who have left the railway emergency alert are separatly indicated to the controller.
- 20.5.3.13 The end user device of a controller shows multiple alerts when active.
- 20.5.3.14 The communication is recorded by the Data recording and access to recorded data application.
- 20.5.4 Post-conditions
- 20.5.4.1 The appropriate receipients are still alerted, while non-appropriate recipients are not alerted anymore.
- 20.5.5 Related URS application interfaces
- 20.5.5.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application
5.20	Data recording and access to recorded data
6.20	Transfer of data
8.3	Role management and presence
8.4	Location services

8.5	Authorisation of voice communication
8.6	Authorisation of data communication
8.7	Authorisation of application
8.8	QoS Class negotiation
8.12	Arbitration

## 20.5.6 HMI related criteria

- 20.5.6.1 Independently of any actions between the user and the end user device, the railway emergency alert is always and continuously presented to the user up to the point when the railway emergency alert is terminated.
- 20.5.6.2 While an alert is active on an end user device, the user is still able to use other applications.
- 20.5.6.3 If the railway emergency alert is terminated at the end user device, this is explicitly shown to the user.
- 20.5.6.4 A mobile user, e.g. a driver, maintenance staff or a member of a shunting team, is not able to leave or terminate the Railway emergency alert.

# 20.6 Use case: Leaving of the Railway emergency alert

# 20.6.1 Description

20.6.1.1 The FRMCS system continuously check's if users no longer meet the conditions of the Railway emergency alert and therefore the FRMCS system terminates the alert at the end user device of the left users. The user can be e.g. a mobile user, a driver, maintenance staff, a member of a shunting team or a controller.

#### 20.6.2 Pre-conditions

- 20.6.2.1 The user is authorised to receive the Railway emergency alert. This is managed by the application authorisation of application.
- 20.6.2.2 There is an onging Railway emergency alert.

#### 20.6.3 Service flows

Mobile user

- 20.6.3.1 The FRMCS system continuously check's if users no longer meet the conditions of the Railway emergency alert. The user can be e.g. a mobile user, a driver, maintenance staff, a member of a shunting team or a controller.
- 20.6.3.2 The FRMCS system informs the users for whom the Railway emergency alert is no longer applicable and terminates the alert of these users. The termination notification of the alert can include additional information (e.g. text, voice prompts) which is presented on the end user device to the user.
- 20.6.3.3 A mobile user, e.g. a driver, maintenance staff or a member of a shunting team, is not able to leave or terminate the Railway emergency alert via actions on the end user device.
- 20.6.3.4 The priority of the Railway emergency alert is managed by the arbitration application. The QoS class of the communication is managed by the QoS class application. The alert has the QoS class which matches the application category of CRITICAL DATA (see [QoS]).
- 20.6.3.5 In the case a user no longer meets the conditions of the Railway emergency alert and if there is an ongoing Railway emergency voice communication, the user will remain in the ongoing Railway emergency voice communication.
- 20.6.3.6 The controller is informed which users are still part of the Railway emergency alert.

  Users who have left the railway emergency alert are separatly indicated to the controller.
- 20.6.3.7 The communication is recorded by the Data recording and access to recorded data application.

Controller

- 20.6.3.8 An entitled controller is able to leave the Railway emergency alerts, unless the leaving controller is the last controller in the alert.
- 20.6.3.9 The controller also leaves the ongoing Railway emergency voice communication.
- 20.6.3.10 The end user device of a controller shows multiple alerts when active.
- 20.6.3.11 The communication is recorded by the Data recording and access to recorded data application.

# 20.6.4 Post-conditions

20.6.4.1 The appropriate recipients are still alerted, while non-appropriate recipients are not alerted anymore.

# 20.6.5 Related URS application interfaces

20.6.5.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application
5.20	Data recording and access to recorded data
6.20	Transfer of data
8.3	Role management and presence
8.4	Location services
8.5	Authorisation of voice communication
8.6	Authorisation of data communication
8.7	Authorisation of application
8.8	QoS Class negotiation
8.12	Arbitration

# 20.6.6 HMI related criteria

- 20.6.6.1 If the railway emergency alert is terminated at the end user device, this is explicitly shown to the user.
- 20.6.6.2 A mobile user, e.g. a driver, maintenance staff or a member of a shunting team, is not able to leave or terminate the Railway emergency alert via actions on the end user device.

- 20.7 Use case: Termination of the Railway emergency alert
- 20.7.1 Description
- 20.7.1.1 The controller is able to terminate the Railway emergency alert.
- 20.7.2 Pre-conditions
- 20.7.2.1 The controller is authorised to terminate the Railway emergency alert.
- 20.7.2.2 There is an ongoing Railway emergency alert.
- 20.7.3 Service flows
- 20.7.3.1 The controller terminates the Railway emergency alert. A mobile user, e.g. a driver, maintenance staff or a member of a shunting team, is not able to terminate the Railway emergency alert via actions on the end user device.
- 20.7.3.2 The FRMCS system sends a termination notification to all users involved in the Railway emergency. The termination notification can include additional information (e.g. text, voice prompts) which is presented on the end user device to the user.
- 20.7.3.3 The priority of the termination of the Railway emergency alert is managed by the arbitration application. The QoS class of the communication is managed by the QoS class application. The termination of the alert has the QoS class which matches the application category of CRITICAL DATA (see [QoS]).
- 20.7.3.4 When the controller terminated the Railway emergency alert, in the case of manual initiation of Railway emergency voice communication, an ongoing Railway emergency voice communication is not automatically terminated. On the end user device this can be a separate action for the controller or can be triggered as a combined action with the termination of the alert.
- 20.7.3.5 The communication is recorded by the Data recording and access to recorded data application.
- 20.7.4 Post-conditions
- 20.7.4.1 The Railway emergency alert is terminated.
- 20.7.5 Related URS application interfaces
- 20.7.5.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application
5.20	Data recording and access to recorded data
6.20	Transfer of data
8.3	Role management and presence
8.4	Location services
8.5	Authorisation of voice communication
8.6	Authorisation of data communication
8.7	Authorisation of application
8.8	QoS Class negotiation
8.12	Arbitration

# 20.7.6 HMI related criteria

- 20.7.6.1 The end user device explicitly showns the termination of the Railway emergency alert to the user.
- 20.7.6.2 A mobile user, e.g. a driver, maintenance staff or a member of a shunting team, is not able to terminate the Railway emergency alert via actions on the end user device.

- 20.8 Use case: Initiation of railway emergency voice communication
- 20.8.1 Description
- 20.8.1.1 Based on operational rules, additional information about the emergency situation can be exchanged using voice communication. E.g the initiator of the railway emergency voice communication may inform other involved users about the emergency situation.
- 20.8.2 Pre-conditions
- 20.8.2.1 The Railway Emergency Alert is active.
- 20.8.3 Service flows

Automatic initiation of Emergency Voice Communication

- 20.8.3.1 After activation of the Railway Emergency Alert, the FRMCS system automatically initiates voice communication.
- 20.8.3.2 All the users that are part of an active Railway Emergency Alert are included in the voice communication.
- 20.8.3.3 The railway emergency voice communication does not interrupt the Railway Emergency Alert, but is able to pre-empt any other ongoing voice communication.
- 20.8.3.4 The FRMCS system establishes the railway emergency voice communication within a setup time specified as IMMEDIATE (see [QoS]). The information from the role management and presence application is used to present the identities to the users involved in the communication.
- 20.8.3.5 The location of the initiator of the railway emergency voice communication is presented to the controller. The location information is retrieved from the location services application.
- 20.8.3.6 The multi user talker control application is used in railway emergency voice communication.
- 20.8.3.7 The precedence handling of the incoming railway emergency voice communication for both the controllers and mobile users is managed by the arbitration application. The QoS class of the communication is managed by the QoS class application. The railway emergency voice communication has the QoS class which matches the application category of CRITICAL VOICE (see [QoS]).
- 20.8.3.8 The communication is recorded by the Voice recording and access to recorded data application.
- 20.8.3.9 The end user device of a controller shows multiple Railway emergency voice communications when active.

Manual initiation of Emergency Voice Communication

- 20.8.3.10 Any user with an active Railway Emergency Alert is able to initiate voice communication by a simple user action.
- 20.8.3.11 All the users receiving the active Railway Emergency Alert are included in the voice communication.
- 20.8.3.12 The railway emergency voice communication does not interrupt the Railway Emergency Alert, but pre-empt any other ongoing voice communication.
- 20.8.3.13 The FRMCS system establishes the railway emergency voice communication within a setup time specified as IMMEDIATE (see [QoS]). The information from the

- role management and presence application is used to present the identities to the users involved in the communication.
- 20.8.3.14 The location of the initiator of the railway emergency voice communication is presented to the controller. The location information is retrieved from the location services application.
- 20.8.3.15 The multi user talker control application is used in railway emergency voice communication.
- 20.8.3.16 The handling of the incoming railway emergency voice communication for both the controllers and mobile users is managed by the arbitration application. The QoS class of the communication is managed by the QoS class application. The railway emergency voice communication has the QoS class which matches the application category of CRITICAL VOICE (see [QoS]).
- 20.8.3.17 The communication is recorded by the Voice recording and access to recorded data application.
- 20.8.3.18 The end user device of a controller shows multiple Railway emergency voice communications when active.
- 20.8.4 Post-conditions
- 20.8.4.1 The railway emergency voice communication is active.
- 20.8.5 Related URS application interfaces
- 20.8.5.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application
5.19	Voice recording and access to recorded data
8.2	Multi user talker control
8.3	Role management and presence
8.4	Location services
8.5	Authorisation of voice communication
8.7	Authorisation of application
8.8	QoS Class negotiation
8.12	Arbitration

#### 20.8.6 HMI related criteria

- 20.8.6.1 The ongoing railway emergency voice communication is clearly indicated visually to the users.
- 20.8.6.2 The user is able to initiate railway emergency voice communication by a simple user action.

- 20.9 Use case: Termination of railway emergency voice communication
- 20.9.1 Description Pre-conditions
- 20.9.1.1 Only the controller(s) is/are able to put on hold, leave or terminate the railway emergency voice communication. A mobile user is not able to put a railway emergency voice communication on hold, to leave or to terminate.
- 20.9.2 Pre-conditions
- 20.9.2.1 The railway emergency voice communication is ongoing.
- 20.9.3 Service flows
- 20.9.3.1 In the case a user no longer meets the conditions of the Railway emergency alert and if there is an ongoing Railway emergency voice communication, the user will remain in the ongoing Railway emergency voice communication.
  - Controller on hold
- 20.9.3.2 An controller is able to put the railway emergency voice communication on hold.
- 20.9.3.3 After the controller has put the railway emergency voice communication on hold, the communication remains active in the FRMCS system. The controller is able to revert back to the communication again.
  - Controller leaving
- 20.9.3.4 An entitled controller is able to leave the railway emergency voice communication unless the leaving controller is the last controller involved in the railway emergency voice communication.
  - Controller termination
- 20.9.3.5 An entiltled controller is able to terminate the railway emergency voice communication.
- 20.9.3.6 The FRMCS system terminates the railway emergency voice communication. All involved users are informed.
- 20.9.4 Post-conditions
- 20.9.4.1 A controller has left, put on hold or terminated the railway emergency voice communication.
- 20.9.5 Related URS application interfaces
- 20.9.5.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application
8.3	Role management and presence
8.5	Authorisation of voice communication
8.7	Authorisation of application

## 20.9.6 HMI related criteria

20.9.6.1 A mobile user is not able to put a railway emergency voice communication on hold, to leave or to terminate.

20.9.6.2 The termination, leaving and putting hold the railway emergency voice communication is achieved with the minimum of interaction (for example, a single button press or selection from a list).

# 20.10 Use case: Initiation of Data communication during Railway Emergency Alert

# 20.10.1 Description

20.10.1.1 Based on operational rules, additional information about the emergency situation can be exchanged using data communication. A system or a user is able to send the additional information (e.g. text, voice prompts).

## 20.10.2 Pre-conditions

20.10.2.1 The Railway Emergency Alert is active.

#### 20.10.3 Service flows

- 20.10.3.1 A mobile user, controller or an external system is able to send additional information (e.g. text, voice prompts).
- 20.10.3.2 All the users receive the additional information.
- 20.10.3.3 The FRMCS system establishes the data communication within a setup time specified as IMMEDIATE (see [QoS]). The information from the role management and presence application is used to present the identities to the users involved in the communication.
- 20.10.3.4 The location of the initiator of the data communication is presented to a mobile user, controller or to an external system. The location information is retrieved from the location services application.
- 20.10.3.5 The handling of the incoming data communication is managed by the arbitration application. The QoS class of the communication is managed by the QoS class application. The data communication has a high priority, but lower than the railway emergency voice communication.
- 20.10.3.6 It is possible to receive data communication during railway emergency voice communication.
- 20.10.3.7 In the case of an ongoing Data communication during Railway emergency alert, the additional user is added to the ongoing Data communication during Railway emergency alert.
- 20.10.3.8 The communication is recorded by the Data recording and access to recorded data application.

# 20.10.4 Post-conditions

20.10.4.1 Data communication is initiated.

## 20.10.5 Related URS application interfaces

20.10.5.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application
5.20	Data recording and access to recorded data
6.20	Transfer of data
8.3	Role management and presence
8.4	Location services

8.5	Authorisation of data communication
8.7	Authorisation of application
8.8	QoS Class negotiation
8.12	Arbitration

# 20.10.6 HMI related criteria

- 20.10.6.1 Independently on any actions between the user and the end user device, the additional information provided by data communication is presented to the user.
- 20.10.6.2 The user is able to send additional information by data communication using simple user actions e.g by selecting predefined messages.

# 20.11 Use case: Service interworking and service continuation with GSM-R

- 20.11.1.1 For migration purposes the service interworking and service continuation between the GSM-R system and FRMCS system for Railway emergency alerts and Railway emergency voice communication needs to be defined.
- 20.11.1.2 Depending on the migration scenario a controller can be attached to the FRMCS system, to the GSM-R system or both. The mobile user can be attached either in the GSM-R system or in the FRMCS system.
- 20.11.1.3 This use case only applies to end user devices supporting both FRMCS and GSM-R systems.
- 20.11.2 Pre-conditions
- 20.11.2.1 None.
- 20.11.3 Service flows

Mobile user attached to GSM-R

- 20.11.3.1 When the mobile user is attached to the GSM-R system and is initiating a Railway Emergency Call, the GSM-R system routes the Railway Emergecy Call to the FRMCS system. The FRMCS system will determine, based on configuration, if a Railway emergency alert needs to be established. If a Railway emergency alert is established a Railway emergency voice communication is initiated automatically.
- 20.11.3.2 The Railway Emergency Call in the GSM-R system and the Railway emergency voice communication in the FRMCS system are linked together and controlled by the FRMCS system.
- 20.11.3.3 Service interworking between the talker control in the GSM-R system and the FRMCS system is required, but without changing the GSM-R system.
- 20.11.3.4 When the Railway Emergency Call in the GSM-R system is terminated, the Railway emergency alert and the Railway emergency voice communication in the FRMCS system are terminated.
- 20.11.3.5 When the Railway emergency voice communication in the FRMCS system is terminated and there is a Railway Emergency Call in the GSM-R system connected, both the Railway Emergency Call in the GSM-R system and Railway emergency alert / the Railway emergency voice communication in the FRMCS system are also terminated.
- 20.11.3.6 When the Railway emergency alert in the FRMCS system is terminated and there is a Railway Emergency Call in the GSM-R system connected, both the Railway Emergency Call in the GSM-R system and Railway emergency voice communication in the FRMCS system are not terminated.
- 20.11.3.7 The information from the role management and presence application is used to present the identities. The identity of the initiator of the Railway Emergency Call in the GSM-R system is made available to the FRMCS system to be used accordingly.

Mobile user attached to FRMCS

20.11.3.8 When the mobile user is attached to the FRMCS system and is initiating a Railway emergency alert, and the Railway emergency alert is relevant for the GSM-R system based on configuration, the FRMCS system initiates the Railway emergency voice communication automatically. Next, the FRMCS system initiate a Railway Emergency Call in the GSM-R system.

- 20.11.3.9 The Railway emergency voice communication in the FRMCS system and Railway Emergency Call in the GSM-R system are linked together and controlled by the FRMCS system.
- 20.11.3.10 Service interworking between the talker control in the FRMCS system and the GSM-R system is required, but without changing the GSM-R system.
- 20.11.3.11 When the Railway emergency voice communication in the FRMCS system is terminated and there is a Railway Emergency Call in the GSM-R system connected, both the Railway Emergency Call in the GSM-R system and Railway emergency alert / the Railway emergency voice communication in the FRMCS system are also terminated.
- 20.11.3.12 When the Railway emergency alert in the FRMCS system is terminated and there is a Railway Emergency Call in the GSM-R system connected, both the Railway Emergency Call in the GSM-R system and Railway emergency voice communication in the FRMCS system are not terminated.
- 20.11.3.13 When the Railway Emergency Call in the GSM-R system is terminated, the Railway emergency alert and the Railway emergency voice communication in the FRMCS system are terminated.
- 20.11.3.14 The information from the role management and presence application is used to present the identities. The identity of the initiator of the Railway emergency alert in the FRMCS system is made available to the GSM-R system to be used accordingly.

Mobile user moving from GSM-R to FRMCS

20.11.3.15 When the GSM-R user equipment of the mobile user becomes unavailable to the GSM-R system, the FRMCS end user device provides service continuation by setting up the communication via the FRMCS system. An interruption of voice communication is acceptable. It is up to the end user device implementation how this service continuation is as seamless as possible presented to the user.

Mobile user moving from FRMCS to GSM-R

20.11.3.16 When the FRMCS user equipment of the driver becomes unavailable to the FRMCS system, the FRMCS end user device provides service continuation by setting up the communication via the GSM-R system. An interruption of voice communication is acceptable. It is up to the end user device implementation how this service continuation is as seamless as possible presented to the user.

#### 20.11.4 Post-conditions

- 20.11.4.1 None.
- 20.11.5 Related URS application interfaces
- 20.11.5.1 None.
- 20.11.6 HMI related criteria
- 20.11.6.1 None.

# 20.12 Use case: Interface to train borne recorder

# 20.12.1 Description

20.12.1.1 The end user device provides an information about Railway emergency communication to the train borne recorder or other equipment via a dedicated interface.

# 20.12.2 Pre-conditions

20.12.2.1 The device is switched on.

#### 20.12.3 Service flows

- 20.12.3.1 The following events on the end user device related to the Railway emergency communication is provided to the train borne recorder:
  - Initiation of the Railway emergency alert
  - Reception of the Railway emergency alert
  - Leaving of the Railway emergency alert
  - Termination of the Railway emergency alert
  - Initiation of railway emergency voice communication
  - Termination of railway emergency voice communication

## 20.12.4 Post-conditions

20.12.4.1 User actions related to the Railway emergency communication have been provided to the train borne recorder.

# 21 On-train safety device to ground communication related use cases

# 21.1 Introduction

In this chapter the use cases related to On-train safety device to ground communication are defined. The following use cases are defined:

- Initiation of the On-train safety device data communication
- Termination of the On-train safety device data communication
- Voice communication between driver and controller
- Service interworking and service continuation with GSM-R

# 21.2 Use case: Initiation of safety device to ground data communication

# 21.2.1 Description

- 21.2.1.1 Based on a critical situation in the train (for example, triggered by a Driver Safety Device (DSD)), a voice and/or data communication is automatically set up towards a ground user (controller or ground system).
- 21.2.1.2 Based on the trigger first a data communication is automatically setup up towards a ground user (controller or ground system). Information of the train is send to the ground user like functional identity.
- 21.2.1.3 Optionally, as a second step a voice communication could be setup by either the driver or the ground user.

## 21.2.2 Pre-conditions

- 21.2.2.1 The initiating on-train application is authorised to initiate safety device to ground data communication. This is managed by the authorisation of communication application.
- 21.2.2.2 The receiving ground user (controller or ground system) is authorised to use the safety device to ground data communication.

#### 21.2.3 Service flows

- 21.2.3.1 The on-train device application initiates the data communication to the ground user (controller or ground systeem). The assured data communication application is used for the safety device to ground data communication. The QoS profile of the communication is managed by the QoS profile application. The data communication has requestes the QoS profile which matches the application category of CRITICAL DATA (see [QoS]) within the FRMCS system.
- 21.2.3.2 The FRMCS system determines the responsible controllers or ground system, based on e.g.:
  - an application discriminator (e.g. short code) allowing FRMCS to discriminate the different types of safety devices
  - location information provided by the locations services application, and/or
  - functional identity provided by the role management and presence application.
  - System configuration on which controller is responsible for which part of the track/station/etc.

- 21.2.3.3 The FRMCS system establishes the data communication to the controller(s) within a setup time specified as IMMEDIATE (see [QoS]). The information from the role management and presence application is used to present the on-train device identity to the controller. Also the location of the train is presented to the controller which is retrieved from the location services application.
- 21.2.3.4 The data communication is recorded by the Data recording and access to recorded data application.

## 21.2.4 Post-conditions

21.2.4.1 The controller or ground system has received the safety device communication.

#### 21.2.5 Communication attributes

URS Ref.	Туре	Symmetry Up/Down	Distribution	Latency	Bandwidth	Reliability	Setup	Speed
5.16	Bi- directional Voice <sup>1</sup>	50/50	User-to-user	Low	Low	High	Immediate	High
	Bi- directional data	80/20	User-to-user	Low	Low	High	Immediate	High

# 21.2.6 Related URS application interfaces

21.2.6.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application			
8.3	Role management and presence			
8.4	Location services			
8.5	Authorisation of voice communication			
8.6	Authorisation of data communication			
8.7	Authorisation of application			
8.8	QoS Class negotiation			
8.12	Arbitration			
8.10	Assured data communication			

## 21.2.7 HMI related criteria

21.2.7.1 There are a clear distinction on the controller HMI display between this function and the railway emergency communication function.

<sup>&</sup>lt;sup>1</sup> For the voice communication attributes please refer to the On-train outgoing voice communication from the train driver towards the controller(s) of the train and the application On-train incoming voice communication from the controller towards a train driver.

- 21.3 Use case: Termination of safety device to ground data communication
- 21.3.1 Description
- 21.3.1.1 Both the initiating and receiving user are able to terminate the safety device to ground data communication.
- 21.3.2 Pre-conditions
- 21.3.2.1 The safety device to ground data communication is ongoing.
- 21.3.3 Service flows
- 21.3.3.1 The on-train device user and the controller are able to terminate the safety device to ground data communication.
- 21.3.3.2 The FRMCS system terminates the safety device to ground data communication. All involved users are informed.
- 21.3.4 Post-conditions
- 21.3.4.1 The safety device to ground data communication is terminated.
- 21.3.5 HMI related criteria
- 21.3.5.1 None.

# 21.4 Use case: Voice communication between driver and controller

21.4.1.1 Optionally, as a second step after the safety device to ground data communication, a voice communication could be setup by either the driver or the gound user. The application of On-train outgoing voice communication from the train driver towards the controller(s) of the train or the application On-train incoming voice communication from the controller towards a train driver can be used for this.

- 21.5 Use case: service interworking and service continuation with GSM-R
- 21.5.1 Description
- 21.5.1.1 For migration purposes the service interworking and service continuation between the GSM-R system and FRMCS system for On-train safety device to ground communication communication needs to be clear.
- 21.5.1.2 This use case only applies to end user devices supporting both FRMCS and GSM-R systems.
- 21.5.1.3 For service interworking and service continuation only the packet switched (PS) bearer service is considered.
- 21.5.2 Pre-conditions
- 21.5.2.1 None.
- 21.5.3 Service flows

Initiating On-train safety device to ground communication application attached to GSM-R

- 21.5.3.1 When the initiating On-train safety device to ground communication application is attached to the GSM-R system and is initiating data communication to another application, the GSM-R system will route the data communication accordingly.
- 21.5.3.2 If the other application is attached to the FRMCS system the GSM-R system can only route the data communication if the destination can be reached by an address or identity understood by the GSM-R system. The role management in FRMCS provides the appropriate address or identity e.g. by providing a mapping of GSM-R identities and FRMCS identities.
- 21.5.3.3 The information from the role management and presence application is used to route the communication and to present the identities.
  - Initiating On-train safety device to ground communication application attached to FRMCS
- 21.5.3.4 When the initiating application is attached to the FRMCS system and is initiating data communication to another On-train safety device to ground application, the FRMCS system will route the communication accordingly.
- 21.5.3.5 If the other application is attached to the GSM-R system the FRMCS system can only route the data communication if the destination can be reached by an address or identity understood by the FRMCS system. The role management in FRMCS provides the appropriate address or identity e.g. by providing a mapping of GSM-R identities and FRMCS identities.
- 21.5.3.6 The information from the role management and presence application is used to route the communication and to present the identities.
  - On-train safety device to ground application moving from GSM-R to FRMCS
- 21.5.3.7 When the On-train safety device to ground application is detached from the GSM-R system the FRMCS end user device provides service continuation by setting up the communication via the FRMCS system. An interruption of data communication is acceptable.
  - On-train safety device to ground application moving from FRMCS to GSM-R
- 21.5.3.8 When the On-train safety device to ground application is detached from the FRMCS system the FRMCS end user device provides service continuation by setting up the

communication via the GSM-R system. An interruption of data communication is acceptable.

- 21.5.4 Post-conditions
- 21.5.4.1 None.
- 21.5.5 Related URS application interfaces
- 21.5.5.1 None.
- 21.5.6 HMI related criteria
- 21.5.6.1 None.

# 22 Public train emergency communication related use cases

# 22.1 Introduction

In this chapter the use cases related to Public train emergency communication are defined. The following use cases are defined:

- Initiation of the Public train emergency alert
- New entry to the Public train emergency alert
- Changing of the Public train Railway emergency alert
- Leaving of the Public train emergency alert
- Termination of the Public train emergency alert;
- Initiation of Public train emergency voice communication
- Termination of Public train emergency voice communication
- Initiation of Data communication during Public train emergency Alert
- Service interworking and service continuation with GSM-R
- Interface to train borne recorder.

#### 22.2 General overview

The Public train emergency communication behaves as an Railway Emergency Communication, but with a limited/local impact (e.g. a platform of a level crossing). The communication can be initiated by railway staff but also by a member of the public (using a dedicated HMI). For this reason, this chapter is based on the use case of an Railway Emergency Communication.

The Public Train emergency Alert serves the purpose of enabling the user to warn trains of a potentially hazardous situation. For example when a person fell from a platform onto the track, or when a car is broken down on a level crossing.

When a Public Train emergency Alert is triggered by a user, the FRMCS system reacts in the same way as it would with a Railway Emergency Communication only the geographical area in which users receive the alert is generally much smaller (less users involved) that with a Railway Emergency Communication: usually one or a few tracks (where a train approaches) are involved.

The Public train emergency communication serves two main purposes in railway operation

- 1. Alert drivers or other railway staff about an emergency situation. Receiving such alert will result in immediate actions to be taken by the recipients. These actions are defined by operational rules, e.g. a driver has to slow down train speed to 40km/h, drive on sight, etc.
- 2. Based on operational rules, additional information about the emergency situation can be exchanged using voice and/or data communication.

While the alert needs to be setup very fast, the information part that may follow is less time critical and not always required. The Public train emergency communication consists of:

- a) A mandatory alert phase indicating the emergency situation;
- b) An optional voice and/or data communication phase depending on operational situation and / or operational rules.

The alert receives priority handling which is linked to the application category within the FRMCS system (see [QoS]).

When an Public train emergency alert is triggered by a user, the FRMCS system determines which other FRMCS users receive an alert, depending on following conditions:

- Location, accuracy of the location, track, functional identity, direction of movement, speed of the initiator
- Location, accuracy of the location, track, functional identity, direction of movement, speed of other users which are concerned of the emergency situation
- Any additional information provided by the initiator

In the alert condition, only users who may be involved in the emergency situation receive an alert. Figure x-x outlines this principle.

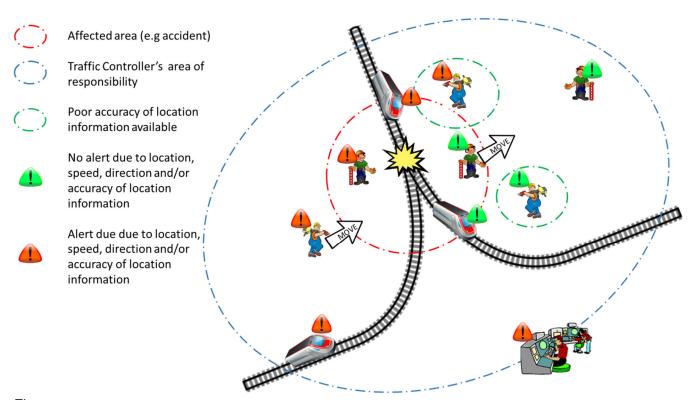


Figure x-x

Independently of any ongoing interactions between the user and the end user device, the Public train emergency alert has to be continuously indicated to the user up to the condition when the public train emergency situation is over (alert is terminated).

While an alert is active, the FRMCS system continuously check's

- if additional users do match to the conditions of the Railway emergency alert. The user entered the emergency area/location/etc. will receive the alert and
- If a user does not fulfil the conditions to be alerted, because the user has moved away from the emergency situation. In this case, the alert will be withdrawn from this user.

A controller is be able to change the conditions while an alert is active.

While an alert is active on an end user device, the user is still be able to establish and/or receive other types of communications. If a public train emergency voice communication is established by the user of an ongoing alert, any other ongoing voice communications are terminated.

# 22.3 Use case: Initiation of the Public train emergency alert

22.3.1.1 A user is able to initiate the Public train emergency alert to users that are informed about the emergency situation, e.g. that fulfil the conditions of the emergency situation. The user can be e.g. a member of the public, mobile user, a driver, an external system, a controller, maintenance staff or a member of a shunting team.

#### 22.3.2 Pre-conditions

22.3.2.1 The user is authorised to initiate the Public train emergency alert. This is managed by the application authorisation of application.

#### 22.3.3 Service flows

- 22.3.3.1 In any service flow, a mobile user, e.g. a driver, maintenance staff or a member of a shunting team, is not able to leave or terminate the Railway emergency alert.
  - External system initiated
- 22.3.3.2 The external system provides the FRMCS system with conditions (to e.g. train number/platform location /track section/station/railway crossing identification) selecting the appropriate recepients of the Public train emergency alert.
- 22.3.3.3 The FRMCS system will determine, based on the conditions, which users receive the Public train emergency alert.
- 22.3.3.4 The FRMCS system alerts the selected users within a setup time specified as IMMEDIATE (see [QoS]). The alert notification can include additional information (e.g. text, voice prompts) which is forwarded to and presented on the end user device to the user.
- 22.3.3.5 The priority of the Public train emergency alert is managed by the arbitration application. The QoS class of the communication is managed by the QoS class application. The alert has the QoS class which matches the application category of CRITICAL DATA (see [QoS]).
- 22.3.3.6 In the case that a mobile user is already active in another Public train emergency alert, the new alert is not send by the FRMCS system to the end user device. The waiting alert is sent as soon as the user is no longer involved in an ongoing Public train emergency alert.
- 22.3.3.7 The controller(s) are informed which users are alerted and which external system initiated the alert.
- 22.3.3.8 The end user device of a controller shows multiple alerts when active.
- 22.3.3.9 The communication is recorded by the Data recording and access to recorded data application.
  - Mobile user initaited
- 22.3.3.10 A mobile user, like a member of the public or a maintenance staff member, presses the Public train emergency activation device (see also 20.3.7.1).
- 22.3.3.11 The end user equipment requests the alert communication to the FRMCS system.
- 22.3.3.12 The FRMCS system will determine the users to be included in the Public train emergency alert. This is based on the location information of the initiator and certain criteria (e.g. functional identity, platform or level crossing location, track area, accuracy of the location, maximum track speed, station, shunting yard, location information of users).

- 22.3.3.13 The FRMCS system alerts the selected users within a setup time specified as IMMEDIATE (see [QoS]). The alert notification can include additional information (e.g. text, voice prompts) which is forwarded to and presented on the end user device to the user.
- 22.3.3.14 The priority of the Public train emergency alert is managed by the arbitration application. The QoS class of the communication is managed by the QoS class application. The alert has the QoS class which matches the application category of CRITICAL DATA (see [QoS]).
- 22.3.3.15 In the case that a mobile user is already active in another Public train emergency alert, the new alert is not send by the FRMCS system to the end user device. The waiting alert is sent as soon as the user is no longer involved in an ongoing Public train emergency alert.
- 22.3.3.16 The controller(s) are informed which users are alerted, including which user initiated the alert.
- 22.3.3.17 The end user device of a controller shows multiple alerts when active.
- 22.3.3.18 The communication is recorded by the Data recording and access to recorded data application.
- 22.3.4 Post-conditions
- 22.3.4.1 The applicable receipients are alerted.

## 22.3.5 Communication attributes

URS Ref.	Туре	Symmetry Up/Down	Distribution	Latency	Bandwidth	Reliability	Setup	Speed
	Bi- directional Voice	50/50	User-to- User/Multi- user	Low	Low	High	Immediate	High
5.17	Bi- directional data	50/50	User-to- User/Multi- user	Low	Low	High	Immediate	High

## 22.3.6 Related URS application interfaces

22.3.6.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application			
8.3	Role management and presence			
8.4	Location services			
8.5	Authorisation of voice communication			
8.6	Authorisation of data communication			
8.7	Authorisation of application			
8.8	QoS Class negotiation			

8.12	Arbitration
5.20	Data recording and access to recorded data
6.20	Transfer of data

### 22.3.7 HMI related criteria

- 22.3.7.1 The initiation of a Public train emergency alert is achieved with the minimum of interaction (for example, a single button press or selection from a list). Where selection from a list is determined to be the preferred option, then the list is accessed with the minimum of interaction and be intuitive.
- 22.3.7.2 On the end user device the initiation of a Public train emergency alert is protected against accidental and unintentional use.
- 22.3.7.3 Independently of any actions between the user and the end user device, the Public train emergency alert is always and continuously presented to the user up to the point when the Public train emergency alert is terminated.
- 22.3.7.4 While an alert is active on an end user device, the user is still able to use other applications.
- 22.3.7.5 A mobile user, e.g. a driver, maintenance staff or a member of a shunting team, is not able to leave or terminate the Public train emergency alert.

# 22.4 Use case: New entry to the Public train emergency alert

# 22.4.1 Description

22.4.1.1 The FRMCS system continuously check's if additional users meet the conditions of the Public train emergency alert. The user can be e.g. a mobile user, a driver, maintenance staff or. The additional users receive the Public train emergency alert.

### 22.4.2 Pre-conditions

- 22.4.2.1 The user is authorised to receive the Public train emergency alert. This is managed by the application authorisation of application.
- 22.4.2.2 There is an onging Public train emergency alert.

### 22.4.3 Service flows

- 22.4.3.1 The FRMCS system continuously check's if additional users meet the conditions of the Public train emergency alert. The user can be e.g. a mobile user, a driver, maintenance staff or a member of a shunting team. The additional users receive the Public train emergency alert.
- 22.4.3.2 The FRMCS system alerts the selected users within a setup time specified as IMMEDIATE (see [QoS]). The alert notification can include additional information (e.g. text, voice prompts) which is forwarded to and presented on the end user device to the user.
- 22.4.3.3 The priority of the Public train emergency alert is managed by the arbitration application. The QoS class of the communication is managed by the QoS class application. The alert has the QoS class which matches the application category of CRITICAL DATA (see [QoS]).
- 22.4.3.4 In the case of an ongoing Public train emergency voice communication, the additional user is added to the ongoing voice communication.
- 22.4.3.5 In the case that a mobile user is already active in another Public train emergency alert, the new alert is not send by the FRMCS system to the end user device. The waiting alert is sent as soon as the user is no longer involved in an ongoing Public train emergency alert.
- 22.4.3.6 A mobile user, e.g. a driver, maintenance staff or a member of a shunting team, is not able to leave or terminate the Public train emergency alert.
- 22.4.3.7 The controller(s) are informed which users are additionally alerted.
- 22.4.3.8 The end user device of a controller shows multiple alerts when active.
- 22.4.3.9 The communication is recorded by the Data recording and access to recorded data application.

### 22.4.4 Post-conditions

22.4.4.1 The additional receipients are alerted.

### 22.4.5 Related URS application interfaces

22.4.5.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application				
5.20	Data recording and access to recorded data				

6.20	Transfer of data					
8.3	Role management and presence					
8.4	ocation services					
8.5	Authorisation of voice communication					
8.6	Authorisation of data communication					
8.7	Authorisation of application					
8.8	QoS Class negotiation					
8.12	Arbitration					

#### 22.4.6 HMI related criteria

- 22.4.6.1 Independently of any actions between the user and the end user device, the Public train emergency alert is always and continuously presented to the user up to the point when the Public train emergency alert is terminated.
- 22.4.6.2 While an alert is active on an end user device, the user is still able to use other applications.
- 22.4.6.3 A mobile user, e.g. a driver ,maintenance staff or a member of a shunting team, is not able to leave or terminate the Public train emergency alert.

# 22.5 Use case: Changing of the Public train emergency alert

### 22.5.1 Description

22.5.1.1 The controller or an external system is able to provide the FRMCS system with a changed conditions selecting the appropriate recepients of the Public train emergency alert. The change may result in an expansion or a reduction of users that are informed about the emergency situation.

### 22.5.2 Pre-conditions

- 22.5.2.1 The user is authorised to initiate the Public train emergency alert. This is managed by the application authorisation of application.
- 22.5.2.2 There is an onging Public train emergency alert.

### 22.5.3 Service flows

- 22.5.3.1 The controller or an external system is able to provide the FRMCS system with a changed conditions selecting the appropriate recepients of the Railway emergency alert. The change of the selection could imply the merge of multiple ongoing Public train emergency alerts.
- 22.5.3.2 The FRMCS system continuously check's if users still meet the conditions of the Public train emergency alert. The user can be e.g. a mobile user, a driver, maintenance staff, a member of a shunting team or a controller.
- 22.5.3.3 The FRMCS system sends the Public train emergency alert to all additional selected users within a setup time specified as IMMEDIATE (see [QoS]). The alert notification can include additional information (e.g. text, voice prompts) which is forwarded to and presented on the end user device to the user.

- 22.5.3.4 The priority of the Public train emergency alert is managed by the arbitration application. The QoS class of the communication is managed by the QoS class application. The alert has the QoS class which matches the application category of CRITICAL DATA (see [QoS]).
- 22.5.3.5 In the case of an ongoing Public train emergency voice communication, the additional user is added to the ongoing voice communication.
- 22.5.3.6 In the case of an ongoing Data communication during Public train emergency alert, the additional user is added to the ongoing Data communication during Railway emergency alert.
- 22.5.3.7 In the case that a mobile user is already active in another Public train emergency alert, the new alert is not send by the FRMCS system to the end user device. The waiting alert is sent as soon as the user is no longer involved in an ongoing Public train emergency alert.
- 22.5.3.8 A mobile user, e.g. a driver, maintenance staff or a member of a shunting team, is not able to leave or terminate the Public train emergency alert.
- 22.5.3.9 The FRMCS system informs the users for whom the Public train emergency alert is no longer applicable and terminates the alert of these users. The termination notification of the alert can include additional information (e.g. text, voice prompts) which is presented on the end user device to the user.
- 22.5.3.10 The priority of the Public train emergency alert is managed by the arbitration application. The QoS class of the communication is managed by the QoS class application. The alert has the QoS class which matches the application category of CRITICAL DATA (see [QoS]).
- 22.5.3.11 In the case a user no longer meets the conditions of the Public train emergency alert and if there is an ongoing Public train emergency voice communication, the user will remain in the ongoing Public train emergency voice communication.
- 22.5.3.12 The controller is informed which users are still part of the Public train emergency alert. Users who have left the Public train emergency alert are separatly indicated to the controller.
- 22.5.3.13 The end user device of a controller shows multiple alerts when active.
- 22.5.3.14 The communication is recorded by the Data recording and access to recorded data application.
- 22.5.4 Post-conditions
- 22.5.4.1 The appropriate receipients are still alerted, while non-appropriate recipients are not alerted anymore.
- 22.5.5 Related URS application interfaces
- 22.5.5.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application				
5.20	Data recording and access to recorded data				
6.20	Transfer of data				
8.3	Role management and presence				

8.4	Location services					
8.5	Authorisation of voice communication					
8.6	Authorisation of data communication					
8.7	Authorisation of application					
8.8	QoS Class negotiation					
8.12	Arbitration					

## 22.5.6 HMI related criteria

- 22.5.6.1 Independently of any actions between the user and the end user device, the Public train emergency alert is always and continuously presented to the user up to the point when the Public train emergency alert is terminated.
- 22.5.6.2 While an alert is active on an end user device, the user is still able to use other applications.
- 22.5.6.3 If the Public train emergency alert is terminated at the end user device, this is explicitly shown to the user.
- 22.5.6.4 A mobile user, e.g. a driver, maintenance staff or a member of a shunting team, is not able to leave or terminate the Public train emergency alert.

# 22.6 Use case: Leaving of the Public train emergency alert

22.6.1.1 The FRMCS system continuously check's if users no longer meet the conditions of the Public train emergency alert and therefore the FRMCS system terminates the alert at the end user device of the left users. The user can be e.g. a mobile user, a driver, maintenance staff or a member of a shunting team.

### 22.6.2 Pre-conditions

- 22.6.2.1 The user is authorised to receive the Public train emergency alert. This is managed by the application authorisation of application.
- 22.6.2.2 There is an onging Public train emergency alert.

### 22.6.3 Service flows

Mobile user

- 22.6.3.1 The FRMCS system continuously check's if users no longer meet the conditions of the Public train emergency alert. The user can be e.g. a mobile user, a driver, maintenance staff, a member of a shunting team or a controller.
- 22.6.3.2 The FRMCS system informs the users for whom the Public train emergency alert is no longer applicable and terminates the alert of these users. The termination notification of the alert can include additional information (e.g. text, voice prompts) which is presented on the end user device to the user.
- 22.6.3.3 A mobile user, e.g. a driver, maintenance staff or a member of a shunting team, is not able to leave or terminate the Public train emergency alert via actions on the end user device.
- 22.6.3.4 The priority of the Public train emergency alert is managed by the arbitration application. The QoS class of the communication is managed by the QoS class application. The alert has the QoS class which matches the application category of CRITICAL DATA (see [QoS]).
- 22.6.3.5 In the case a user no longer meets the conditions of the Public train emergency alert and if there is an ongoing Public train emergency voice communication, the user will remain in the ongoing Public train emergency voice communication.
- 22.6.3.6 The controller is informed which users are still part of the Public train emergency alert. Users who have left the Public train emergency alert are separatly indicated to the controller.
- 22.6.3.7 The communication is recorded by the Data recording and access to recorded data application.

Controller

- 22.6.3.8 An entitled controller is able to leave the Public train emergency alerts, unless the leaving controller is the last controller in the alert.
- 22.6.3.9 The controller also leaves the ongoing Public train emergency voice communication.
- 22.6.3.10 The end user device of a controller shows multiple alerts when active.
- 22.6.3.11 The communication is recorded by the Data recording and access to recorded data application.
- 22.6.3.12 The controller is able to stop the ongoing alert generated by the dedicated HMI (e.g. in the case of misuse), thereby forcing that mobile user to leave the Public train interface alert.

22.6.3.13 The controller is able to block/unblock the dedicated HMI.

### 22.6.4 Post-conditions

22.6.4.1 The appropriate recipients are still alerted, while non-appropriate recipients are not alerted anymore.

### 22.6.5 Related URS application interfaces

22.6.5.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application					
5.20	Data recording and access to recorded data					
6.20	Fransfer of data					
8.3	Role management and presence					
8.4	Location services					
8.5	Authorisation of voice communication					
8.6	Authorisation of data communication					
8.7	Authorisation of application					
8.8	QoS Class negotiation					
8.12	Arbitration					

### 22.6.6 HMI related criteria

- 22.6.6.1 If the Public train emergency alert is terminated at the end user device, this is explicitly shown to the user.
- 22.6.6.2 A mobile user, e.g. a driver, maintenance staff or a member of a shunting team, is not able to leave or terminate the Public train emergency alert via actions on the end user device.

- 22.7 Use case: Termination of the Public train emergency alert
- 22.7.1 Description
- 22.7.1.1 The controller is able to terminate the Public train emergency alert.
- 22.7.2 Pre-conditions
- 22.7.2.1 The controller is authorised to terminate the Public train emergency alert.
- 22.7.2.2 There is an ongoing Public train emergency alert.
- 22.7.2.3 The controller terminates the Public train emergency alert. A mobile user, e.g. a driver, maintenance staff or a member of a shunting team, is not able to terminate the Public train emergency alert via actions on the end user device.
- 22.7.2.4 The FRMCS system sends a termination notification to all users involved in the Public train emergency. The termination notification can include additional information (e.g. text, voice prompts) which is presented on the end user device to the user.
- 22.7.2.5 The priority of the termination of the Public train emergency alert is managed by the arbitration application. The QoS class of the communication is managed by the QoS class application. The termination of the alert has the QoS class which matches the application category of CRITICAL DATA (see [QoS]).
- 22.7.2.6 When the controller terminated the Public train emergency alert, in the case of manual initiation of Public train emergency voice communication, an ongoing Public train emergency voice communication is not automatically terminated. On the end user device this can be a separate action for the controller or can be triggered as a combined action with the termination of the alert.
- 22.7.2.7 The communication is recorded by the Data recording and access to recorded data application.
- 22.7.3 Post-conditions
- 22.7.3.1 The Public train emergency alert is terminated.
- 22.7.4 Related URS application interfaces
- 22.7.4.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application					
5.20	Data recording and access to recorded data					
6.20	ransfer of data					
8.3	ole management and presence					
8.4	ocation services					
8.5	Authorisation of voice communication					
8.6	Authorisation of data communication					
8.7	Authorisation of application					
8.8	QoS Class negotiation					
8.12	Arbitration					

# 22.7.5 HMI related criteria

- 22.7.5.1 The end user device explicitly showns the termination of the Public train emergency alert to the user.
- 22.7.5.2 A mobile user, e.g. a driver, maintenance staff or a member of a shunting team, is not able to terminate the Public train emergency alert via actions on the end user device.

# 22.8 Use case: Initiation of Public train emergency voice communication

# 22.8.1 Description

22.8.1.1 Based on operational rules, additional information about the public train emergency situation can be exchanged using voice communication. E.g the initiator of the Public train emergency voice communication may inform other involved users about the emergency situation.

### 22.8.2 Pre-conditions

22.8.2.1 The Public train Emergency Alert is active.

### 22.8.3 Service flows

Automatic initiation of Public train Emergency Voice Communication

- 22.8.3.1 After activation of the Public trian Emergency Alert, the FRMCS system automatically initiates voice communication.
- 22.8.3.2 All the users that are part of an active Public train Emergency Alert are included in the voice communication.
- 22.8.3.3 The Public train railway emergency voice communication does not interrupt the Public train Emergency Alert, but is able to pre-empt any other ongoing voice communication except Railway emergency communication.
- 22.8.3.4 The Railway emergency voice communication is able to pre-empt any other ongoing voice communication including Public train emergency communication.
- 22.8.3.5 The FRMCS system establishes the Public train emergency voice communication within a setup time specified as IMMEDIATE (see [QoS]). The information from the role management and presence application is used to present the identities to the users involved in the communication.
- 22.8.3.6 The location of the initiator of the Public train emergency voice communication is presented to the controller. The location information is retrieved from the location services application.
- 22.8.3.7 The multi user talker control application is used in Public train emergency voice communication.
- 22.8.3.8 The precedence handling of the incoming Public train emergency voice communication for both the controllers and mobile users is managed by the arbitration application. The QoS class of the communication is managed by the QoS class application. The Public train emergency voice communication has the QoS class which matches the application category of CRITICAL VOICE (see [QoS]).
- 22.8.3.9 The communication is recorded by the Voice recording and access to recorded data application.
- 22.8.3.10 The end user device of a controller shows multiple Public train emergency voice communications when active.

Manual initiation of Public train Emergency Voice Communication

- 22.8.3.11 Any user with an active Public train Emergency Alert is able to initiate voice communication by a simple user action.
- 22.8.3.12 For the public initiated user: the voice communication device is activated by an authorised user (e.g. the controller of the affected track/line(s)).

  Note: this is to have some control over misuse of the function by members of the public.

- 22.8.3.13 All the users receiving the active Public train Emergency Alert are included in the voice communication.
- 22.8.3.14 The Public train emergency voice communication does not interrupt the Public train Emergency Alert, but pre-empt any other ongoing voice communication except Railway emergency communication.
- 22.8.3.15 The Railway emergency voice communication is able to pre-empt any other ongoing voice communication including Public train emergency communication.
- 22.8.3.16 The FRMCS system establishes the Public train emergency voice communication within a setup time specified as IMMEDIATE (see [QoS]). The information from the role management and presence application is used to present the identities to the users involved in the communication.
- 22.8.3.17 The location of the initiator of the Public train emergency voice communication is presented to the controller. The location information is retrieved from the location services application.
- 22.8.3.18 The multi user talker control application is used in Public train emergency voice communication.
- 22.8.3.19 The handling of the incoming Public train emergency voice communication for both the controllers and mobile users is managed by the arbitration application. The QoS class of the communication is managed by the QoS class application. The Public train emergency voice communication has the QoS class which matches the application category of CRITICAL VOICE (see [QoS]).
- 22.8.3.20 The communication is recorded by the Voice recording and access to recorded data application.
- 22.8.3.21 The end user device of a controller shows multiple Public train emergency voice communications when active.
- 22.8.4 Post-conditions
- 22.8.4.1 The Public train emergency voice communication is active.
- 22.8.5 Related URS application interfaces
- 22.8.5.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application					
5.19	Voice recording and access to recorded data					
8.2	Multi user talker control					
8.3	Role management and presence					
8.4	Location services					
8.5	Authorisation of voice communication					
8.7	Authorisation of application					
8.8	QoS Class negotiation					
8.12	Arbitration					

# 22.8.6 HMI related criteria

- 22.8.6.1 The ongoing Public train emergency voice communication is clearly indicated visually to the users.
- 22.8.6.2 The user is able to initiate Public train emergency voice communication by a simple user action.

- 22.9 Use case: Termination of Public train emergency voice communication
- 22.9.1 Description Pre-conditions
- 22.9.1.1 Only the controller(s) is/are able to put on hold, leave or terminate the Public train emergency voice communication. A mobile user is not able to put a Public train emergency voice communication on hold, to leave or to terminate.
- 22.9.2 Pre-conditions
- 22.9.2.1 The Public train emergency voice communication is ongoing.
- 22.9.3 Service flows
- 22.9.3.1 In the case a user no longer meets the conditions of the Public train emergency alert and if there is an ongoing Public train emergency voice communication, the user will remain in the ongoing Public train emergency voice communication.
- 22.9.3.2 For the public initiated user: the voice communication device can be de-activated by an authorised user (e.g. the controller of the affected track/line(s)). Note: this is to have some control over misuse of the function by members of the public.
  - Controller on hold
- 22.9.3.3 An controller is able to put the Public train emergency voice communication on hold.
- 22.9.3.4 After the controller has put the Public train emergency voice communication on hold, the communication remains active in the FRMCS system. The controller is able to revert back to the communication again.
  - Controller leaving
- 22.9.3.5 An entitled controller is able to leave the railway emergency voice communication unless the leaving controller is the last controller involved in the railway emergency voice communication.
  - Controller termination
- 22.9.3.6 An entiltled controller is able to terminate the Public train emergency voice communication.
- 22.9.3.7 The FRMCS system terminates the Public train emergency voice communication.

  All involved users are informed.
- 22.9.4 Post-conditions
- 22.9.4.1 A controller has left, put on hold or terminated the Public train emergency voice communication.
- 22.9.5 Related URS application interfaces
- 22.9.5.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application				
8.3	Role management and presence				
8.5	Authorisation of voice communication				
8.7	Authorisation of application				

# 22.9.6 HMI related criteria

- 22.9.6.1 A mobile user is not able to put a Public train emergency voice communication on hold, to leave or to terminate.
- 22.9.6.2 The termination, leaving and putting hold the Public train emergency voice communication is achieved with the minimum of interaction (for example, a single button press or selection from a list).

# 22.10 Use case: Initiation of Data communication during Public train Emergency Alert

# 22.10.1 Description

22.10.1.1 Based on operational rules, additional information about the emergency situation can be exchanged using data communication. A system or a user is able to send the additional information (e.g. text, voice prompts).

### 22.10.2 Pre-conditions

22.10.2.1 The Public train Emergency Alert is active.

### 22.10.3 Service flows

- 22.10.3.1 A mobile user, controller or an external system is able to send additional information (e.g. text, voice prompts).
- 22.10.3.2 All the users receive the additional information.
- 22.10.3.3 The FRMCS system establishes the data communication within a setup time specified as IMMEDIATE (see [QoS]). The information from the role management and presence application is used to present the identities to the users involved in the communication.
- 22.10.3.4 The location of the initiator of the data communication is presented to a mobile user, controller or to an external system. The location information is retrieved from the location services application.
- 22.10.3.5 The handling of the incoming data communication is managed by the arbitration application. The data communication has a high priority, but lower than the Public train emergency voice communication.
- 22.10.3.6 It is possible to receive data communication during Public train emergency voice communication.
- 22.10.3.7 In the case of an ongoing Data communication during Public train emergency alert, the additional user is added to the ongoing Data communication during Public train emergency alert.
- 22.10.3.8 The communication is recorded by the Data recording and access to recorded data application.

### 22.10.4 Post-conditions

22.10.4.1 Data communication is initiated.

### 22.10.5 Related URS application interfaces

22.10.5.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application					
5.20	Data recording and access to recorded data					
6.20	ransfer of data					
8.3	Role management and presence					
8.4	Location services					
8.5	Authorisation of data communication					

8.7	Authorisation of application
8.8	QoS Class negotiation
8.12	Arbitration

# 22.10.6 HMI related criteria

- 22.10.6.1 Independently on any actions between the user and the end user device, the additional information provided by data communication is presented to the user.
- 22.10.6.2 The user is able to send additional information by data communication using simple user actions e.g by selecting predefined messages.

# 22.11 Use case: Service interworking and service continuation with GSM-R

- 22.11.1.1 For migration purposes the service interworking and service continuation between the GSM-R system and FRMCS system for Public train emergency alerts and Public train emergency voice communication needs to be defined.
- 22.11.1.2 Depending on the migration scenario a controller can be attached to the FRMCS system, to the GSM-R system or both. The mobile user can be attached either in the GSM-R system or in the FRMCS system.
- 22.11.1.3 This use case only applies to end user devices supporting both FRMCS and GSM-R systems.
- 22.11.2 Pre-conditions
- 22.11.2.1 None.
- 22.11.3 Service flows

Mobile user attached to GSM-R

22.11.3.1 There is no GSM-R counterpart for the FRMCS Public train emergency communication.

No interworking in the direction GSM-R REC → FRMCS Public train emergency communication is required, since a GSM-R REC already initiates a FRMCS Railway Emergency Communication (as per chapter 20).

Mobile user attached to FRMCS

- 22.11.3.2 When the mobile user is attached to the FRMCS system and is initiating a Public train emergency alert, and the Public train emergency alert is relevant for the GSM-R system based on configuration, the FRMCS system initiates the Public train emergency voice communication automatically. Next, the FRMCS system initiate a Railway Emergency Call in the GSM-R system.
- 22.11.3.3 The Public train emergency voice communication in the FRMCS system and Railway Emergency Call in the GSM-R system are linked together and controlled by the FRMCS system.
- 22.11.3.4 Service interworking between the talker control in the FRMCS system and the GSM-R system is required, but without changing the GSM-R system.
- 22.11.3.5 When the Public train emergency voice communication in the FRMCS system is terminated and there is a Railway Emergency Call in the GSM-R system connected, both the Railway Emergency Call in the GSM-R system and Public train emergency alert / the Public train emergency voice communication in the FRMCS system are also terminated.
- 22.11.3.6 When the Public train emergency alert in the FRMCS system is terminated and there is a Railway Emergency Call in the GSM-R system connected, both the Railway Emergency Call in the GSM-R system and Public train emergency voice communication in the FRMCS system are not terminated.
- 22.11.3.7 When the Railway Emergency Call in the GSM-R system is terminated, the Public train emergency alert and the Public train emergency voice communication in the FRMCS system are terminated.
- 22.11.3.8 The information from the role management and presence application is used to present the identities. The identity of the initiator of the Public train emergency alert in the FRMCS system is made available to the GSM-R system to be used accordingly.

Mobile user moving from GSM-R to FRMCS

22.11.3.9 When the GSM-R user equipment of the mobile user becomes unavailable to the GSM-R system, the FRMCS end user device provides service continuation by setting up the communication via the FRMCS system. An interruption of voice communication is acceptable. It is up to the end user device implementation how this service continuation is as seamless as possible presented to the user.

Mobile user moving from FRMCS to GSM-R

22.11.3.10 When the FRMCS user equipment of the driver becomes unavailable to the FRMCS system, the FRMCS end user device provides service continuation by setting up the communication via the GSM-R system. An interruption of voice communication is acceptable. It is up to the end user device implementation how this service continuation is as seamless as possible presented to the user.

### 22.11.4 Post-conditions

22.11.4.1 None.

22.11.5 Related URS application interfaces

22.11.5.1 None.

22.11.6 HMI related criteria

22.11.6.1 None.

# 22.12 Use case: Interface to train borne recorder

### 22.12.1 Description

22.12.1.1 The end user device provides an information about Public train emergency communication to the train borne recorder or other equipment via a dedicated interface.

### 22.12.2 Pre-conditions

22.12.2.1 The device is switched on.

### 22.12.3 Service flows

- 22.12.3.1 The following events on the end user device related to the Public train emergency communication is provided to the train borne recorder:
  - Initiation of the Public train emergency alert
  - Reception of the Public train emergency alert
  - Leaving of the Public train emergency alert
  - Termination of the Public train emergency alert
  - Initiation of Public train emergency voice communication
  - Termination of Public train emergency voice communication

### 22.12.4 Post-conditions

22.12.4.1 User actions related to the Public train emergency communication have been provided to the train borne recorder.

# Working alone related use cases

### 23.1 Introduction

In this chapter the use cases related to data communication for the application Working Alone are defined. The following use cases are defined:

- Data communication for the initiation of the application Working Alone
- Termination of the application Working Alone
- Service interworking and service continuation with GSM-R

The Working Alone application, based on the assessment of its various inputs, will initiate, when needed, other voice or data applications within this document. For example it could trigger a voice communication to a controller or a data communication to a system. For the corresponding flows please refer to the use cases of each application.

# 23.2 Use case: Data communication for the initiation of the application Working Alone

## 23.2.1 Description

- 23.2.1.1 This application allows any entitled FRMCS user acting as a Lone Worker to perform a monitoring of his status.
- 23.2.1.2 Please note that the application of the Lone Worker is outside the FRMCS system.
- 23.2.1.3 The application performs the status check based on capabilities integrated in the user terminal.

### 23.2.2 Pre-conditions

- 23.2.2.1 The initiating application, at the FRMCS user side (Lone Worker) is authorised to initiate a Working Alone communication. This is managed by the "authorisation of communication" application.
- 23.2.2.2 The receiving applications (controllers, maintenance teams, emergency services) are authorised to use the Working Alone communication by the "authorisation of communication application".

### 23.2.3 Service flows

- 23.2.3.1 The application can be initiated either automatically (when certain conditions preprogrammed are met, such as a specific functional identity), manually by the FRMCS user or remotely by another entitled user.
- 23.2.3.2 The initated application provides the FRMCS system with the data (e.g. functional identity/ location/track section/station) to allow the selection of the correct recipients (ground users) based on location information and functional identity, provided by the role management and presence applications. The FRMCS system will determine, based on the conditions, which users receive the Working Alone information.
- 23.2.3.3 The FRMCS system notifies the selected end users within a setup time specified as IMMEDIATE (see [QoS]) and establishes the communication with the end user application. The notification can include additional information (e.g. text, voice prompts) which is forwarded to and presented on the end user device to the user.

- 23.2.3.4 The priority of the Working Alone information is managed by the arbitration application. The QoS class of the communication is managed by the QoS class application. The notification has the QoS class which matches the application category of NON-CRITICAL DATA (see [QoS]). The voice communication requests the QoS class which matches the application category of VOICE (see [QoS]) within the FRMCS system.
- 23.2.3.5 The FRMCS system establishes the voice communication within a setup time specified as NORMAL (see [QoS]). The information from the role management and presence application is used to present the identities to the lone worker(s) and ground user (s). The initiating lone worker is indicated to the ground user(s). Also the location of the lone worker(s) in the communication is presented to the ground user (s) which is retrived from the location services application.
- 23.2.3.6 The talker control is managed by the multi user talker control application.
- 23.2.3.7 If the lone worker and/or ground user is connected to more than one lone worker and/or ground user, the data communication is distributed to all of them.
- 23.2.3.8 The communication (voice and data) can be bi-directional or uni-directional.
- 23.2.3.9 The arbitration is managed by the arbitration application.
- 23.2.3.10 The communication is recorded by the Data recording and access to recorded data application.

#### 23.2.4 Post-conditions

- 23.2.4.1 The lone worker and/or the ground user are connected to requested lone worker(s) and/or ground user(s).
- 23.2.4.2 The selected end user(s) has been made aware of Working Alone communication.
- 23.2.4.3 Data and voice can be exchanged between the Working Alone applications.

### 23.2.5 Communication attributes

URS Ref.	Туре	Symmetry Up/Down	Distribution	Latency	Bandwidth	Reliability	Setup	Speed
5.18	Bi- directional Voice	50/50	User-to-User	Normal	Low	High	Normal	High
	Uni- directional Voice	50/50	User-to-User	Normal	Low	High	Normal	High

### 23.2.6 Related URS application interfaces

23.2.6.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application
5.15	Railway emergency communication
5.8	Ground to ground voice communication

6.13	Non-critical real time video
8.3	Role management and presence
8.4	Location services
8.6	Authorisation of data communication
8.7	Authorisation of application
8.8	QoS Class negotiation
8.12	Arbitration
5.20	Data recording and access to recorded data
6.20	Transfer of data

### 23.2.7 HMI related criteria

- 23.2.7.1 When required, the initiation of Working Alone application is achieved with the minimum of interaction for example a single button press.
- 23.2.7.2 Independently of any actions between the user and the end user device, the Working Alone information is always and continuously presented to the user up to the point when the Working Alone application is terminated.
- 23.2.7.3 While the Working Alone application is active on an end user device, the user is still able to use other applications.

# 23.3 Use case: Termination of an Lone Worker Call

### 23.3.1 Description

- 23.3.1.1 The Lone worker is able to leave or terminate the communication.
- 23.3.1.2 The ground user(s) is/are able to either leave or terminate the communication.

### 23.3.2 Pre-conditions

- 23.3.2.1 The initiating application (Lone Worker) is active, it is authorised to use the Working Alone communication and communication is ongoing.
- 23.3.2.2 The receiving applications/ground user(s) (controllers, maintenance teams, emergency services, supervisors) are active, authorised to use the Working Alone communication and communication is ongoing.

### 23.3.3 Service flows

leaving

- 23.3.3.1 The lone worker or the ground user is able to leave the voice communication. When a lone worker has left, the other participants in the communication are informed and can continue the communication if there are still lone worker(s) or ground user(s) involved in the communication.
- 23.3.3.2 The FRMCS system terminates the voice communication if the last lone worker or the ground user has left. All involved users are informed.

termination

- 23.3.3.3 An entitled lone worker or an entitled ground user is able to terminate the communication. Termination may also be done automatically by the application (when certain conditions preprogrammed are met, such as a deregistration to a specific functional identity).
- 23.3.3.4 The FRMCS system terminates the communication. All involved users are informed.

### 23.3.4 Post-conditions

- 23.3.4.1 The selected FRMCS user(s) are aware of the termination of the Working Alone communication.
- 23.3.4.2 Data cannot be exchanged between the Working Alone applications.

### 23.3.5 HMI related criteria

- 23.3.5.1 The leaving or terminating of a communication is achieved with the minimum of interaction (for example, a single button press or selection from a list). Where selection from a list is determined to be the preferred option, then the list is accessed with the minimum of interaction and be intuitive.
- 23.3.5.2 The FRMCS system presents to the user a list of active communications relevant for this user. The user is able to select and connect to this voice communication.

# 23.4 Use case: service interworking and service continuation with GSM-R

### 23.4.1 Description

- 23.4.1.1 For migration purposes the service interworking and service continuation between the GSM-R system and FRMCS system for "Working Alone" application needs to be defined.
- 23.4.1.2 Depending on the migration scenario, a control/supervision center (ground user) can be attached to the FRMCS system, to the GSM-R system or both. The Lone Worker can be attached either in the GSM-R system or in the FRMCS system. Functional identities are applicable in one system only.
- 23.4.1.3 This use case only applies to end user devices supporting both FRMCS and GSM-R systems.

### 23.4.2 Pre-conditions

23.4.2.1 The Lone Worker using GSM-R has access to an application that provides the required functionality (connection to REC/high priority call/ data messages) and that receives the results from external systems that monitor the worker.

### 23.4.3 Service flows

Lone worker attached to GSM-R

- 23.4.3.1 When the lone worker is attached to the GSM-R system and is initiating communication to other lone worker(s) and ground user(s), the GSM-R system will route the communication to other lone worker(s) and the ground user(s) accordingly.
- 23.4.3.2 The lone worker communication is linked together and controlled by the FRMCS system.
- 23.4.3.3 If the lone worker or the ground user is located in the FRMCS system the GSM-R system can only route the communication if it can be reached by an address or identity understood by the GSM-R system. The role management in FRMCS provides the appropriate address or identity e.g. by provide a mapping of GSM-R identities and FRMCS identities.
- 23.4.3.4 The information from the role management and presence application is used to route the communication and to present the identities of both lone worker and ground user.

lone worker attached to FRMCS

- 23.4.3.5 When the lone worker is active in the FRMCS system and is initiating a communication to other lone worker(s) and ground user(s), the FRMCS system will route the communication to other lone worker(s) and ground user(s) accordingly.
- 23.4.3.6 The lone worker communication is linked together and controlled by the FRMCS system.
- 23.4.3.7 The information from the role management and presence application is used to route the communication and to present the identities of both lone worker and ground user. The role management in FRMCS provides the appropriate address or identity e.g. by provide a mapping of GSM-R identities and FRMCS identities.

lone worker moving from GSM-R to FRMCS

23.4.3.8 When the GSM-R user equipment of the lone worker is detached from the GSM-R system, the FRMCS end user device provides service continuation by setting up the communication via the FRMCS system. An interruption of communication is acceptable.

lone worker moving from FRMCS to GSM-R

23.4.3.9 When the FRMCS user equipment of the lone worker is detached from the FRMCS system, the FRMCS end user device provides service continuation by setting up the communication via the GSM-R system. An interruption of communication is acceptable.

23.4.4 Post-conditions

23.4.4.1 None.

23.4.5 Related URS application interfaces

23.4.5.1 None.

23.4.6 HMI related criteria

23.4.6.1 None.

# Voice recording and access to recorded data related use cases

### 24.1 Introduction

In this chapter the use cases related to Voice recording and access are described, the following use cases are identified

- Recording
- · Access of recorded data
- Deletion of recorded data
- Service interworking and service continuation with GSM-R
- 24.2 Use case: Recording
- 24.2.1 Description
- 24.2.1.1 The system is able provide the means to record voice communication and communication related information. The means of recording include user identities, functional identities and location information of all involved users.
- 24.2.1.2 Which voice communication is applicable for recording is configurable. Criteria for recording can be based on different attributes or an combination of those e.g. functional identity, type of communication, location, certain context.
- 24.2.1.3 This use case is available in both on-network and off-network conditions.
- 24.2.2 Pre-conditions
- 24.2.2.1 A voice communication is selected for recording.
- 24.2.3 Service flows
- 24.2.3.1 If marked for recording, recording of the voice communication starts when the voice communication is initiated.
- 24.2.3.2 When the voice communication is terminated the recording stops.
- 24.2.4 Post-conditions
- 24.2.4.1 The recorded voice communication is stored and ready for post-analysis
- 24.2.5 Communication attributes

URS Ref.	Туре	Symmetry Up/Down	Distribution	Latency	Bandwidth	Reliability	Setup	Speed
5.19	Uni- directional Data	N/A	N/A	N/A	N/A	Normal	N/A	Low

- 24.3 Use case: Access to recorded data
- 24.3.1 Description
- 24.3.1.1 The external recording system allows an entitled user to access the recorded voice communication and the related information.
- 24.3.2 Pre-conditions
- 24.3.2.1 A voice communication has been recorded.
- 24.3.3 Service flows
- 24.3.3.1 An entitled user logs into the recording application and is presented with the recordings accessible for him/her.
- 24.3.3.2 The user selects the relevant recording for his/hers needs.
- 24.3.3.3 The search function for recorded voice communication is possible based on certain data, like:
  - Status of the recorded communication
  - Start/end timestamp of the communication
  - Initiator Functional ID, start/end timestamp of his participation in the communication
  - Other Functional ID involved, start/end timestamp of their participation in the communication
  - Type of communication /application
  - Location
  - FRMCS user ID
  - Mobile Equipment ID

### 24.3.4 Post-conditions

24.3.4.1 The recording is marked as accessed and by whom.

- 24.4 Use case: Deletion of recorded data
- 24.4.1 Description
- 24.4.1.1 Recorded voice communication is able to be removed of the external recording system, based on operational rules, deletion can be automatic or manual
- 24.4.2 Pre-conditions
- 24.4.2.1 The time for how long the recorded data is kept has been reached.
- 24.4.3 Service flows

Manual

- 24.4.3.1 An entitled user logs into the external application and is presented with the recordings possible to delete.
- 24.4.3.2 The user selects the recording(s) for deletion.
- 24.4.3.3 The user deletes the selected recorded voice communication and related logged information.

Automatic

- 24.4.3.4 The recorded voice communication and related logged information is deleted from the external recording system, by the recording system without any input from the user.
- 24.4.4 Post-conditions
- 24.4.4.1 The deleted voice communications and related logged information are no longer available.
- 24.4.5 Related URS application interfaces
- 24.4.5.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application
6.20	Transfer of data
8.3	Role Management and presence
8.7	Authorisation of application

### 24.4.6 HMI related criteria

24.4.6.1 Simple HMI interaction: possible to search efficiently among the thousands of records using different search criteria, for example location, phone number, functional identity, group identity, type of communication.

$\circ$	4	_	1.1		A CONTRACT OF THE PARTY OF	and the second second	4.0	2.64	OOM D
24	1	<b>h</b>	TICA CACA:	CARVICA	Intorworking	and service	COntinuation	WITH	
	т.,	J	USE GASE.	3011100		and service	Continuation	VVILII	GOIVI-I L

24.5.1.1 No service interworking and service continuation with GSM-R is required.

# 25 Data recording and access to recorded data

### 25.1 Introduction

In this chapter the use cases related to Data recording and access are described, the following use cases are identified

- Recording
- · Access of recorded data
- Deletion of recorded data
- Service interworking and service continuation with GSM-R
- 25.2 Use case: Recording
- 25.2.1 Description
- 25.2.1.1 The system is able to provide the means to record data communication and communication related information. Video is to be considered as data in this use case. The means of recording include user identities, functional identities and location information of all involved users.
- 25.2.1.2 Which data communication is applicable for recording is configurable. Criteria for recording can be based on different attributes or an combination of those e.g. functional identity, type of call, location, certain context.
- 25.2.1.3 This use case is available in both on-network and off-network conditions.
- 25.2.2 Pre-conditions
- 25.2.2.1 A data communication is selected for recording.
- 25.2.3 Service flows
- 25.2.3.1 If marked for recording, recording of the data communication starts when the data communication is initiated.
- 25.2.3.2 When the data communication is terminated the recording stops.
- 25.2.4 Post-conditions
- 25.2.4.1 The recorded data communication is stored and ready for post-analysis
- 25.2.5 Communication attributes

URS Ref.	Туре	Symmetry Up/Down	Distribution	Latency	Bandwidth	Reliability	Setup	Speed
5.20	Uni- directional Data	N/A	N/A	N/A	N/A	Normal	N/A	Low

- 25.3 Use case: Access to recorded data
- 25.3.1 Description
- 25.3.1.1 The external recording system allows an entitled user to access the recorded data communication and the related information.
- 25.3.2 Pre-conditions
- 25.3.2.1 A data communication has been recorded.
- 25.3.3 Service flows
- 25.3.3.1 An entitled user logs into the recording application and is presented with the recordings accessible for him/her.
- 25.3.3.2 The user selects the relevant recording for his/hers needs.
- 25.3.3.3 The search function for recorded data communication is possible based on certain data, like:
  - Status of the recorded communication
  - Start/end timestamp of the communication
  - Initiator Functional ID, start/end timestamp of his participation in the communication
  - Other Functional ID involved, start/end timestamp of their participation in the communication
  - Type of communication /application
  - Location
  - FRMCS user ID
  - Mobile Equipment ID

### 25.3.4 Post-conditions

25.3.4.1 The recording is marked as accessed and by whom.

- 25.4 Use case: Deletion of recorded data
- 25.4.1 Description
- 25.4.1.1 Recorded data communication is able to be removed of the external recording system, based on operational rules, deletion can be automatic or manual
- 25.4.2 Pre-conditions
- 25.4.2.1 The time for how long the recorded data is kept has been reached.
- 25.4.3 Service flows

Manual

- 25.4.3.1 An entitled user logs into the external application and is presented with the recordings possible to delete.
- 25.4.3.2 The user selects the recording(s) for deletion.
- 25.4.3.3 The user deletes the selected recorded data communication and related logged information.

Automatic

- 25.4.3.4 The recorded data communication and related logged information is deleted from the external recording system, by the recording system without any input from the user.
- 25.4.4 Post-conditions
- 25.4.4.1 The deleted data communications and related logged information are no longer available.
- 25.4.5 Related URS application interfaces
- 25.4.5.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application
6.20	Transfer of data
8.3	Role Management and presence
8.7	Authorisation of application

### 25.4.6 HMI related criteria

25.4.6.1 Simple HMI interaction: possible to search efficiently among the thousands of records using different search criteria, for example location, phone number, functional identity, group identity, type of communication.

$\sim$ $-$		1.1		A Company of the Comp	and the second second	and the second second second	2.4	COLLE
ソム	h	LICA CACA:	CARVICA	Intorworking	I and carvica	COntinuation	with	
25	. U	USE CASE.	SCIVICE	IIIIGI WOLKIII	and service	Continuation	VVILII	GOIVITI 1

25.5.1.1 No service interworking and service continuation with GSM-R is required.

# 26 Shunting data communication related use cases

### 26.1 Introduction

In this chapter the use cases related to shunting data communication are described, the following use cases are identified

- Initiation of a shunting data communication
- Join a shunting data communication
- Leave a shunting data communication
- Service interworking and service continuation with GSM-R

# 26.2 Use case: initiation of a shunting data communication

## 26.2.1 Description

- 26.2.1.1 A user (e.g. the shunting leader) is able to set up an uninterrupted data communication with other shunting users (e.g. the driver) and/or with entitled controller(s)/traffic controll system. The purpose of this data communication is to exchange data required to perform safe shunting movements of trains (e.g. issuing route requests, route confirmation, giving driving commands, confirmation for driving commands, etc.) without the need for voice communication and therefore reduce the amount of voice traffic towards shunting users and controllers.
- 26.2.1.2 This use case is available in both on-network and off-network conditions.

## 26.2.2 Pre-conditions

- 26.2.2.1 The user is authorised to initiate and/or to receive and/or to connect to a shunting data communication. This is managed by the authorisation of data communication application.
- 26.2.2.2 The user is authorised to use the shunting data communication application by the application authorisation of application.

### 26.2.3 Service flows

Shunting team communication

- 26.2.3.1 For the purpose of exchanging data related to shunting movements, the user initiates the shunting data communication. The assured data communication application is used for the shunting data communication. The communication requests the QoS class which matches the application category of CRITICAL DATA (see [QoS]) within the FRMCS system.
- 26.2.3.2 The FRMCS system determines the shunting team members and controller(s) (or traffic control system) to be included into the communication based on the functional identity of the initiator and the functional identities of the other users provided by the role management and presence application.
- 26.2.3.3 The FRMCS system establishes the bearer services required for the data communication for all involved users within a setup time specified as NORMAL (see [QoS]). The information from the role management and presence application is used to present the identities to the shunting team members.
- 26.2.3.4 The arbitration is managed by the arbitration application.

26.2.3.5 The communication is recorded by the Data recording and access to recorded data application.

Shunting team member to driver

- 26.2.3.6 For the purpose of exchanging data related to shunting movements, the user initiates a shunting data communication to a driver by selecting or dialling the driver's functional identity. The assured data communication application is used for the shunting data communication. The communication requests the QoS class which matches the application category of CRITICAL DATA (see [QoS]) within the FRMCS system.
- 26.2.3.7 The FRMCS system establishes the bearer service required for the data communication for the driver and controller(s) (or traffic control system) within a setup time specified as NORMAL (see [QoS]). The information from the role management and presence application is used to present the identities to the shunting team members.
- 26.2.3.8 The arbitration is managed by the arbitration application.
- 26.2.3.9 The communication is recorded by the Data recording and access to recorded data application.

### 26.2.4 Post-conditions

Shunting team communication

26.2.4.1 The shunting team members and controller(s) (or traffic control system) can send and receive data related to shunting movements.

Shunting team member to driver

26.2.4.2 The shunting member, the driver and controller(s) (or traffic control system) can send and receive data related to shunting movements.

### 26.2.5 Communication attributes

URS Ref.	Туре	Symmetry Up/Down	Distribution	Latency	Bandwidth	Reliability	Setup	Speed
5.21	Bi- directional Data	50/50	User-to- User/Multi- user	Low	Low	High	Normal	Low

### 26.2.6 Related URS application interfaces

26.2.6.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application
5.18	Working alone
8.3	Role management and presence
8.4	Location services
8.6	Authorisation of data communication
8.7	Authorisation of application

8.8	QoS Class negotiation
8.12	Arbitration
8.10	Secured Data Communication
5.20	Data recording and access

# 26.2.7 HMI related criteria

26.2.7.1 The user interface of the device used by the shunting team member is adapted to the work environment of trackside.

# 26.3 Use case: join a shunting data communication

# 26.3.1 Description

- 26.3.1.1 An entitled user is able to connect to an ongoing shunting data communication without prior invitation from the shunting team members.
- 26.3.1.2 This use case is available in both on-network and off-network conditions.

#### 26.3.2 Pre-conditions

- 26.3.2.1 The user is authorised to connect to a shunting data communication. This is managed by the authorisation of data communication application.
- 26.3.2.2 The user is authorised to use the shunting data communication application by the application authorisation of application.
- 26.3.2.3 The addressed shunting team member or shunting team is involved in an ongoing shunting data communication.

#### 26.3.3 Service flows

- 26.3.3.1 For the purpose of exchanging data related to shunting movements, the user requests to connect to an ongoing shunting data communication to a shunting team member or a shunting team by selecting or dialling the corresponding functional identity. The assured data communication application is used for the shunting data communication. The communication requests the QoS class which matches the application category of CRITICAL DATA (see [QoS]) within the FRMCS system.
- 26.3.3.2 The FRMCS system connects the user requesting to join to the ongoing shunting data communication within a setup time specified as NORMAL (see [QoS]). The information from the role management and presence application is used to present the identity to the shunting team members.
- 26.3.3.3 The arbitration is managed by the arbitration application.
- 26.3.3.4 The communication is recorded by the Data recording and access to recorded data application.

#### 26.3.4 Post-conditions

26.3.4.1 The user has been connected to the ongoing shunting data communication and can send / receive data related to shunting movements.

#### 26.3.5 HMI related criteria

26.3.5.1 The user interface of the device used by the shunting team member is adapted to the work environment of trackside.

# 26.4 Use case: leave a shunting data communication

# 26.4.1 Description

- 26.4.1.1 A user is able to leave an ongoing shunting data communication (e.g. at end of the shift or in order to connect to another shunting data communication).
- 26.4.1.2 This use case is available in both on-network and off-network conditions.

#### 26.4.2 Pre-conditions

26.4.2.1 The user is involved in an ongoing shunting data communication.

#### 26.4.3 Service flows

- 26.4.3.1 The user requests to leave the ongoing shunting data communication to the FRMCS system.
- 26.4.3.2 The FRMCS system disconnects the user from the ongoing shunting data communication. The information from the role management and presence application is used to inform remaining shunting team members about the disconnection.
- 26.4.3.3 If only one user is remaining in the shunting data communication, the FRMCS system automatically terminates the shunting data communication.

#### 26.4.4 Post-conditions

26.4.4.1 The user is no more involved in the shunting data communication, he can no longer send / receive data related to shunting movements.

#### 26.4.5 HMI related criteria

26.4.5.1 The user interface of the device used by the shunting team member is adapted to the work environment of trackside.

- 26.5 Use case: service interworking and service continuation with GSM-R
- 26.5.1 Description
- 26.5.1.1 For migration purposes the service interworking and service continuation between the GSM-R system and FRMCS system for Shunting data communication needs to be clear.
- 26.5.1.2 This use case only applies to end user devices supporting both FRMCS and GSM-R systems.
- 26.5.1.3 For service interworking and service continuation only the packet switched (PS) bearer service is considered.
- 26.5.2 Pre-conditions
- 26.5.2.1 None.
- 26.5.3 Service flows
  - Initiating Shunting data communication application attached to GSM-R
- 26.5.3.1 When the initiating Shunting data communication application is attached to the GSM-R system and is initiating data communication to another application, the GSM-R system will route the data communication accordingly.
- 26.5.3.2 If the other application is attached to the FRMCS system the GSM-R system can only route the data communication if the destination can be reached by an address or identity understood by the GSM-R system. The role management in FRMCS provides the appropriate address or identity e.g. by providing a mapping of GSM-R identities and FRMCS identities.
- 26.5.3.3 The information from the role management and presence application is used to route the communication and to present the identities.
  - Initiating Shunting data communication application attached to FRMCS
- 26.5.3.4 When the initiating application is attached to the FRMCS system and is initiating data communication to another Shunting data application, the FRMCS system will route the communication accordingly.
- 26.5.3.5 If the other application is attached to the GSM-R system the FRMCS system can only route the data communication if the destination can be reached by an address or identity understood by the FRMCS system. The role management in FRMCS provides the appropriate address or identity e.g. by providing a mapping of GSM-R identities and FRMCS identities.
- 26.5.3.6 The information from the role management and presence application is used to route the communication and to present the identities.
  - Shunting data application moving from GSM-R to FRMCS
- 26.5.3.7 When the Shunting data application is detached from the GSM-R system the FRMCS end user device provides service continuation by setting up the communication via the FRMCS system. An interruption of data communication is acceptable.
  - Shunting data application moving from FRMCS to GSM-R
- 26.5.3.8 When the Shunting data application is detached from the FRMCS system the FRMCS end user device provides service continuation by setting up the communication via the GSM-R system. An interruption of data communication is acceptable.

26.5.4 Post-conditions

26.5.4.1 None.

26.5.5 Related URS application interfaces

26.5.5.1 None.

26.5.6 HMI related criteria

26.5.6.1 None.

# 27 Train Integrity monitoring data communication related use cases

# 27.1 Introduction

In this chapter the use cases related to Train Integrity monitoring data communication are described, the following use cases are identified

- Initiation of an Train Integrity monitoring data communication
- Termination of an Train Integrity monitoring data communication
- Service interworking and service continuation with GSM-R

# 27.2 Description

- 27.2.1.1 The train integrity monitoring system has a reliable communication bearer in order to ensure safety related data be transferred between the components monitoring train integrity. The FRMCS system provides the communication bearer for this data exchange.
- 27.2.1.2 The train integrity monitoring system allows the monitoring of the train intregrity status, to report about the integrity of a train during railway operation. For example with ETCS level 3, letting the onboard and/or the ground system to apply the foreseen safety reaction when the train integrity status is lost or unknown.
- 27.2.1.3 The users in this case are the train integrity units on-board of the train and the ground system. In some implementations, one unit is mounted at the front of the train (and is also connected to the on-board system CCS of the train, to inform the driver in case of loss of integrity), one unit is mounted at the end of the train and optionally units are mounted at other positions of the train. In other implementations all the train integrity units distributes along the train are communicating with a ground system and/or between each other.
- 27.2.1.4 Depending on the implementation of train integrity, data communication for the train integrity monitoring system is required only between the integrity units belonging to the same train or between integrity units and a ground system. The data communication is user-to-user or multi-user communication.
- 27.2.1.5 Depending on the implementation, the train integrity system requires either offnetwork communication or on-network communication.

# 27.3 Use case: Initiation of a Train integrity data communication

# 27.3.1 Description

- 27.3.1.1 The user is authorised to initiate a Train integrity data communication. This is managed by the authorisation of data communication application.
- 27.3.1.2 The user is authorised to use the Train integrity data communication application by the application authorisation of application.
- 27.3.1.3 This use case is available in both on-network and off-network conditions.

#### 27.3.2 Pre-conditions

27.3.2.1 The initiating application is authorised to initiate the Train integrity data communication. This is managed by the authorisation of communication application.

27.3.2.2 The receiving application is authorised to use the Train integrity data communication. This is managed by the authorisation of communication application.

#### 27.3.3 Service flows

- 27.3.3.1 The initiating application initiates the Train integrity data communication to the receiving side. The QoS class of the communication is managed by the QoS class application. The data communication requests the QoS class which matches the application category of CRITICAL DATA (see [QoS]) within the FRMCS system.
- 27.3.3.2 The FRMCS system establishes the bearer service required for the data communication within a setup time specified as NORMAL (see [QoS]).
- 27.3.3.3 The arbitration is managed by the arbitration application.
- 27.3.3.4 The communication is recorded by the Data recording and access to recorded data application .

#### 27.3.4 Post-conditions

- 27.3.4.1 The initating application is connected to the receiving application.
- 27.3.4.2 Data can be exchanged between the Train integrity applications.

#### 27.3.5 Communication attributes

URS Ref.	Туре	Symmetry Up/Down	Distribution	Latency	Bandwidth	Reliability	Setup	Speed
5.22	Bi- directional Data	50/50	User-to- User/Multi- user	Normal	Low	High	Immediate	High

# 27.3.6 Related URS application interfaces

27.3.6.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application
5.20	Data recording and access to recorded data
6.20	Transfer of data
8.6	Authorisation of communication
8.7	Authorisation of application
8.8	QoS Class negotiation
8.12	Arbitration
8.9	Safety application key management communication

# 27.3.7 HMI related criteria

27.3.7.1 None.

- 27.4 Use case: Termination of an Train integrity data communication
- 27.4.1 Description
- 27.4.1.1 The application is able to terminate data communication.
- 27.4.1.2 This use case is available in both on-network and off-network conditions.
- 27.4.2 Pre-conditions
- 27.4.2.1 The Train integrity applications have a data connection initiated.
- 27.4.3 Service flows
- 27.4.3.1 The terminating application terminates the Train integrity data communication with the receiving side application.
- 27.4.3.2 The FRMCS system terminates the bearer service required for the data communication.
- 27.4.4 Post-conditions
- 27.4.4.1 The terminating Train integrity data application is disconnected from the receiving application.
- 27.4.5 HMI related criteria
- 27.4.5.1 None.

$\sim$	_	1.1		the first control of the control of	The second second	4.0	2.64	OOLA D
27	h	LICA CACA!	CARVICA	INTAKWARKINA	and carvica	COntinuation	WITH	
$\leq 1$		USE Case.	3CI VICE	IIILEI WOLKIIIG	and service	continuation	VVILII	GOIVITI 1

27.5.1.1 No service interworking and service continuation with GSM-R is required.

# 28 Public emergency warning related use cases

#### 28.1 Introduction

In this chapter the use cases related to public emergency warning are defined. The following use cases are defined:

- Broadcast of a public emergency warning
- Service interworking and service continuation with GSM-R

# 28.2 Use case: Broadcast of a public emergency warning Use case:

# 28.2.1 Description

28.2.1.1 Public Safety Authority is able to broadcast a public emergency warning to a subset of the civil population based on their location. The subset could include FRMCS users, e.g. based on their location or on their functional identity.

#### 28.2.2 Pre-conditions

- 28.2.2.1 The end user device is logged in into the FRMCS system.
- 28.2.2.2 The FRMCS system is connected directly to PSAPs or is using the public telecommunication network as gateway to PSAPs.
- 28.2.2.3 The user is authorised to recieve a public emergency warning communication. This is managed by the authorisation of data communication application.

#### 28.2.3 Service flows

- 28.2.3.1 The Public Safety Authority (PSA) is able to broadcast textual messages, pictures, audio and video contents to a subset of the FRMCS users. The QoS class of the communication is managed by the QoS class application. The data communication requests the QoS class which matches the application category of CRITICAL DATA (see [QoS]) within the FRMCS system.
- 28.2.3.2 The FRMCS system determines the set of addressed users based on:
  - the emergency location provided by the PSA and/or;
  - functional identities of FRMCS users (e.g. broadcasting only to certain functions) and/or;
  - the position of the FRMCS users (e.g. near to the public emergency);
  - the system configuration.
- 28.2.3.3 The addressed FRMCS users receive the multimedia information from the PSA within a transfer time specified as IMMEDIATE (see [QoS]).
- 28.2.3.4 The arbitration is managed by the arbitration application.
- 28.2.3.5 The data communication is recorded by the data recording and access application.

#### 28.2.4 Post-conditions

28.2.4.1 The addressed FRMCS users have received the public emergency warning.

#### 28.2.5 Communication attributes

URS Ref.	Туре	Symmetry Up/Down	Distribution	Latency	Bandwidth	Reliability	Setup	Speed
5.23	Uni- directional Data	N/A	Multi-user	Low	High	High	Immediate	High

# 28.2.6 Related URS application interfaces

28.2.6.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref 1	Title of related application					
6.19	Messaging services					
8.3	Role management and presence					
8.4	Location services					
8.8	QoS Class negotiation					
8.12	Arbitration					
5.20	Data recording and access					

# 28.2.7 HMI related criteria

28.2.7.1 The end user device is designed in such a way that public emergency warning is notified to the user even if the terminal has a PIN-coded lock of the keypad.

# 28.3 Use case: Service interworking and service continuation with GSM-R

# 28.3.1 Description

28.3.1.1 No service interworking is needed for Public Emergency Warning. There is no equivalent functionality in the GSM-R System.

# 29 On-train outgoing voice communication from train staff towards a ground user related use cases

# 29.1 Introduction

In this chapter the use cases related to on-train outgoing voice communication from train staff towards a ground user are defined. The following use cases are defined:

- Initiation of on-train outgoing voice communication from train staff
- Join an on-train outgoing voice communication from train staff
- Termination of on-train outgoing voice communication from train staff
- Service interworking and service continuation with GSM-R
- 29.2 Use case: Initiation of on-train outgoing voice communication from train staff
- 29.2.1 Description
- 29.2.1.1 The member of train staff is able to initiate a voice communication to any ground user(s) excluding public.
- 29.2.2 Pre-conditions
- 29.2.2.1 The member of train staff is authorised to initiate the voice communication. This is managed by the authorisation of voice communication application.
- 29.2.2.2 The member of train staff is authorised to use the On-train outgoing voice communication from train staff application by the application authorisation of application.
- 29.2.3 Service flows
- 29.2.3.1 A member of the train staff initiates the voice communication to any ground user (one or multiple). The QoS class of the communication is managed by the QoS class application. The voice communication requests the QoS class which matches the application category of VOICE (see [QoS]) within the FRMCS system.
- 29.2.3.2 The FRMCS system establishes the voice communication to the ground user(s) within a setup time specified as NORMAL (see [QoS]). The information from the role management and presence application is used to present the identities to the parties involved.
- 29.2.3.3 The arbitration is managed by the arbitration application.
- 29.2.3.4 The voice communication is recorded by the Voice recording and access to recorded data application.
- 29.2.3.5 The talker control is managed by the multi user talker control application.
- 29.2.4 Post-conditions
- 29.2.4.1 The member of train staff is connected to the requested ground user(s)
- 29.2.5 Communication attributes

	URS Ref.	Туре	Symmetry Up/Down	Distribution	Latency	Bandwidth	Reliability	Setup	Speed
١									

5.24	Bi- directional 50/50 Voice	User-to- User/Multi- user	Low	Low	Normal	Normal	High	
------	-----------------------------------	---------------------------------	-----	-----	--------	--------	------	--

# 29.2.6 Related URS application interfaces

29.2.6.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application
8.11	Inviting-a-user messaging
8.2	Multi-user talker control
8.3	Role management and presence
8.4	Location services
8.5	Authorisation of communication
8.7	Authorisation of application
8.8	QoS Class negotiation
8.12	Arbitration
5.19	Voice recording and access to recorded data

#### 29.2.7 HMI related criteria

29.2.7.1 The initiation of a voice communication is achieved with the minimum of interaction (for example, a single button press or selection from a list). Where selection from a list is determined to be the preferred option, then the list is accessed with the minimum of interaction and be intuitive.

# 29.3 Use case: Join an on-train outgoing voice communication from train staff

# 29.3.1 Description

29.3.1.1 An entitled ground user is able to connect to an ongoing on-train outgoing voice communication from train staff

#### 29.3.2 Pre-conditions

- 29.3.2.1 The ground user is authorised to connect to an on-train outgoing voice communication from train staff. This is managed by the authorisation of voice communication application.
- 29.3.2.2 The ground user is authorised to use the on-train outgoing voice communication from train staff application by the application authorisation of application.
- 29.3.2.3 The addressed member(s) of train staff is/are involved in an ongoing on-train outgoing voice communication from train staff.

#### 29.3.3 Service flows

- 29.3.3.1 The ground user requests to connect to an ongoing on-train outgoing voice communication from train staff to a member(s) of train staff by selecting or dialling the corresponding functional identity. The QoS class of the communication is managed by the QoS class application. The voice communication requests the QoS class which matches the application category of VOICE (see [QoS]) within the FRMCS system.
- 29.3.3.2 The FRMCS system connects the ground user requesting to join to the ongoing ontrain outgoing voice communication from train staff. The information from the role management and presence application is used to present the identity to the users involved. The initiating user is informed if the voice communication is either user-to-user or multi-user.
- 29.3.3.3 The talker control is managed by the multi user talker control application.
- 29.3.3.4 The arbitration is managed by the arbitration application.
- 29.3.3.5 The communication is recorded by the Voice recording and access to recorded data application.

#### 29.3.4 Post-conditions

29.3.4.1 The ground user has been connected to the ongoing on-train outgoing voice communication from train staff.

#### 29.3.5 HMI related criteria

29.3.5.1 Joining of a voice communication is achieved with the minimum of interaction (for example, a single button press or selection from a list). Where selection from a list is determined to be the preferred option, then the list is accessed with the minimum of interaction and be intuitive.

# 29.4 Use case: Termination of on-train outgoing voice communication from train staff

# 29.4.1 Description

- 29.4.1.1 The member of train staff is able to terminate the voice communication towards a ground user(s).
- 29.4.1.2 The ground user(s) is/are able to put on hold, leave or terminate the on-train voice communication from train staff towards a ground user(s).
- 29.4.2 Pre-conditions
- 29.4.2.1 The on-train outgoing voice communication from train staff is ongoing.
- 29.4.3 Service flows

Member of train staff termination

- 29.4.3.1 The member of the train staff is able to terminate the voice communication.
- 29.4.3.2 The FRMCS system terminates the voice communication.

Ground user on hold

- 29.4.3.3 A ground user is able to put the train staff to ground user voice communication on hold in the case that more than one ground user is part of the voice communication.
- 29.4.3.4 After the ground user has put the voice communication on hold, the communication remains in the FRMCS system, and the ground user is able to be part of the communication again.

Ground user leaving

29.4.3.5 A ground user is able to leave the train staff to ground user voice communication in the case that more than one ground user is part of the voice communication.

Ground user termination

- 29.4.3.6 Any ground user is able to terminate the train staff to ground user voice communication.
- 29.4.3.7 The FRMCS system terminates the voice communication. All involved users are informed.
- 29.4.4 Post-conditions
- 29.4.4.1 The on-train outgoing voice communication from train staff is terminated.
- 29.4.5 HMI related criteria
- 29.4.5.1 The termination of a voice communication is achieved with the minimum of interaction (for example, a single button press or selection from a list). Where selection from a list is determined to be the preferred option, then the list is accessed with the minimum of interaction and be intuitive.

- 29.5 Use case: Service interworking and service continuation with GSM-R
- 29.5.1 Description
- 29.5.1.1 For migration purposes the service interworking and service continuation between the GSM-R system and FRMCS system for train staff to ground user(s) voice communication needs to be clear.
- 29.5.1.2 Depending on the migration scenario a ground user can be attached to the FRMCS system, to the GSM-R system or both. The train staff can be attached either in the GSM-R system or in the FRMCS system. Functional identities are applicable in one system only.
- 29.5.1.3 This use case only applies to end user devices supporting both FRMCS and GSM-R systems.
- 29.5.2 Pre-conditions
- 29.5.2.1 None.
- 29.5.3 Service flows

Train staff attached to GSM-R

- 29.5.3.1 When the member of the train staff is attached to the GSM-R system and is initiating voice communication to ground user(s), the GSM-R system will route the voice communication to the ground user(s) accordingly.
- 29.5.3.2 If the ground user is located in the FRMCS system the GSM-R system can only route the call to the ground user if the ground user can be reached by an address or identity understood by the GSM-R system. The role management in FRMCS provides the appropriate address or identity e.g. by provide a mapping of GSM-R identities and FRMCS identities.
- 29.5.3.3 The information from the role management and presence application is used to route the communication and to present the identities of both train staff and ground user.

Train staff attached to FRMCS

29.5.3.4 When the member of train staff is active in the FRMCS system and is initiating voice communication to ground user(s), the FRMCS system will route the communication to the ground user(s) accordingly. The information from the role management and presence application is used to route the communication and to present the identities of both train staff and ground user. The role management in FRMCS provides the appropriate address or identity e.g. by provide a mapping of GSM-R identities and FRMCS identities.

Train staff moving from GSM-R to FRMCS

29.5.3.5 When the GSM-R user equipment of the train staff is detached from the GSM-R system the FRMCS end user device provides service continuation by setting up the communication via the FRMCS system. An interruption of voice communication is acceptable.

Train staff moving from FRMCS to GSM-R

29.5.3.6 When the FRMCS user equipment of the Train staff is detached from the FRMCS system the FRMCS end user device provides service continuation by setting up the communication via the GSM-R system. An interruption of voice communication is acceptable.

29.5.4 Post-conditions

29.5.4.1 None.

29.5.5 Related URS application interfaces

29.5.5.1 None.

29.5.6 HMI related criteria

29.5.6.1 None.

# On-train incoming voice communication from a ground user towards train staff related use cases

# 30.1 Introduction

In this chapter the use cases related to incoming voice communication from ground user towards train staff are defined. The following use cases are defined:

- Initiation of voice communication from ground user towards train staff
- Join an on-train incoming voice communication from a ground user towards train staff
- Termination of voice communication from ground user towards train staff
- Service interworking and service continuation with GSM-R
- 30.2 Use case: Initiation of outgoing voice communication from ground user towards train staff
- 30.2.1 Description
- 30.2.1.1 The ground user is able to initiate a voice communication to a member (one or more) of the train staff. The ground user can be outside FRMCS.
- 30.2.2 Pre-conditions
- 30.2.2.1 The ground user is a FRMCS-user or a user of an external network.
- 30.2.2.2 The ground user is authorised to initiate the voice communication. This is managed by the authorisation of voice communication application.
- 30.2.2.3 The ground user is authorised to use the voice communication from ground user to train staff application by the application authorisation of application.
- 30.2.3 Service flows
  - Ground user to Train Staff
- 30.2.3.1 A ground user initiates the voice communication to a member(s) of the train staff. The QoS class of the communication is managed by the QoS class application. The voice communication requests the QoS class which matches the application category of CRITICAL VOICE (see [QoS]) within the FRMCS system.
- 30.2.3.2 The FRMCS system establishes the voice communication to the member of the train staff within a setup time specified as NORMAL (see [QoS]). The information from the role management and presence application is used to present the identities to the parties involved.
- 30.2.3.3 The arbitration is managed by the arbitration application.
- 30.2.3.4 The talker control is managed by the multi user talker control application.
- 30.2.3.5 The voice communication is recorded by the Voice recording and access to recorded data application.
- 30.2.4 Post-conditions
- 30.2.4.1 The ground user is connected to the requested member of train staff

# 30.2.5 Communication attributes

URS Ref.	Туре	Symmetry Up/Down	Distribution	Latency	Bandwidth	Reliability	Setup	Speed
5.25	Bi- directional Voice	50/50	User-to-User/ Multi-user	Low	Low	High	Normal	High

# 30.2.6 Related URS application interfaces

30.2.6.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application
8.11	Inviting-a-user messaging
8.2	Multi-user talker control
8.2	Role management and presence
8.4	Location services
8.5	Authorisation of voice communication
8.7	Authorisation of application
8.8	QoS Class negotiation
8.12	Arbitration
5.19	Voice recording and access to recorded data

# 30.2.7 HMI related criteria

30.2.7.1 The initiation of a voice communication is achieved with the minimum of interaction (for example, a single button press or selection from a list). Where selection from a list is determined to be the preferred option, then the list is accessed with the minimum of interaction and be intuitive.

# 30.3 Use case: Join an on-train incoming voice communication from a ground user towards train staff

# 30.3.1 Description

30.3.1.1 An member of train staff is able to connect to an ongoing on-train incoming voice communication from a ground user towards train staff

#### 30.3.2 Pre-conditions

- 30.3.2.1 The member of train staff is authorised to connect to an on-train incoming voice communication from a ground user towards train staff. This is managed by the authorisation of voice communication application.
- 30.3.2.2 The member of train staff is authorised to use the on-train incoming voice communication from a ground user towards train staff application by the application authorisation of application.
- 30.3.2.3 The addressed ground user(s) or member of train staff is/are involved in an ongoing on-train incoming voice communication from a ground user towards train staff

#### 30.3.3 Service flows

- 30.3.3.1 The member of train staff requests to connect to an ongoing on-train incoming voice communication from a ground user towards train staff to ground user(s) or member of train staff by selecting or dialling the corresponding functional identity. The QoS class of the communication is managed by the QoS class application. The voice communication requests the QoS class which matches the application category of CRITICAL VOICE (see [QoS]) within the FRMCS system.
- 30.3.3.2 The FRMCS system connects the member of train staff requesting to join to the ongoing on-train incoming voice communication from a ground user towards train staff. The information from the role management and presence application is used to present the identity to the trackside workers. The initiating user is informed if the voice communication is either user-to-user or multi-user.
- 30.3.3.3 The talker control is managed by the multi user talker control application.
- 30.3.3.4 The arbitration is managed by the arbitration application.
- 30.3.3.5 The communication is recorded by the Voice recording and access to recorded data application.

#### 30.3.4 Post-conditions

30.3.4.1 The user has been connected to the ongoing an on-train incoming voice communication from a ground user towards train staff.

# 30.3.5 HMI related criteria

- 30.3.5.1 Joining of a voice communication is achieved with the minimum of interaction (for example, a single button press or selection from a list). Where selection from a list is determined to be the preferred option, then the list is accessed with the minimum of interaction and be intuitive.
- 30.4 Use case: Termination of voice communication from ground user towards train staff

#### 30.4.1 Description

30.4.1.1 The ground user is able to terminate the voice communication towards a member(s) of the train staff.

- 30.4.1.2 The member of the train staff is able to put on hold, leave or terminate the voice communication from a ground user.
- 30.4.2 Pre-conditions
- 30.4.2.1 The ground user to train staff voice communication is ongoing.
- 30.4.3 Service flows

Ground user termination

- 30.4.3.1 The ground user is able to terminate the voice communication.
- 30.4.3.2 The FRMCS system terminates the voice communication.

Member of train staff on hold

- 30.4.3.3 A member of the train staff is able to put the ground user to train staff voice communication on hold (himself in the case of a multi party call or the call itself in the case of a user-user call)
- 30.4.3.4 After the member of the train staff has put the voice communication on hold, the communication remains in the FRMCS system, and the member of the train staff is able to be part of the communication again.

A member of the train staff is leaving

30.4.3.5 A member of the train staff is able to leave the ongoing communication in the case that more than one member of the train staff is part of the voice communication.

Member of the train staff termination

- 30.4.3.6 A member of the train staff is able to terminate the voice communication.
- 30.4.3.7 The FRMCS system terminates the voice communication. All involved users are informed.
- 30.4.4 Post-conditions
- 30.4.4.1 The ground user to train staff voice communication is terminated.
- 30.4.5 HMI related criteria
- 30.4.5.1 The initiation of a voice communication is achieved with the minimum of interaction (for example, a single button press or selection from a list). Where selection from a list is determined to be the preferred option, then the list is accessed with the minimum of interaction and be intuitive.

- 30.5 Use case: Service interworking and service continuation with GSM-R
- 30.5.1 Description
- 30.5.1.1 For migration purposes the service interworking and service continuation between the GSM-R system and FRMCS system for the ground user to member(s) of train staff voice communication needs to be clear.
- 30.5.1.2 Depending on the migration scenario a ground user can be attached to the FRMCS system, to the GSM-R system or both. The train staff can be attached either in the GSM-R system or in the FRMCS system. Functional identities are applicable in one system only.
- 30.5.1.3 This use case only applies to end user devices supporting both FRMCS and GSM-R systems.
- 30.5.2 Pre-conditions
- 30.5.2.1 None.
- 30.5.3 Service flows
  - Ground user attached to GSM-R
- 30.5.3.1 When the ground user is attached to the GSM-R system and is initiating voice communication to a member of the train staff, the GSM-R system will route the voice communication to member of the train staff accordingly.
- 30.5.3.2 If member of the train staff is located in the FRMCS system the GSM-R system can only route the call if the member of the train staff can be reached by an address or identity understood by the GSM-R system. The role management in FRMCS provides the appropriate address or identity e.g. by provide a mapping of GSM-R identities and FRMCS identities.
- 30.5.3.3 The information from the role management and presence application is used to route the communication and to present the identities of both train staff and ground user.
  - Ground user attached to FRMCS
- 30.5.3.4 When the ground user is active in the FRMCS system and is initiating voice communication to member of the train staff, the FRMCS system will route the communication accordingly. The information from the role management and presence application is used to route the communication and to present the identities of both train staff and ground user. The role management in FRMCS provides the appropriate address or identity e.g. by provide a mapping of GSM-R identities and FRMCS identities.
  - Ground user moving from GSM-R to FRMCS
- 30.5.3.5 When the GSM-R user equipment of the ground user is detached from the GSM-R system the FRMCS end user device provides service continuation by setting up the communication via the FRMCS system. An interruption of voice communication is acceptable.
  - Ground user moving from FRMCS to GSM-R
- 30.5.3.6 When the FRMCS user equipment of the Ground user is detached from the FRMCS system the FRMCS end user device provides service continuation by setting up the communication via the GSM-R system. An interruption of voice communication is acceptable.

30.5.4 Post-conditions

30.5.4.1 None.

30.5.5 Related URS application interfaces

30.5.5.1 None.

30.5.6 HMI related criteria

30.5.6.1 None.

# 31 Railway staff emergency communication related use cases

#### 31.1 Introduction

In this chapter the use cases related to Railway staff emergency communication are defined. The following use cases are defined:

- Initiation of the Railway staff emergency alert
- New entry to the Railway staff emergency alert
- Changing of the Railway staff emergency alert
- Leaving of the Railway staff emergency alert
- Termination of the Railway staff emergency alert;
- Initiation of Railway staff emergency voice communication
- Termination of Railway staff emergency voice communication
- Initiation of Data communication during Railway staff emergency Alert
- Service interworking and service continuation with GSM-R
- Interface to train borne recorder

# 31.2 General overview

Railway staff emergency communication serves two main purposes in railway staff operation

- 1. Alert railway staff and railway staff emergency operator about an non-Railway Emergency situation. Receiving such an alert will result in immediate actions to be taken by the recipients. These actions are defined by operational rules, e.g. immediate on-site assistance, alerting or supporting non-railway authorities, violence reporting, etc.
- 2. Based on operational rules, additional information about the emergency situation can be exchanged using voice and/or data communication.

While the alert needs to be setup very fast, the information part that may follow is less time critical and not always required. The Railway staff emergency communication consists of:

- a) A mandatory alert phase indicating the emergency situation:
- b) An optional voice and/or data communication phase depending on operational situation and / or operational rules.

The alert receives priority handling which is linked to the application category within the FRMCS system (see [QoS]).

When an Railway staff emergency alert is triggered by a user, the FRMCS system determines which other FRMCS users, next to the railway staff emergency operator, receive an alert, depending on following conditions:

- Location, accuracy of the location, track, functional identity, direction of movement, speed of the initiator
- Location, accuracy of the location, track, functional identity, direction of movement, speed of other users which are concerned of the emergency situation
- User selection of predefined receiver user or user group(s)
- Any additional information provided by the initiator

In the alert condition, only users who may be involved in the emergency situation receive an alert. Figure x-x outlines this principle.

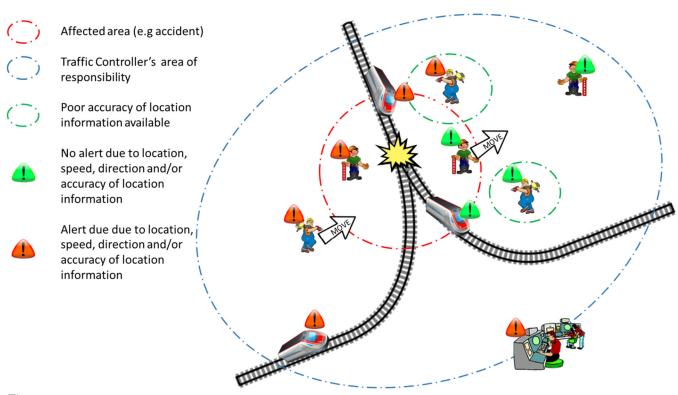


Figure x-x

Independently of any ongoing interactions between the user and the end user device, the Railway staff emergency alert has to be continuously indicated to the user up to the condition when the Railway staff emergency situation is over (alert is terminated).

While an alert is active, the FRMCS system continuously check's

- if additional users do match to the conditions of the Railway staff emergency alert. The user entered the emergency area/location/etc. will receive the alert and
- If a user does not fulfil the conditions to be alerted, because the user has moved away from the emergency situation. In this case, the alert will be withdrawn from this user.

A Railway staff emergency operator is be able to change the conditions while an alert is active.

While an alert is active on an end user device, the user is still be able to establish and/or receive other types of communications. If a Railway staff emergency voice communication is established by the user of an ongoing alert, any other ongoing voice communications are terminated.

# 31.3 Use case: Initiation of the Railway staff emergency alert

# 31.3.1 Description

31.3.1.1 A user is able to initiate the Railway staff emergency alert to users that is informed about the emergency situation, e.g. that fulfil the conditions of the emergency situation. The user can be e.g. railway staff, train staff, a driver, an external system, a Railway staff emergency operator or maintenance staff.

#### 31.3.2 Pre-conditions

31.3.2.1 The user is authorised to initiate the Railway staff emergency alert. This is managed by the application authorisation of application.

#### 31.3.3 Service flows

31.3.3.1 In any service flow, a mobile user, e.g. railway staff, train staff, a driver, maintenance staff, is not able to leave or terminate the Railway staff emergency alert.

Operator initiated

- 31.3.3.2 The Railway staff emergency operator provides the FRMCS system with conditions (e.g. train number/area/track section/station/platform number/functional identity) to select the appropriate recepients of the Railway staff emergency alert. The criteria can be pre-configured for comfortable selection by the operator. The operator may need to confirm the selection on his end user device.
- 31.3.3.3 The FRMCS system will determine, based on the conditions, which users receive the Railway staff emergency alert.
- 31.3.3.4 The FRMCS system alerts the selected users within a setup time specified as IMMEDIATE (see [QoS]). The alert notification can include additional information (e.g. text, voice prompts) which is forwarded to and presented on the end user device to the user.
- 31.3.3.5 The priority of the Railway staff emergency alert is managed by the arbitration application. The QoS class of the communication is managed by the QoS class application. The alert has the QoS class which matches the application category of CRITICAL DATA (see [QoS]).
- 31.3.3.6 In the case that a mobile user is already active in another Railway staff emergency alert, the new alert is not send by the FRMCS system to the end user device. The waiting alert is sent as soon as the user is no longer involved in an ongoing Railway staff emergency alert.
- 31.3.3.7 The operator(s) are informed which users are alerted.
- 31.3.3.8 The end user device of an operator shows multiple alerts when active.
- 31.3.3.9 The communication is recorded by the Data recording and access to recorded data application.

External system initiated

- 31.3.3.10 The external system provides the FRMCS system with conditions (e.g. train number/area/track section/station/platform number/functional identity) to select the appropriate recepients of the Railway staff emergency alert.
- 31.3.3.11 The FRMCS system will determine, based on the conditions, which users receive the Railway staff emergency alert.
- 31.3.3.12 The FRMCS system alerts the selected users within a setup time specified as IMMEDIATE (see [QoS]). The alert notification can include additional information

- (e.g. text, voice prompts) which is forwarded to and presented on the end user device to the user.
- 31.3.3.13 The priority of the Railway staff emergency alert is managed by the arbitration application. The QoS class of the communication is managed by the QoS class application. The alert has the QoS class which matches the application category of CRITICAL DATA (see [QoS]).
- 31.3.3.14 In the case that a mobile user is already active in another Railway staff emergency alert, the new alert is not send by the FRMCS system to the end user device. The waiting alert is sent as soon as the user is no longer involved in an ongoing Railway staff emergency alert.
- 31.3.3.15 The operator(s) are informed which users are alerted and which external system initiated the alert.
- 31.3.3.16 The end user device of a operator shows multiple alerts when active.
- 31.3.3.17 The communication is recorded by the Data recording and access to recorded data application.

Mobile user initiated

- 31.3.3.18 A mobile user, like railway staff, train staff, a driver or maintenance staff, presses the Railway staff emergency device (see also 20.3.7.1).
- 31.3.3.19 The end user equipment requests the alert communication to the FRMCS system.
- 31.3.3.20 The FRMCS system will determine the users to be included in the Railway staff emergency alert. This is based on the location information of the initiator and certain criteria (e.g. functional identity, track area, accuracy of the location, maximum track speed, station, platform, location information of users).
- 31.3.3.21 The FRMCS system alerts the selected users within a setup time specified as IMMEDIATE (see [QoS]). The alert notification can include additional information (e.g. text, voice prompts) which is forwarded to and presented on the end user device to the user.
- 31.3.3.22 The priority of the Railway staff emergency alert is managed by the arbitration application. The QoS class of the communication is managed by the QoS class application. The alert has the QoS class which matches the application category of CRITICAL DATA (see [QoS]).
- 31.3.3.23 In the case that a mobile user is already active in another Railway staff emergency alert, the new alert is not send by the FRMCS system to the end user device. The waiting alert is sent as soon as the user is no longer involved in an ongoing Railway emergency alert.
- 31.3.3.24 The operator(s) are informed which users are alerted, including which user initiated the alert.
- 31.3.3.25 The end user device of a operator shows multiple alerts when active.
- 31.3.3.26 The communication is recorded by the Data recording and access to recorded data application.
- 31.3.4 Post-conditions
- 31.3.4.1 The applicable receipients are alerted.
- 31.3.5 Communication attributes

URS Ref.	Туре	Symmetry Up/Down	Distribution	Latency	Bandwidth	Reliability	Setup	Speed
	Bi- directional Voice	50/50	User-to- User/Multi- user	Low	Low	High	Immediate	High
5.26	Bi- directional data	50/50	User-to- User/Multi- user	Low	Low	High	Immediate	High

# 31.3.6 Related URS application interfaces

31.3.6.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application
8.3	Role management and presence
8.4	Location services
8.5	Authorisation of voice communication
8.6	Authorisation of data communication
8.7	Authorisation of application
8.8	QoS Class negotiation
8.12	Arbitration
5.20	Data recording and access to recorded data
6.20	Transfer of data

#### 31.3.7 HMI related criteria

- 31.3.7.1 The initiation of a Railway staff emergency alert is achieved with the minimum of interaction (for example, a single button press or selection from a list). Where selection from a list is determined to be the preferred option, then the list is accessed with the minimum of interaction and be intuitive.
- 31.3.7.2 On the end user device the initiation of a Railway staff emergency alert is protected against unintentional use.
- 31.3.7.3 Independently of any actions between the user and the end user device, the Railway staff emergency alert is always and continuously presented to the user up to the point when the Railway staff emergency alert is terminated.
- 31.3.7.4 While an alert is active on an end user device, the user is still able to use other applications.
- 31.3.7.5 A mobile user, e.g. a railway staff, train staff, a driver or maintenance staff is not able to leave or terminate the Railway staff emergency alert.

# 31.4 Use case: New entry to the Railway staff emergency alert

31.4.1.1 The FRMCS system continuously check's if additional users meet the conditions of the Railway staff emergency alert. The user can be e.g. a mobile user, a driver, maintenance staff or an operator. The additional users receive the Railway staff emergency alert.

#### 31.4.2 Pre-conditions

- 31.4.2.1 The user is authorised to receive the Railway staff emergency alert. This is managed by the application authorisation of application.
- 31.4.2.2 There is an ongoing Railway staff emergency alert.
- 31.4.2.3 The FRMCS system continuously check's if additional users meet the conditions of the Railway staff emergency alert. The user can be e.g. railway staff, train staff, a driver, maintenance staffor an operator.
- 31.4.2.4 The FRMCS system alerts the selected users within a setup time specified as IMMEDIATE (see [QoS]). The alert notification can include additional information (e.g. text, voice prompts) which is forwarded to and presented on the end user device to the user.
- 31.4.2.5 The priority of the Railway staff emergency alert is managed by the arbitration application. The QoS class of the communication is managed by the QoS class application. The alert has the QoS class which matches the application category of CRITICAL DATA (see [QoS]).
- 31.4.2.6 In the case of an ongoing Railway staff emergency voice communication, the additional user is added to the ongoing voice communication.
- 31.4.2.7 In the case that a mobile user is already active in another Railway staff emergency alert, the new alert is not send by the FRMCS system to the end user device. The waiting alert is sent as soon as the user is no longer involved in an ongoing Railway staff emergency alert.
- 31.4.2.8 A mobile user, e.g. railway staff, train staff, a driver or maintenance staff, is not able to leave or terminate the Railway staff emergency alert.
- 31.4.2.9 The operator(s) are informed which users are additionally alerted.
- 31.4.2.10 The end user device of a operator shows multiple alerts when active.
- 31.4.2.11 The communication is recorded by the Data recording and access to recorded data application.

#### 31.4.3 Post-conditions

31.4.3.1 The additional receipients are alerted.

# 31.4.4 Related URS application interfaces

31.4.4.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application
5.20	Data recording and access to recorded data
6.20	Transfer of data
8.3	Role management and presence

8.4	Location services
8.5	Authorisation of voice communication
8.6	Authorisation of data communication
8.7	Authorisation of application
8.8	QoS Class negotiation
8.12	Arbitration

#### 31.4.5 HMI related criteria

- 31.4.5.1 Independently of any actions between the user and the end user device, the Railway staff emergency alert is always and continuously presented to the user up to the point when the Railway staff emergency alert is terminated.
- 31.4.5.2 While an alert is active on an end user device, the user is still able to use other applications.
- 31.4.5.3 A mobile user, e.g. railway staff, train staff, a driver or maintenance staff, is not able to leave or terminate the Railway staff emergency alert.

# 31.5 Use case: Changing of the Railway staff emergency alert

# 31.5.1 Description

31.5.1.1 The Railway staff emergency operator or an external system is able to provide the FRMCS system with a changed conditions selecting the appropriate recepients of the Railway staff emergency alert. The change may result in an expansion or a reduction of users that are informed about the emergency situation.

#### 31.5.2 Pre-conditions

- 31.5.2.1 The user is authorised to initiate the Railway staff emergency alert. This is managed by the application authorisation of application.
- 31.5.2.2 There is an onging Railway staff emergency alert.

#### 31.5.3 Service flows

- 31.5.3.1 The Railway staff emergency operator or an external system is able to provide the FRMCS system with a changed conditions selecting the appropriate recepients of the Railway staff emergency alert. The change of the selection could imply the merge of multiple ongoing Railway staff emergency alerts.
- 31.5.3.2 The FRMCS system continuously check's if users still meet the conditions of the Railway staff emergency alert. The user can be e.g. railway staff, train staff, a driver, maintenance staff or an operator.
- 31.5.3.3 The FRMCS system sends the Railway staff emergency alert to all additional selected users within a setup time specified as IMMEDIATE (see [QoS]). The alert notification can include additional information (e.g. text, voice prompts) which is forwarded to and presented on the end user device to the user.
- 31.5.3.4 The priority of the Railway staff emergency alert is managed by the arbitration application. The QoS class of the communication is managed by the QoS class application. The alert has the QoS class which matches the application category of CRITICAL DATA (see [QoS]).

- 31.5.3.5 In the case of an ongoing Railway staff emergency voice communication, the additional user is added to the ongoing voice communication.
- 31.5.3.6 In the case of an ongoing Data communication during Railway staff emergency alert, the additional user is added to the ongoing Data communication during Railway staff emergency alert.
- 31.5.3.7 In the case that a mobile user is already active in another Railway staff emergency alert, the new alert is not send by the FRMCS system to the end user device. The waiting alert is sent as soon as the user is no longer involved in an ongoing Railway staff emergency alert.
- 31.5.3.8 A mobile user, e.g. railway staff, train staff, a driver or maintenance staff, is not able to leave or terminate the Railway staff emergency alert.
- 31.5.3.9 The FRMCS system informs the users for whom the Railway staff emergency alert is no longer applicable and terminates the alert of these users. The termination notification of the alert can include additional information (e.g. text, voice prompts) which is presented on the end user device to the user.
- 31.5.3.10 The priority of the Railway staff emergency alert is managed by the arbitration application. The QoS class of the communication is managed by the QoS class application. The alert has the QoS class which matches the application category of CRITICAL DATA (see [QoS]).
- 31.5.3.11 In the case a user no longer meets the conditions of the Railway staff emergency alert and if there is an ongoing Railway staff emergency voice communication, the user will remain in the ongoing Railway staff emergency voice communication.
- 31.5.3.12 The operator is informed which users are still part of the Railway staff emergency alert. Users who have left the railway emergency alert are separatly indicated to the operator.
- 31.5.3.13 The end user device of a operator shows multiple alerts when active.
- 31.5.3.14 The communication is recorded by the Data recording and access to recorded data application.

#### 31.5.4 Post-conditions

31.5.4.1 The appropriate receipients are still alerted, while non-appropriate recipients are not alerted anymore.

### 31.5.5 Related URS application interfaces

31.5.5.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application
5.20	Data recording and access to recorded data
6.20	Transfer of data
8.3	Role management and presence
8.4	Location services
8.5	Authorisation of voice communication
8.6	Authorisation of data communication

8.7	Authorisation of application
8.8	QoS Class negotiation
8.12	Arbitration

# 31.5.6 HMI related criteria

- 31.5.6.1 Independently of any actions between the user and the end user device, the Railway staff emergency alert is always and continuously presented to the user up to the point when the Railway staff emergency alert is terminated.
- 31.5.6.2 While an alert is active on an end user device, the user is still able to use other applications.
- 31.5.6.3 If the Railway staff emergency alert is terminated at the end user device, this is explicitly shown to the user.
- 31.5.6.4 A mobile user, e.g. railway staff, train staff, a driver or maintenance staff, is not able to leave or terminate the Railway staff emergency alert.

# 31.6 Use case: Leaving of the Railway staff emergency alert

# 31.6.1 Description

31.6.1.1 The FRMCS system continuously check's if users no longer meet the conditions of the Railway staff emergency alert and therefore the FRMCS system terminates the alert at the end user device of the left users. The user can be e.g. railway staff, train staff, a driver, maintenance staff or an Railway staff emergency operator.

#### 31.6.2 Pre-conditions

- 31.6.2.1 The user is authorised to receive the Railway staff emergency alert. This is managed by the application authorisation of application.
- 31.6.2.2 There is an onging Railway staff emergency alert.

#### 31.6.3 Service flows

Mobile user

- 31.6.3.1 The FRMCS system continuously check's if users no longer meet the conditions of the Railway staff emergency alert. The user can be e.g. railway staff, train staff, a driver, maintenance staff or an operator.
- 31.6.3.2 The FRMCS system informs the users for whom the Railway staff emergency alert is no longer applicable and terminates the alert of these users. The termination notification of the alert can include additional information (e.g. text, voice prompts) which is presented on the end user device to the user.
- 31.6.3.3 A mobile user, e.g. railway staff, train staff, a driver or maintenance staff, is not able to leave or terminate the Railway staff emergency alert via actions on the end user device.
- 31.6.3.4 The priority of the Railway staff emergency alert is managed by the arbitration application. The QoS class of the communication is managed by the QoS class application. The alert has the QoS class which matches the application category of CRITICAL DATA (see [QoS]).
- 31.6.3.5 In the case a user no longer meets the conditions of the Railway staff emergency alert and if there is an ongoing Railway staff emergency voice communication, the user will remain in the ongoing Railway staff emergency voice communication.
- 31.6.3.6 The operator is informed which users are still part of the Railway staff emergency alert. Users who have left the Railway staff emergency alert are separatly indicated to the operator.
- 31.6.3.7 The communication is recorded by the Data recording and access to recorded data application.

Operator

- 31.6.3.8 An entitled operator is able to leave the Railway staff emergency alerts, unless the leaving operator is the last operator in the alert.
- 31.6.3.9 The operator also leaves the ongoing Railway staff emergency voice communication.
- 31.6.3.10 The end user device of a operator shows multiple alerts when active.
- 31.6.3.11 The communication is recorded by the Data recording and access to recorded data application.

#### 31.6.4 Post-conditions

31.6.4.1 The appropriate recipients are still alerted, while non-appropriate recipients are not alerted anymore.

# 31.6.5 Related URS application interfaces

31.6.5.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application
5.20	Data recording and access to recorded data
6.20	Transfer of data
8.3	Role management and presence
8.4	Location services
8.5	Authorisation of voice communication
8.6	Authorisation of data communication
8.7	Authorisation of application
8.8	QoS Class negotiation
8.12	Arbitration

#### 31.6.6 HMI related criteria

- 31.6.6.1 If the Railway staff emergency alert is terminated at the end user device, this is explicitly shown to the user.
- 31.6.6.2 A mobile user, e.g. railway staff, train staff, a driver or maintenance staff, is not able to leave or terminate the Railway staff emergency alert via actions on the end user device.

# 31.7 Use case: Termination of the Railway staff emergency alert

# 31.7.1 Description

31.7.1.1 The Railway staff emergency operator is able to terminate the Railway staff emergency alert.

#### 31.7.2 Pre-conditions

- 31.7.2.1 The operator is authorised to terminate the Railway staff emergency alert.
- 31.7.2.2 There is an ongoing Railway staff emergency alert.

#### 31.7.3 Service flows

- 31.7.3.1 The operator terminates the Railway staff emergency alert. A mobile user, e.g. railway staff, train staff, a driver or maintenance staff, is not able to terminate the Railway staff emergency alert via actions on the end user device.
- 31.7.3.2 The FRMCS system sends a termination notification to all users involved in the Railway staff emergency. The termination notification can include additional information (e.g. text, voice prompts) which is presented on the end user device to the user.
- 31.7.3.3 The priority of the termination of the Railway staff emergency alert is managed by the arbitration application. The QoS class of the communication is managed by the QoS class application. The termination of the alert has the QoS class which matches the application category of CRITICAL DATA (see [QoS]).
- 31.7.3.4 When the operator terminated the Railway staff emergency alert, in the case of manual initiation of Railway staff emergency voice communication, an ongoing Railway staff emergency voice communication is not automatically terminated. On the end user device this can be a separate action for the operator or can be triggered as a combined action with the termination of the alert.
- 31.7.3.5 The communication is recorded by the Data recording and access to recorded data application.

#### 31.7.4 Post-conditions

31.7.4.1 The Railway emergency alert is terminated.

# 31.7.5 Related URS application interfaces

31.7.5.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application
5.20	Data recording and access to recorded data
6.20	Transfer of data
8.3	Role management and presence
8.4	Location services
8.5	Authorisation of voice communication
8.6	Authorisation of data communication
8.7	Authorisation of application

8.8	QoS Class negotiation
8.12	Arbitration

# 31.7.6 HMI related criteria

- 31.7.6.1 The end user device explicitly showns the termination of the Railway staff emergency alert to the user.
- 31.7.6.2 A mobile user, e.g. railway staff, train staff, a driver or maintenance staff, is not able to terminate the Railway staff emergency alert via actions on the end user device.

# 31.8 Use case: Initiation of railway staff emergency voice communication

# 31.8.1 Description

31.8.1.1 Based on operational rules, additional information about the emergency situation can be exchanged using voice communication. E.g the initiator of the Railway staff emergency voice communication may inform other involved users about the emergency situation.

#### 31.8.2 Pre-conditions

31.8.2.1 The Railway staff emergency alert is active.

#### 31.8.3 Service flows

Automatic initiation of Railway staff emergency Voice Communication

- 31.8.3.1 After activation of the Railway staff emergency alert, the FRMCS system automatically initiates voice communication.
- 31.8.3.2 All the users that are part of an active Railway staff emergency alert are included in the voice communication.
- 31.8.3.3 The Railway staff emergency voice communication does not interrupt the Railway staff emergency alert, but is able to pre-empt any other ongoing voice communication.
- 31.8.3.4 The FRMCS system establishes the Railway staff emergency voice communication within a setup time specified as IMMEDIATE (see [QoS]). The information from the role management and presence application is used to present the identities to the users involved in the communication.
- 31.8.3.5 The location of the initiator of the Railway staff emergency voice communication is presented to the operator. The location information is retrieved from the location services application.
- 31.8.3.6 The multi user talker control application is used in Railway staff emergency voice communication.
- 31.8.3.7 The precedence handling of the incoming Railway staff emergency voice communication for both the operator(s) and mobile users is managed by the arbitration application. The QoS class of the communication is managed by the QoS class application. The Railway staff emergency voice communication has the QoS class which matches the application category of CRITICAL VOICE (see [QoS]).
- 31.8.3.8 The communication is recorded by the Voice recording and access to recorded data application.
- 31.8.3.9 The end user device of a controller shows multiple Railway staff emergency voice communications when active.

Manual initiation of Railway staff emergency voice vommunication

- 31.8.3.10 Any user with an active Railway staff emergency alert is able to initiate voice communication by a simple user action.
- 31.8.3.11 All the users receiving the active Railway staff emergency alert are included in the voice communication.
- 31.8.3.12 The Railway staff emergency voice communication does not interrupt the Railway staff emergency alert, but pre-empt any other ongoing voice communication.

- 31.8.3.13 The FRMCS system establishes the Railway staff emergency voice communication within a setup time specified as IMMEDIATE (see [QoS]). The information from the role management and presence application is used to present the identities to the users involved in the communication.
- 31.8.3.14 The location of the initiator of the Railway staff emergency voice communication is presented to the operator. The location information is retrieved from the location services application.
- 31.8.3.15 The multi user talker control application is used in Railway staff emergency voice communication.
- 31.8.3.16 The handling of the incoming Railway staff emergency voice communication for both the operator(s) and mobile users is managed by the arbitration application. The QoS class of the communication is managed by the QoS class application. The Railway staff emergency voice communication has the QoS class which matches the application category of CRITICAL VOICE (see [QoS]).
- 31.8.3.17 The communication is recorded by the Voice recording and access to recorded data application.
- 31.8.3.18 The end user device of a controller shows multiple Railway staff emergency voice communications when active.
- 31.8.4 Post-conditions
- 31.8.4.1 The Railway staff emergency voice communication is active.
- 31.8.5 Related URS application interfaces
- 31.8.5.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application					
5.19	Voice recording and access to recorded data					
8.2	Multi user talker control					
8.3	Role management and presence					
8.4	Location services					
8.5	Authorisation of voice communication					
8.7	Authorisation of application					
8.8	QoS Class negotiation					
8.12	Arbitration					

#### 31.8.6 HMI related criteria

- 31.8.6.1 The ongoing Railway staff emergency voice communication is clearly indicated visually to the users.
- 31.8.6.2 The user is able to initiate Railway staff emergency voice communication by a simple user action.

# 31.9 Use case: Termination of railway staff emergency voice communication

# 31.9.1 Description Pre-conditions

31.9.1.1 Only the Railway staff emergency operator(s) is/are able to put on hold, leave or terminate the Railway staff emergency voice communication. A mobile user is not able to put a Railway staff emergency voice communication on hold, to leave or to terminate.

#### 31.9.2 Pre-conditions

31.9.2.1 The Railway staff emergency voice communication is ongoing.

#### 31.9.3 Service flows

31.9.3.1 In the case a user no longer meets the conditions of the Railway staff emergency alert and if there is an ongoing Railway staff emergency voice communication, the user will remain in the ongoing Railway staff emergency voice communication.

Operator on hold

- 31.9.3.2 An operator is able to put the Railway staff emergency voice communication on hold.
- 31.9.3.3 After the operator has put the Railway staff emergency voice communication on hold, the communication remains active in the FRMCS system. The operator is able to revert back to the communication again.

Operator leaving

31.9.3.4 An entitled operator is able to leave the Railway staff emergency voice communication unless the leaving operator is the last operator involved in the Railway staff emergency voice communication.

Operator termination

- 31.9.3.5 An entiltled operator is able to terminate the Railway staff emergency voice communication.
- 31.9.3.6 The FRMCS system terminates the Railway staff emergency voice communication.

  All involved users are informed.

# 31.9.4 Post-conditions

31.9.4.1 A operator has left, put on hold or terminated the Railway staff emergency voice communication.

#### 31.9.5 Related URS application interfaces

31.9.5.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application
8.3	Role management and presence
8.5	Authorisation of voice communication
8.7	Authorisation of application

# 31.9.6 HMI related criteria

- 31.9.6.1 A mobile user is not able to put a Railway staff emergency voice communication on hold, to leave or to terminate.
- 31.9.6.2 The termination, leaving and putting hold the Railway staff emergency voice communication is achieved with the minimum of interaction (for example, a single button press or selection from a list).

# 31.10 Use case: Initiation of Data communication during Railway staff Emergency Alert

# 31.10.1 Description

31.10.1.1 Based on operational rules, additional information about the emergency situation can be exchanged using data communication. A system or a user is able to send the additional information (e.g. text, voice prompts).

#### 31.10.2 Pre-conditions

31.10.2.1 The Railway staff emergency alert is active.

#### 31.10.3 Service flows

- 31.10.3.1 A mobile user, operator or an external system is able to send additional information (e.g. text, voice prompts).
- 31.10.3.2 All the users receive the additional information.
- 31.10.3.3 The FRMCS system establishes the data communication within a setup time specified as IMMEDIATE (see [QoS]). The information from the role management and presence application is used to present the identities to the users involved in the communication.
- 31.10.3.4 The location of the initiator of the data communication is presented to a mobile user, controller or to an external system. The location information is retrieved from the location services application.
- 31.10.3.5 The handling of the incoming data communication is managed by the arbitration application. The data communication has a high priority, but lower than the Railway staff emergency voice communication.
- 31.10.3.6 It is possible to receive data communication during Railway staff emergency voice communication.
- 31.10.3.7 In the case of an ongoing Data communication during Railway staff emergency alert, the additional user is added to the ongoing Data communication during Railway staff emergency alert.
- 31.10.3.8 The communication is recorded by the Data recording and access to recorded data application.

# 31.10.4 Post-conditions

31.10.4.1 Data communication is initiated.

#### 31.10.5 Related URS application interfaces

31.10.5.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application
5.20	Data recording and access to recorded data
6.20	Transfer of data
8.3	Role management and presence
8.4	Location services
8.5	Authorisation of data communication

8.7	Authorisation of application
8.8	QoS Class negotiation
8.12	Arbitration

# 31.10.6 HMI related criteria

- 31.10.6.1 Independently on any actions between the user and the end user device, the additional information provided by data communication is presented to the user.
- 31.10.6.2 The user is able to send additional information by data communication using simple user actions e.g by selecting predefined messages.

# 31.11 Use case: Service interworking and service continuation with GSM-R

31.11.1.1 There is no GSM-R counterpart for the FRMCS Railway staff emergency communication. No interworking with GSM-R is required.

# 31.12 Use case: Interface to train borne recorder

# 31.12.1 Description

31.12.1.1 The end user device provides an information about Railway staff emergency communication to the train borne recorder or other equipment via a dedicated interface.

# 31.12.2 Pre-conditions

31.12.2.1 The device is switched on.

#### 31.12.3 Service flows

- 31.12.3.1 The following events on the end user device related to the Railway staff emergency communication is provided to the train borne recorder:
  - Initiation of the Railway staff emergency alert
  - Reception of the Railway staff emergency alert
  - Leaving of the Railway staff emergency alert
  - Termination of the Railway staff emergency alert
  - Initiation of Railway staff emergency voice communication
  - Termination of Railway staff emergency voice communication

#### 31.12.4 Post-conditions

31.12.4.1 User actions related to the Railway staff emergency communication have been provided to the train borne recorder.

# 32 Critical real time video related use cases

#### 32.1 Introduction

- 32.1.1.1 In this chapter the use cases related to Critical real time video communication are described, the following use cases are identified.
  - Initiation of a Critical real time video communication
  - Termination of a Critical real time video communication
  - Service interworking and service continuation with GSM-R

# 32.2 Description

- 32.2.1.1 The video image quality depends on the application needs, e.g. lip reading, pattern detection.
- 32.2.1.2 Video based supervision for rail operational purposes requires also the support of Real time video capabilities of the FRMCS system. Multiple recipients may use the real time video for different purposes, or video, lidar or radar data may be automatically processed, e.g. for automated reaction to hazards in GoA3/GoA4.
- 32.2.1.3 The users in this case are applications both onboard of the train and on the ground, for example users in a train control center.
- 32.2.1.4 For real time video communication, both video and audio information are combined (from user perspective).
- 32.2.1.5 "Video images" may also refer to data coming from other sources, e.g. lidar and/or radar sensors.

#### 32.3 Use case: Initiation of a Critical real time video communication.

#### 32.3.1 Pre-conditions

- 32.3.1.1 The initiating application is authorised to initiate the real time video communication.
- 32.3.1.2 The receiving application(s) is authorised to use the real time video communication.
- 32.3.1.3 This use case is available in both on-network and off-network conditions.

#### 32.3.2 Service flows

- 32.3.2.1 The initiating application or FRMCS user requests a user-to-user real time video data communication to the receiving side. The QoS class of the communication is managed by the QoS class application. The video communication requests the QoS class which matches the application category of CRITICAL VIDEO or VERY CRITICAL VIDEO (see [QoS]) within the FRMCS system, depending on the application needs.
- 32.3.2.2 The video quality requested to the FRMCS system by the initiating application or FRMCS user is checked by the FRMCS application.
- 32.3.2.3 If the requested quality can be reached, the FRMCS system establishes the real time video data communication with a setup time specified as IMMEDIATE (see [QoS]).
- 32.3.2.4 During the real time video communication the FRMCS application constantly monitors the quality. If the delivered quality of the real time video data communication changes, the application or the FRMCS user is informed about the

- change. The application or the FRMCS user may decide to change the quality of the real time video data communication, depending on the applications needs.
- 32.3.2.5 If authorized, the real time video communication is recodred by the data recording and access to recorded data application.
- 32.3.2.6 The arbitration is managed by the arbitration application.
- 32.3.3 Post-conditions
- 32.3.3.1 Depending on the QoS class offered and the application or an FRMCS user's decision data communication is setup.

# 32.3.4 Communication attributes

URS Ref.	Туре	Symmetry Up/Down	Distribution	Latency	Bandwidth	Reliability	Setup	Speed
5.27	Bi- directional Data	95/5	User-to- User/Multi- user	Low	High	High	Normal	High

# 32.3.5 Related URS application interfaces

32.3.5.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application
5.20	Data recording and access
6.20	Transfer of data
8.3	Role management and presence
8.4	Location services
8.6	Authorisation of data communication
8.7	Authorisation of application
8.8	QoS Class negotiation
8.12	Arbitration

#### 32.3.6 HMI related criteria

32.3.6.1 None.

- 32.4 Use case: Termination of a Critical real time video data communication
- 32.4.1 Pre-conditions
- 32.4.1.1 There is an ongoing real time video data communication.
- 32.4.1.2 This use case are available in both on-network and off-network conditions.
- 32.4.2 Service flows
- 32.4.2.1 The applications or FRMCS users involved terminate the real time video data communication
- 32.4.3 Post-conditions
- 32.4.3.1 The real time video data communication is terminated. The application or the FRMCS user is informed about the termination.
- 32.4.4 HMI related criteria
- 32.4.4.1 None.

32.5	Use case:	service	interworking	and	service	continuation	with	GSM-R
32.5.1.1	No requirem	ents.						

# 33 Critical advisory messaging services – safety related – related use cases

# 33.1 Introduction

In this chapter the use cases related to Critical advisory messaging services – safety related-communication are described; the following use cases are identified:

- Initiation of Critical advisory messaging services communication
- Termination of Critical advisory messaging services communication
- · Service interworking and service continuation with GSM-R

# 33.2 Use case: Initiation of Critical advisory messaging services – safety related – communication

# 33.2.1 Description

33.2.1.1 It is possible to initiate data communication to exchange Critical advisory information among railway users in order to, for example, provide safety related instructions/information from a controller to a driver (e.g. written order, to inform about traffic disturbances, a change in the maximum authorised speed), provide information on how to proceed during an emergency, confirm to the controller the readiness of the train to start, exchange information between control centers on the traffic situation, etc. Messages can be exchanged on user-to-user or on multi-user level.

#### 33.2.2 Pre-conditions

- 33.2.2.1 The initiating application is authorised to initiate Critical advisory messaging services safety related communication. This is managed by the authorisation of data communication application.
- 33.2.2.2 The receiving application is authorised to use Critical advisory messaging services safety related communication.

#### 33.2.3 Service flows

- 33.2.3.1 The initiating application initiates the Critical advisory messaging services safety related communication to the receiving side. The communication requests the QoS class which matches the application category of CRITICAL DATA (see [QoS]) within the FRMCS system.
- 33.2.3.2 The FRMCS system establishes the bearer service required for the data communication within a setup time specified as IMMEDIATE (see [QoS]).
- 33.2.3.3 The arbitration is managed by the arbitration application.
- 33.2.3.4 The communication is recorded by the Data recording and access to recorded data application.

#### 33.2.4 Post-conditions

- 33.2.4.1 The initating application is connected to the receiving application.
- 33.2.4.2 Data can be exchanged between the Critical advisory messaging services safety related applications.

# 33.2.5 Communication attributes

URS Ref.	Туре	Symmetry Up/Down	Distribution	Latency	Bandwidth	Reliability	Setup	Speed
5.28	Bi- directional Data	50/50	User-to-User/ Multi-user	Normal	Low	High	Immediate	High

# 33.2.6 Related URS application interfaces

33.2.6.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application						
8.3	Role management and presence						
8.4	Location services						
8.6	Authorisation of data communication						
8.7	Authorisation of application						
8.8	QoS Class negotiation						
8.10	Secure data communication						
8.12	Arbitration						
5.20	Data recording and access						
6.20	Transfer of data						

# 33.2.7 HMI related criteria

33.2.7.1 The instructions for the users are displayed on a dedicated HMI or on a multipurpose HMI

- 33.3 Use case: Termination of Critical advisory messaging services safety related communication
- 33.3.1 Description
- 33.3.1.1 It is possible to terminate the Critical advisory messaging services safety related-communication.
- 33.3.2 Pre-conditions
- 33.3.2.1 The Critical advisory messaging services communication applications have a data communication initiated.
- 33.3.2.2 Both applications are authorised to use the Critical advisory messaging services communication.
- 33.3.3 Service flows
- 33.3.3.1 The terminating application terminates the Critical advisory messaging services communication with the receiving side application.
- 33.3.4 Post-conditions
- 33.3.4.1 The terminating Critical advisory messaging services communication application is disconnected from the receiving application.
- 33.3.4.2 Data cannot be exchanged between the Critical advisory messaging services communication applications.
- 33.3.5 HMI related criteria
- 33.3.5.1 The termination of the communication is achieved with the minimum of interaction.

- 33.4 Use case: service interworking and service continuation with GSM-R
- 33.4.1 Description
- 33.4.1.1 For migration purposes the service interworking and service continuation between the GSM-R system and FRMCS system for Infrastructure telemetry communication needs to be clear.
- 33.4.1.2 This use case only applies to end user devices supporting both FRMCS and GSM-R systems.
- 33.4.1.3 For service interworking and service continuation only the packet switched (PS) bearer service is considered.
- 33.4.2 Pre-conditions
- 33.4.2.1 None.
- 33.4.3 Service flows
  - Initiating Critical advisory messaging services safety related communication application attached to GSM-R
- 33.4.3.1 When the initiating Critical advisory messaging services safety related communication application is attached to the GSM-R system and is initiating data communication to another application, the GSM-R system will route the data communication accordingly.
- 33.4.3.2 If the other application is attached to the FRMCS system the GSM-R system can only route the data communication if the destination can be reached by an address or identity understood by the GSM-R system. The role management in FRMCS provides the appropriate address or identity e.g. by providing a mapping of GSM-R identities and FRMCS identities.
- 33.4.3.3 The information from the role management and presence application is used to route the communication and to present the identities.
  - Initiating Critical advisory messaging services safety related communication application attached to FRMCS
- 33.4.3.4 When the initiating Critical advisory messaging services safety related communication application is attached to the FRMCS system and is initiating data communication to another Infrastructure telemetry application, the FRMCS system will route the communication accordingly.
- 33.4.3.5 If the other application is attached to the GSM-R system the FRMCS system can only route the data communication if the destination can be reached by an address or identity understood by the FRMCS system. The role management in FRMCS provides the appropriate address or identity e.g. by providing a mapping of GSM-R identities and FRMCS identities.
- 33.4.3.6 The information from the role management and presence application is used to route the communication and to present the identities.
  - Critical advisory messaging services safety related communication application moving from GSM-R to FRMCS
- 33.4.3.7 When the Critical advisory messaging services safety related communication application is detached from the GSM-R system the FRMCS end user device provides service continuation by setting up the communication via the FRMCS system. An interruption of data communication is acceptable.

- Critical advisory messaging services safety related communication application moving from FRMCS to GSM-R
- 33.4.3.8 When the Critical advisory messaging services safety related communication application is detached from the FRMCS system the FRMCS end user device provides service continuation by setting up the communication via the GSM-R system. An interruption of data communication is acceptable.
- 33.4.4 Post-conditions
- 33.4.4.1 None.
- 33.4.5 Related URS application interfaces
- 33.4.5.1 None.
- 33.4.6 HMI related criteria
- 33.4.6.1 None.

# 34 Virtual Coupling data communication related use cases

#### 34.1 Introduction

In this chapter the use cases related to Virtual Coupling data communication are described; the following use cases are identified

- Initiation of a Virtual Coupling data communication
- Termination of a Virtual Coupling data communication
- Service interworking and service continuation with GSM-R

# 34.2 Description

- 34.2.1.1 The Vitual Coupling system shall have a reliable communication bearer in order to ensure that the safety related data is transferred between the components making part of the Virtual Coupling system. The FRMCS system provides the communication bearer for this data exchange.
- 34.2.1.2 The Virtual Coupling system allows the shortening of the distance between succesive trains by mutually sharing information about their acceleration and braking, permitting these trains to move together as if they were physically coupled.
- 34.2.1.3 The users in this case are the Virtual Coupling units on-board of the train: one unit is mounted at the front of the train (and may be also connected to the on-board ATC system of the train), and one unit is mounted at the end of the train. In some implementations, the user may also be the ground system.
- 34.2.1.4 Depending on the implementation of Virtual Coupling, data communication for the Virtual Coupling system is required only between the units belonging to the consecutive trains or between the units on the trains and a ground system. The data communication is user-to-user or multi-user communication.
- 34.2.1.5 Depending on the implementation, the Virtual Coupling system requires either offnetwork communication or on-network communication.

# 34.3 Use case: Initiation of a Virtual Coupling data communication

# 34.3.1 Description

- 34.3.1.1 The user is authorised to initiate a Virtual Coupling data communication. This is managed by the authorisation of data communication application.
- 34.3.1.2 The user is authorised to use the Virtual Coupling data communication application by the application authorisation of application.

#### 34.3.2 Pre-conditions

- 34.3.2.1 The initiating application is authorised to initiate the Virtual Coupling data communication. This is managed by the authorisation of communication application.
- 34.3.2.2 The receiving application is authorised to use the Virtual Coupling data communication. This is managed by the authorisation of communication application.
- 34.3.2.3 This use case is available in both on-network and off-network conditions.

#### 34.3.3 Service flows

- 34.3.3.1 The initiating application initiates the Virtual Coupling data communication to the receiving side. The QoS class of the communication is managed by the QoS class application. The data communication requests the QoS class which matches the application category of CRITICAL DATA (see [QoS]) within the FRMCS system.
- 34.3.3.2 The FRMCS system establishes the bearer service required for the data communication within a setup time specified as NORMAL (see [QoS]).
- 34.3.3.3 The arbitration is managed by the arbitration application.
- 34.3.3.4 The communication is recorded by the Data recording and access to recorded data application .

#### 34.3.4 Post-conditions

- 34.3.4.1 The initating application is connected to the receiving application.
- 34.3.4.2 Data can be exchanged between the Virtual Coupling applications.

#### 34.3.5 Communication attributes

URS Ref.	Туре	Symmetry Up/Down	Distribution	Latency	Bandwidth	Reliability	Setup	Speed
5.29	Bi- directional Data	50/50	User-to- User/Multi- user	Low	Low	High	Normal	High

# 34.3.6 Related URS application interfaces

34.3.6.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application						
5.20	Data recording and access to recorded data						
5.22	Train integrity						
6.20	Transfer of data						
8.3	Role management and presence						
8.4	Location services						
8.5	Authorisation of communication						
8.7	Authorisation of application						
8.8	Prioritisation						
8.9	Safety application key management communication						

# 34.3.7 HMI related criteria

34.3.7.1 None.

- 34.4 Use case: Termination of a Virtual Coupling data communication
- 34.4.1 Description
- 34.4.1.1 The application is able to terminate data communication.
- 34.4.2 Pre-conditions
- 34.4.2.1 The Virtual Coupling applications have a data connection initiated.
- 34.4.2.2 This use case is available in both on-network and off-network conditions.
- 34.4.3 Service flows
- 34.4.3.1 The terminating application terminates the Virtual Coupling data communication with the receiving side application.
- 34.4.3.2 The FRMCS system terminates the bearer service required for the data communication.
- 34.4.4 Post-conditions
- 34.4.4.1 The terminating Virtual Coupling data application is disconnected from the receiving application.
- 34.4.5 HMI related criteria
- 34.4.5.1 None.

-	5 4			1.1		4.00	10.0			4.0	2.4	
٠,	34	<i> </i>	<b>-</b>	TICA CACA.	CARVICA	INTARWA	rkina	200	CARVICA	continuation	With	
v	ノコ		,	USE Case.	3011100	II ILGI VV	n Kili iu	anu	3011100	Continuation	VVILII	GOIVI-I I

34.5.1.1 No service interworking and service continuation with GSM-R is required.

# On-train wireless backbone communications related use cases

# 35.1 Introduction

In this chapter the use cases related to the wireless backbone communications are described, the following use cases are identified

- Initiation of an on-train wireless backbone communication
- Termination of an on-train wireless backbone communication
- Service interworking and service continuation with GSM-R

# 35.2 Use case: Initiation of an on-train wireless backbone communication

# 35.2.1 Description

35.2.1.1 It is possible to initiate an on-train wireless backbone communication between several on-train wireless backbone nodes in order to transport a communication from one rolling stock element towards one or several others.

#### 35.2.2 Pre-conditions

- 35.2.2.1 The initiating user is authorised to initiate an on-train wireless backbone communication. This is managed by the authorisation of applications.
- 35.2.2.2 The receiving user is authorised to receive an on-train wireless backbone communication.
- 35.2.2.3 All on-train wireless backbone nodes are linked to form an on-train wireless backbone communication network, on a single train.<sup>2</sup>
- 35.2.2.4 This use case is available in both on-network and off-network conditions.

#### 35.2.3 Service flows

- 35.2.3.1 The initiating user initiates an on-train wireless backbone communication to the other user. The communication requests the QoS class which matches the application category of the transported communication.
- 35.2.3.2 The FRMCS system establishes the bearer service required for the data communication within a setup time specified as NORMAL (see [QoS]).

#### 35.2.4 Post-conditions

35.2.4.1 The initiating user is connected to the user(s) which is (were) addressed by the ontrain wireless backbone communication.

#### 35.2.5 Communication attributes

URS Type Symmetry Distribution Latency Bandwidth Reliability Setup Speed

Ref. Up/Down

<sup>&</sup>lt;sup>2</sup> It is preferred that the linking is performed by a self-discovery mechanism. This mechanism is performed continuously.

5.30	Bi- directional data	50/50	User-to- User/Multiuser	Low	High	High	Normal	High
------	----------------------------	-------	----------------------------	-----	------	------	--------	------

# 35.2.6 Related URS application interfaces

35.2.6.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application				
5.20	Data recording and access				
6.20	Transfer of data				
8.3	Role management and presence				
8.4	Location services				
8.5	Authorisation of communication				
8.7	Authorisation of application				
8.8	QoS Class Negotiation				
8.12	Arbitration				

# 35.2.7 HMI related criteria

35.2.7.1 None.

- 35.3 Use case: Termination of an on-train wireless backbone communication
- 35.3.1 Description
- 35.3.1.1 The application is able to terminate on-train wireless backbone communication.
- 35.3.2 Pre-conditions
- 35.3.2.1 The on-train wireless backbone communication is initiated.
- 35.3.2.2 This use case is available in both on-network and off-network conditions.
- 35.3.3 Service flows
- 35.3.3.1 The users involved terminate the on-train wireless backbone communication.
- 35.3.4 Post-conditions
- 35.3.4.1 The communication resources previously allocated for the requesting end user application are available.
- 35.3.5 HMI related criteria
- 35.3.5.1 None.

35.4	Use case:	Service	interworking	and service	continuation	with GSM-R
------	-----------	---------	--------------	-------------	--------------	------------

35.4.1.1 No service interworking and service continuation with GSM-R is required.

# 36 Train parking protection related use cases

# 36.1 Introduction

In this chapter the use cases related to train parking protection are defined. The following use cases are defined:

- Setting train parking protection
- Changing train parking protection
- Revoking train parking protection
- Service interworking and service continuation with GSM-R

# 36.2 Use case: Setting train parking protection

#### 36.2.1 Description

36.2.1.1 A user shall be able to set relevant information about train parking protection for a specific train. Setting can be done manually or by reading sensor information.

#### 36.2.2 Pre-conditions

36.2.2.1 The user is authorised to initiate the setting of train parking protection . This is managed by the authorisation of communication application.

#### 36.2.3 Service flows

- 36.2.3.1 The user selects the relevant location (location+track) out of a predefined list.
- 36.2.3.2 The user may enter additional information about the wagon set like the previous/upcomming train running number or the Train Transport ID.
- 36.2.3.3 The user enters the used handbrakes of a specific vehicle.
- 36.2.3.4 The user enters the number of used drag shoes/wedges for a specific axle.

#### 36.2.4 Post-conditions

36.2.4.1 All means of parking protection are entered in the system.

#### 36.2.5 Communication attributes

URS Ref.	Туре	Symmetry Up/Down	Distribution	Latency	Bandwidth	Reliability	Setup	Speed
	Bi-	50/50		Normal	Low	High	Normal	Normal
5.32	directional		User-to-User					
	Data							

#### 36.2.6 Related URS application interfaces

36.2.6.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application					
8.2	Role management and presence					
8.4	Location services					
8.5	Authorisation of communication					

8.7	Authorisation of application				
8.8	QoS Class Negotiation				
5.20	Data recording and access				

# 36.2.7 HMI related criteria

36.2.7.1 The train parking protection shall be achieved with the minimum of interaction (for example, a single button press or selection from a list). Where selection from a list is determined to be the preferred option, then the list shall be accessed with the minimum of interaction and be intuitive.

- 36.3 Use case: Changing train parking protection
- 36.3.1 Description
- 36.3.1.1 A user shall be able to change relevant information about train parking protection for a specific train. Changing can be done manually or by reading sensor information.
- 36.3.2 Pre-conditions
- 36.3.2.1 The user is authorised to initiate the changing of train parking protection . This is managed by the authorisation of communication application.
- 36.3.3 Service flows
- 36.3.3.1 The user selects a specific train or wagon set by using:
  - Train running number or
  - Train Transport ID or
  - Location+track
- 36.3.3.2 The user changes additional information about the wagon set like the train running number or the Train Transport ID.
- 36.3.3.3 The user changes the used handbrakes of a specific vehicle.
- 36.3.3.4 The user changes the number of used drag shoes/wedges for a specific axle.
- 36.3.4 Post-conditions
- 36.3.4.1 All means of parking protection are entered in the system.
- 36.3.5 HMI related criteria
- 36.3.5.1 The train parking protection shall be achieved with the minimum of interaction (for example, a single button press or selection from a list). Where selection from a list is determined to be the preferred option, then the list shall be accessed with the minimum of interaction and be intuitive.

- 36.4 Use case: Revoking train parking protection
- 36.4.1 Description
- 36.4.1.1 A user shall be able to revoke relevant information about train parking protection for a specific train. Revoking can be done manually or by reading sensor information
- 36.4.2 Pre-conditions
- 36.4.2.1 The user is authorised to initiate the revokement of train parking protection. This is managed by the authorisation of communication application.
- 36.4.3 Service flows
- 36.4.3.1 The user selects a specific train or wagon set by using:
  - Train running number or
  - Train Transport ID or
  - Location+track
- 36.4.3.2 The user revokes all means of train parking protection for the previous selection.
- 36.4.4 Post-conditions
- 36.4.4.1 All means of parking protection are revoked from the system.
- 36.4.5 HMI related criteria
- 36.4.5.1 The train parking protection shall be achieved with the minimum of interaction (for example, a single button press or selection from a list). Where selection from a list is determined to be the preferred option, then the list shall be accessed with the minimum of interaction and be intuitive.

36.5 Use case: service interworking and service continuation with GSM-R

36.5.1.1 No service interworking and service continuation with GSM-R is required.

# 37 Multi-Train voice communication for drivers excluding ground user(s) related use cases

# 37.1 Introduction

In this chapter the use cases related to Multi-train voice communication for drivers excluding ground user(s) are defined. The following use cases are defined:

- Initiation of Multi-train voice communication for drivers excluding ground user(s) communication
- Join a Multi-train voice communication for drivers excluding ground user(s) communication
- Terminate a Multi-train voice communication for drivers excluding ground user(s) communication
- Service interworking and service continuation with GSM-R
- 37.2 Use case: Initiation of Multi-train voice communication for drivers excluding ground user(s) communication
- 37.2.1 Description
- 37.2.1.1 A driver is able to initiate a voice communication to other drivers.
- 37.2.2 Pre-conditions
- 37.2.2.1 The driver is authorised to initiate the voice communication. This is managed by the authorisation of voice communication application.
- 37.2.2.2 The driver is authorised to use the Multi-train voice communication for drivers excluding ground user(s) application by the application authorisation of application.
- 37.2.3 Service flows
- 37.2.3.1 The driver initiates the communication to the (other) driver(s). The priority of the communication is managed by the arbitration application. The QoS class of the communication is managed by the QoS class application. The voice communication has the QoS class which matches the application category of CRITICAL VOICE (see [QoS]) within the FRMCS system.
- 37.2.3.2 The FRMCS system determines the driver(s) to be included in the communication, based on:
  - location information of all users provided by the locations services application, or
  - functional identity of all drivers provided by the role management and presence application, or
  - a combination of location information and the functional identities of all drivers.
- 37.2.3.3 The FRMCS system establishes the voice communication within a setup time specified as NORMAL (see [QoS]). The information from the role management and presence application is used to present the identities to the driver(s). The initiating driver is indicated to the driver(s). Also the location of the driver(s) in the communication is presented.

- 37.2.3.4 The FRMCS system continuously check's if additional driver meet the conditions of the Multi-train voice communication for drivers excluding ground user(s) communication. If the conditions are met, the driver(s) will be added to the ongoing communication.
- 37.2.3.5 The talker control is managed by the multi user talker control application.
- 37.2.3.6 Arbitration is handled by the arbitration application
- 37.2.3.7 The communication is recorded by the Voice recording and access to recorded data application.
- 37.2.4 Post-conditions
- 37.2.4.1 The driver is connected to requested driver(s).

# 37.2.5 Communication attributes

URS Ref.	Туре	Symmetry Up/Down	Distribution	Latency	Bandwidth	Reliability	Setup	Speed
6.3	Bi- directional Voice	50/50	Multi-user	Low	Low	High	Normal	High

# 37.2.6 Related URS application interfaces

37.2.6.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application				
8.11	Inviting-a-user messaging				
8.2	Multi-user talker control				
8.3	Role management and presence				
8.4	Location services				
8.5	Authorisation of voice communication				
8.7	Authorisation of application				
8.8	QoS Class negotiation				
8.12	Arbitration				
5.19	Voice recording and access to recorded data				

#### 37.2.7 HMI related criteria

37.2.7.1 The initiation of a voice communication is achieved with the minimum of interaction (for example, a single button press or selection from a list). Where selection from a list is determined to be the preferred option, then the list is accessed with the minimum of interaction and be intuitive.

# 37.3 Use case: join an on-going Multi-train voice communication for drivers excluding ground user(s) communication

# 37.3.1 Description

- 37.3.1.1 An entitled user is automatically connecting to the ongoing multi-train voice communication when meeting conditions based on location and/or functional identities.
- 37.3.1.2 An entitled user may also request to connect to an ongoing multi-train voice communication, from which it has left, when meeting the conditions based on location and/or functional identities.

#### 37.3.2 Pre-conditions

- 37.3.2.1 The user is authorised to connect to a voice communication for drivers excluding ground user(s). This is managed by the authorisation of voice communication application.
- 37.3.2.2 The user is authorised to use the voice communication for drivers excluding ground user(s) application by the application authorisation of application.
- 37.3.2.3 There is an ongoing voice communication for drivers excluding ground user(s) communication.

#### 37.3.3 Service flows

- 37.3.3.1 A driver meets the criteria (location and/or functional identity) for beeing involved in the ongoing voice communication for drivers excluding ground user(s). The application sends automatically the request to connect to the ongoing voice communication for drivers excluding ground user(s) or the driver sends this request by selecting or dialling the corresponding functional identity.
- 37.3.3.2 The FRMCS system connects the driver to the ongoing voice communication for drivers excluding ground user(s) communication.
- 37.3.3.3 The identity of involved drivers are presented to the parties in the call.
- 37.3.3.4 The talker control is managed by the multi user talker control application.
- 37.3.3.5 The arbitration is managed by the arbitration application.
- 37.3.3.6 The communication is recorded by the Voice recording and access to recorded data application.

#### 37.3.4 Post-conditions

37.3.4.1 The driver has been connected to the voice communication for drivers excluding ground user(s) communication.

#### 37.3.5 HMI related criteria

37.3.5.1 None.

- 37.4 Use case: Terminate a Multi-train voice communication for drivers excluding ground user(s) communication
- 37.4.1 Description
- 37.4.1.1 The initiating driver is able to put on hold, leave or terminat the voice communication.
- 37.4.1.2 The receiving driver(s) is/are able to either put on hold, leave or terminate the voice communication.
- 37.4.2 Pre-conditions
- 37.4.2.1 The driver to driver voice communication is ongoing.
- 37.4.3 Service flows

Driver on hold

- 37.4.3.1 The driver is able to put the voice communication on hold.
- 37.4.3.2 After the driver has put the voice communication on hold, the communication remains in the FRMCS system, and the driver is able to return to the communication again. When put on hold the other participants in the communication are informed and can continue the communication.

Driver leaving

- 37.4.3.3 The driver is able to leave the voice communication When a driver has left the other participants in the communication are informed and can continue the communication if there are still driver(s) involved in the communication.
- 37.4.3.4 The FRMCS system terminates the voice communication if the second last driver has left. All involved drivers are informed.

Driver termination

- 37.4.3.5 Any driver is able to terminate the voice communication.
- 37.4.3.6 The FRMCS system terminates the voice communication. All involved users are informed.

Driver remaining

- 37.4.3.7 In the case a driver no longer meets the conditions of the Multi-train voice communication for drivers excluding ground user(s) communication, the driver will be presented with the options to remain in the voice communication or to leave the voice communication.
- 37.4.3.8 Depending on the option selected by the driver, thet FRMCS system either remains the voice communication or removes the driver from the voice communication.
- 37.4.4 Post-conditions
- 37.4.4.1 A driver has left the communication or the system has terminated the communication.
- 37.4.5 Related URS application interfaces
- 37.4.5.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.
- 37.4.6 HMI related criteria
- 37.4.6.1 The initiation of a voice communication is achieved with the minimum of interaction (for example, a single button press or selection from a list). Where selection from a

list is determined to be the preferred option, then the list is accessed with the minimum of interaction and be intuitive.

- 37.5 Use case: Service interworking and service continuation with GSM-R
- 37.5.1 Description
- 37.5.1.1 For migration purposes the service interworking and service continuation between the GSM-R system and FRMCS system for Multi-train voice communication for drivers excluding ground user(s) communication needs to be defined.
- 37.5.1.2 Depending on the migration scenario a driver can be attached to the FRMCS sytsemt or to the GSM-R system. Functional identities are applicable in one system only.
- 37.5.1.3 This use case only applies to end user devices supporting both FRMCS and GSM-R systems.
- 37.5.2 Pre-conditions
- 37.5.2.1 None.
- 37.5.3 Service flows

Driver attached to GSM-R

- 37.5.3.1 When the driver is attached to the GSM-R system and is initiating voice communication to other driver(s), the GSM-R system will route the voice communication to other driver(s) accordingly.
- 37.5.3.2 The Multi-train voice communication for drivers excluding ground user(s) communication is linked together and controlled by the FRMCS system.
- 37.5.3.3 Service interworking between the talker control in the GSM-R system and the FRMCS system is required, but without changing the GSM-R system.
- 37.5.3.4 If the driver is located in the FRMCS system the GSM-R system can only route the call if it can be reached by an address or identity understood by the GSM-R system. The role management in FRMCS provides the appropriate address or identity e.g. by provide a mapping of GSM-R identities and FRMCS identities.
- 37.5.3.5 The information from the role management and presence application is used to route the communication and to present the identities of driver.

Driver attached to FRMCS

- 37.5.3.6 When the driver is active in the FRMCS system and is initiating voice communication to other drivers, the FRMCS system will route the communication to the otherother drivers accordingly.
- 37.5.3.7 The Multi-train voice communication for drivers excluding ground user(s) communication is linked together and controlled by the FRMCS system.
- 37.5.3.8 Service interworking between the talker control in the GSM-R system and the FRMCS system is required, but without changing the GSM-R system.
- 37.5.3.9 The information from the role management and presence application is used to route the communication and to present the identities of the driver. The role management in FRMCS provides the appropriate address or identity e.g. by provide a mapping of GSM-R identities and FRMCS identities.

Driver moving from GSM-R to FRMCS

37.5.3.10 When the GSM-R user equipment of the driver is detached from the GSM-R system the FRMCS end user device provides service continuation by setting up the communication via the FRMCS system. An interruption of voice communication is acceptable.

# Driver moving from FRMCS to GSM-R

- 37.5.3.11 When the FRMCS user equipment of the driver is detached from the FRMCS system the FRMCS end user device provides service continuation by setting up the communication via the GSM-R system. An interruption of voice communication is acceptable.
- 37.5.4 Post-conditions
- 37.5.4.1 None.
- 37.5.5 Related URS application interfaces
- 37.5.5.1 None.
- 37.5.6 HMI related criteria
- 37.5.6.1 None.

## 38 On-train voice communication related use cases

#### 38.1 Introduction

In this chapter the use cases related to on-train voice communication are defined. The following use cases are defined:

- Initiation of an on-train voice communication
- Leave of an on-train voice communication
- Join an on-train voice communication
- Termination of an on-train voice communication
- Service interworking and service continuation with GSM-R

## 38.2 Use case: Initiation of an on-train voice communication

## 38.2.1 Description

- 38.2.1.1 On-train voice communication serves different purposes in passenger railway operations:
  - Exchange of information between on-train users for example in case of changes to train composition
  - Managing passenger support activities also in cases where on-train users are located in different coaches or another cab.
- 38.2.1.2 When on-train voice communication is initiated by a user, the FRMCS system determines which other FRMCS users are included in the communication, based on:
  - The functional identity of the on-train users on a specific train, or
  - User selectable predefined group(s) of on-train users or entered manually
- 38.2.1.3 The on-train user is able to initiate voice communication to other on-train user(s).
- 38.2.1.4 This use case is available in both on-network and off-network conditions.

#### 38.2.2 Pre-conditions

- 38.2.2.1 The on-train user is authorised to initiate the voice communication. This is managed by the authorisation of voice communication application.
- 38.2.2.2 The on-train user is authorised to use the On-train voice communication application by the application authorisation of application

## 38.2.3 Service flows

- 38.2.3.1 A on-train user initiates the voice communication to any other on-train user(s). The QoS class of the communication is managed by the QoS class application. The voice communication requests the QoS class which matches the application category of VOICE (see [QoS]) within the FRMCS system.
- 38.2.3.2 The FRMCS system establishes the voice communication to the on-train users within a setup time specified as NORMAL (see [QoS]). The information from the role management and presence application is used to present the identities to the parties involved.
- 38.2.3.3 The voice communication is recorded by the voice recording and access application.

- 38.2.3.4 The voice communication is recorded by the voice recording and access application.
- 38.2.3.5 The arbitration is managed by the arbitration application.
- 38.2.3.6 The talker control is managed by the multi user talker control application.

## 38.2.4 Post-conditions

38.2.4.1 The on-train user is connected to the requested on-train user(s).

#### 38.2.5 Communication attributes

URS Ref.	Туре	Symmetry Up/Down	Distribution	Latency	Bandwidth	Reliability	Setup	Speed
6.4	Bi- directional Voice	50/50	User-to- user/Multi- user	Low	Low	Normal	Normal	High

## 38.2.6 Related URS application interfaces

38.2.6.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application
8.11	Inviting-a-user messaging
8.2	Multi-user talker control
8.3	Role management and presence
8.5	Authorisation of voice communication
8.7	Authorisation of application
8.8	QoS Class negotiation
8.12	Arbitration
5.19	Voice recording and access

#### 38.2.7 HMI related criteria

38.2.7.1 The initiation of a voice communication is achieved with the minimum of interaction (for example a single button press or a selection from a list). Where selection from a list is determined to be the preferred option, then the list is accessed with the minimum of interaction and be intuitive.

- 38.3 Use case: Leave of an on-train voice communication
- 38.3.1 Description
- 38.3.1.1 The on-train user is able to leave the ongoing on-train voice communication.
- 38.3.1.2 This use case is available in both on-network and off-network conditions.
- 38.3.2 Pre-conditions
- 38.3.2.1 The on-train voice communication is ongoing.
- 38.3.3 Service flows
- 38.3.3.1 The on-train user is able to leave the on-train voice communication. When a on-train user has left the other participants in the communication are informed and can continue the communication if there are still user(s) involved in the communication.
- 38.3.3.2 The FRMCS system terminates the on-train voice communication if the last on-train user has left. All involved users are informed.
- 38.3.4 Post-conditions
- 38.3.4.1 The on-train voice communication is either ongoing or terminated.
- 38.3.5 HMI related criteria
- 38.3.5.1 Leaving of an on-train voice communication is achieved with the minimum of interaction.

## 38.4 Use case: Join an on-train voice communication

## 38.4.1 Description

- 38.4.1.1 An on-train user is able to connect to an on-train voice communication
- 38.4.1.2 This use case is available in both on-network and off-network conditions.

### 38.4.2 Pre-conditions

- 38.4.2.1 The on-train user is authorised to connect to an on-train voice communication . This is managed by the authorisation of voice communication application.
- 38.4.2.2 The on-train user is authorised to use the an on-train voice communication application by the application authorisation of application.
- 38.4.2.3 The addressed on-train users(s) is/are involved in an ongoing on-train voice communication

#### 38.4.3 Service flows

- 38.4.3.1 The on-train user requests to connect to a an ongoing on-train voice communication to an on train user(s) by selecting or dialling the corresponding functional identity. The QoS class of the communication is managed by the QoS class application. The voice communication requests the QoS class which matches the application category of VOICE (see [QoS]) within the FRMCS system.
- 38.4.3.2 The FRMCS system connects the on-train user requesting to join to the ongoing on-train voice communication .The information from the role management and presence application is used to present the identity to the on-train user(s). The initiating on-train user is informed if the voice communication is either user-to-user or multi-user.
- 38.4.3.3 The talker control is managed by the multi user talker control application.
- 38.4.3.4 The arbitration is managed by the arbitration application.
- 38.4.3.5 The communication is recorded by the Voice recording and access to recorded data application.

#### 38.4.4 Post-conditions

38.4.4.1 The user has been connected to the ongoing on-train voice communication

## 38.4.5 HMI related criteria

38.4.5.1 Joining of a voice communication is achieved with the minimum of interaction (for example a single button press or a selection from a list). Where selection from a list is determined to be the preferred option, then the list is accessed with the minimum of interaction and be intuitive.

- 38.5 Use case: Termination of an on-train voice communication
- 38.5.1 Description
- 38.5.1.1 The on-train user is able to terminate the voice communication.
- 38.5.1.2 This use case is available in both on-network and off-network conditions.
- 38.5.2 Pre-conditions
- 38.5.2.1 The on-train voice communication is ongoing.
- 38.5.3 Service flows
- 38.5.3.1 The on-train user terminates the voice communication.
- 38.5.3.2 The FRMCS system terminates the on-train voice communication.
- 38.5.4 Post-conditions
- 38.5.4.1 The on-train voice communication is terminated.
- 38.5.5 HMI related criteria
- 38.5.5.1 The termination of an on-train voice communication is achieved with the minimum of interaction.

- 38.6 Use case: Service interworking and service continuation with GSM-R
- 38.6.1 Description
- 38.6.1.1 For migration purposes the service interworking and service continuation between the GSM-R system and FRMCS system for on-train voice communication needs to be clear.
- 38.6.1.2 Depending on the migration scenario an on-train user can be attached to the FRMCS system, to the GSM-R system. Functional identities are applicable in one system only.
- 38.6.1.3 This use case only applies to end user devices supporting both FRMCS and GSM-R systems.
- 38.6.2 Pre-conditions
- 38.6.2.1 None.
- 38.6.3 Service flows

Initiating on-train voice communication attached to GSM-R

- 38.6.3.1 When the on-train user is attached to the GSM-R system and is initiating on-train voice communication, the GSM-R system will route the voice communication to the other on-train users accordingly.
- 38.6.3.2 If the on-train user is located in the FRMCS system the GSM-R system can only route the call to the on-train user(s) if they can be reached by an address or identity understood by the GSM-R system. The role management in FRMCS provides the appropriate address or identity e.g. by provide a mapping of GSM-R identities and FRMCS identities.
- 38.6.3.3 The information from the role management and presence application is used to route the communication and to present the identities of on-train user(s).
  - Initiating on-train voice communication attached to FRMCS
- 38.6.3.4 When the on-train user is active in the FRMCS system and is initiating on-train voice communication, the FRMCS system will route the communication to the other on-train user(s) accordingly. The information from the role management and presence application is used to route the communication and to present the identities of on-train user(s). The role management in FRMCS provides the appropriate address or identity e.g. by provide a mapping of GSM-R identities and FRMCS identities.
  - On-train user moving from GSM-R to FRMCS
- 38.6.3.5 When the GSM-R user equipment of the on-train user is detached from the GSM-R system the FRMCS end user device provides service continuation by setting up the communication via the FRMCS system. An interruption of voice communication is acceptable.
  - On-train user moving from FRMCS to GSM-R
- 38.6.3.6 When the FRMCS user equipment of the on-train user is detached from the FRMCS system the FRMCS end user device provides service continuation by setting up the communication via the GSM-R system. An interruption of voice communication is acceptable.
- 38.6.4 Post-conditions
- 38.6.4.1 None.

38.6.5 Related URS application interfaces

38.6.5.1 None.

38.6.6 HMI related criteria

38.6.6.1 None.

# 39 Lineside telephony related use cases

## 39.1 Introduction

In this chapter the use cases related to lineside telephony are defined. The following use cases are defined:

- Initiation of a lineside telephony voice communication
- Termination of line telephony voice communication
- Service interworking and service continuation with GSM-R

# 39.2 Use case: Initiation of a lineside telephony voice communication

## 39.2.1 Description

39.2.1.1 A user is able to set up a voice communication to an entitled controller from a lineside telephony equipment in order to obtain information about the status of the infrastructure object to which it is assigned (for example a level crossing or a signal).

#### 39.2.2 Pre-conditions

- 39.2.2.1 The lineside telephony equipment is logged in the FRMCS system. There is no need for the user to log in manually.
- 39.2.2.2 The lineside telephony<sup>3</sup> equipment is identified by a functional identity permanently assigned to the lineside telephony equipment.
- 39.2.2.3 The lineside telephony equipment is authorised to initiate the voice communication. This is managed by the authorisation of voice communication application.
- 39.2.2.4 The lineside telephony equipment is authorised to use the lineside telephony application. This is managed by the application authorisation of application.

### 39.2.3 Service flows

- 39.2.3.1 The user initiates a lineside telephony voice communication e.g. by hooking off the handset and/or by pressing a single key. The QoS class of the communication is managed by the QoS class application. The voice communication requests the QoS class which matches the application category of CRITICAL VOICE (see [QoS]) within the FRMCS system.
- 39.2.3.2 The FRMCS system determines the responsible controller based on the functional identity permanetly assigned to the lineside telephony equipment.
- 39.2.3.3 The FRMCS system establishes the voice communication to the controller within a setup time specified as NORMAL (see [QoS]).
- 39.2.3.4 The identity of the concerned infrastructure element is provided to the controller (thanks to the permanent functional identity).
- 39.2.3.5 The voice communication is recorded by the voice recording and access application.
- 39.2.3.6 The arbitration is managed by the arbitration application.
- 39.2.3.7 The talker control is managed by the multi user talker control application.

<sup>&</sup>lt;sup>3</sup> The line side telephony could also consist of a group of wired line side telephony systems.

#### 39.2.4 Post-conditions

39.2.4.1 The initiator is connected to the controller.

## 39.2.5 Communication attributes

URS Ref.	Туре	Symmetry Up/Down	Distribution	Latency	Bandwidth	Reliability	Setup	Speed
6.5	Bi- directional Voice	50/50	User-to-User	Low	Low	High	Normal	Low

## 39.2.6 Related URS application interfaces

39.2.6.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application
8.3	Role management and presence
8.4	Location services
8.5	Authorisation of communication
8.7	Authorisation of application
8.8	QoS Class negotiation
8.12	Arbitration
5.19	Voice Recording and access to the recorded data

## 39.2.7 HMI related criteria

- 39.2.7.1 The initiation of a lineside telephony voice communication is based on a simple action.
- 39.2.7.2 The HMI of the controller allows the quick and easily identification of the concerned infrastructure object.

- 39.3 Use case: Termination of a lineside telephony voice communication
- 39.3.1 Description
- 39.3.1.1 The controller is able to terminate the lineside telephony voice communication.
- 39.3.1.2 The controller is able to put on hold the lineside telephony voice communication.
- 39.3.2 Pre-conditions
- 39.3.2.1 The lineside telephony voice communication is ongoing.
- 39.3.3 Service flows

Controller on hold

- 39.3.3.1 A controller is able to put the lineside telephony communication on hold.
- 39.3.3.2 After the controller has put the voice communication on hold, the communication remains in the FRMCS system, and the controller is able to be part of the communication again.

**Termination** 

- 39.3.3.3 The controller is able to terminate the lineside telephony communication.
- 39.3.3.4 The initiator is able to terminate the lineside telephony communication (e.g. by hooking on the handset).
- 39.3.3.5 The FRMCS system terminates the voice communication. All involved users are informed.
- 39.3.4 Post-conditions
- 39.3.4.1 The lineside telephony voice communication is terminated.
- 39.3.5 HMI related criteria
- 39.3.5.1 None.

- 39.4 Use case: Service interworking and service continuation with GSM-R
- 39.4.1 Description
- 39.4.1.1 For migration purposes the service interworking between the GSM-R system and FRMCS system for lineside telephony voice communication needs to be clear. The service continuation is not applicable as both terminals are motionless.
- 39.4.1.2 Depending on the migration scenario a controller can be attached to the FRMCS system, to the GSM-R system or both. The lineside telephony equipment can be attached either in the GSM-R system or in the FRMCS system. Functional identities are applicable in one system only.
- 39.4.1.3 This use case only applies to end user devices supporting both FRMCS and GSM-R systems.
- 39.4.2 Pre-conditions
- 39.4.2.1 None.
- 39.4.3 Service flows
  - Lineside telephony equipment attached to GSM-R
- 39.4.3.1 When the lineside telephony is attached to the GSM-R system and is initiating voice communication to controller, the GSM-R system will route the voice communication to the controller accordingly.
- 39.4.3.2 If the controller is located in the FRMCS system, the GSM-R system can only route the call to the controller if the controller can be reached by an address or identity understood by the GSM-R system. The role management in FRMCS provides the appropriate address or identity e.g. through a mapping of GSM-R identities and FRMCS identities.
- 39.4.3.3 The information from the role management and presence application is used to route the communication and to present the identity(ies) of the intiating party.

  Lineside telephony equipment attached to FRMCS
- 39.4.3.4 When the lineside telephony equipment is active in the FRMCS system and is initiating a voice communication to controller, the FRMCS system will route the communication to the controller accordingly.
- 39.4.3.5 The role management in FRMCS provides the appropriate address or identity e.g. through a mapping of GSM-R identities and FRMCS identities.
- 39.4.3.6 The information from the role management and presence application is used to route the communication and to present the identity(ies) of the initiating party.
- 39.4.4 Post-conditions
- 39.4.4.1 None.
- 39.4.5 Related URS application interfaces
- 39.4.5.1 None.
- 39.4.6 HMI related criteria
- 39.4.6.1 None.

# 40 On-train voice communication towards passengers (Public Address) related use cases

## 40.1 Introduction

In this chapter the use cases related to On-train voice communication towards passengers are defined. The following use cases are defined:

- Initiation of a Voice communication to passengers
- Termination of a Voice communication to passengers
- Service interworking and service continuation with GSM-R

## 40.2 Use case: Initiation of a Voice communication to passengers

## 40.2.1 Description

- 40.2.1.1 An entitled user is able to set up voice communication to the public address system(s) of one or multiple trains in order to a broadcast Voice information to the passengers in train(s).
- 40.2.1.2 The user may be a member of the train staff, a driver of a train, a controller, a RU operator or an IM operator.
- 40.2.1.3 This use case is available in both on-network and off-network conditions.

#### 40.2.2 Pre-conditions

- 40.2.2.1 The user is entitled to initiate the voice communication to passengers. This is managed by the authorisation of communication application.
- 40.2.2.2 The user is entitled to use the Voice communication to passengers application by the application authorisation of application.

#### 40.2.3 Service flows

- 40.2.3.1 The initiating user initiates the voice communication to the public address system(s). The QoS class of the communication is managed by the QoS class application. The voice communication requests the QoS class which matches the application category of VOICE (see [QoS]) within the FRMCS system.
- 40.2.3.2 The FRMCS system determines the requested public address system based on the identity/identities provided by the initiating user.
- 40.2.3.3 The FRMCS system establishes the voice communication to the public address system(s) within a setup time specified as NORMAL (see [QoS]). The information from the role management and presence application may be used to present the identity to the initiating user and the public address system(s). The location of the public address system(s) (i.e. train or trains) may presented to the initiating user which is retrieved from the location services application.
- 40.2.3.4 The arbitration is managed by the arbitration application.
- 40.2.3.5 The voice communication is recorded by the Voice recording and access to recorded data application.

## 40.2.4 Post-conditions

40.2.4.1 The initiating user is connected to the public address system of the requested train(s).

#### 40.2.5 Communication attributes

URS Ref.	Туре	Symmetry Up/Down	Distribution	Latency	Bandwidth	Reliability	Setup	Speed
6.6	Uni- directional Voice	0/100	User-to- User/Multi- user	Low	Low	Normal	Normal	High

## 40.2.6 Related URS application interfaces

40.2.6.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application
8.3	Role management and presence
8.4	Location services
8.5	Authorisation of communication
8.7	Authorisation of application
8.8	QoS Class Negotiation
8.12	Arbitration
5.19	Voice Recording and access to the recorded data

#### 40.2.7 HMI related criteria

- 40.2.7.1 The initiation of a voice communication is achieved with the minimum of interaction (for example, a single button press or selection from a list).
- 40.2.7.2 Where selection from a list is determined to be the preferred option, then the list is accessed with the minimum of interaction and be intuitive.
- 40.2.7.3 The status of the On-train voice communication towards passengers is indicated to the driver(s) and the train staff of the associated train(s).
- 40.2.7.4 When the initiated On-train voice communication towards passengers is started by another user than the driver, the driver has a means to listen to the communication.
- 40.2.7.5 Arbitration of local interaction with the public address system and a voice communication towards passenger via the FRMCS system is out of scope of the FRMCS system.

- 40.3 Use case: Termination of a Voice communication to passengers
- 40.3.1 Description
- 40.3.1.1 The user is able to terminate the voice communication to passengers.
- 40.3.1.2 This use case is available in both on-network and off-network conditions.
- 40.3.2 Pre-conditions
- 40.3.2.1 The voice communication to passengers is ongoing.
- 40.3.3 Service flows
- 40.3.3.1 The user is able to terminate the voice communication to passengers.
- 40.3.3.2 The FRMCS system terminates the voice communication. The public address system(s) is / are informed.
- 40.3.4 Post-conditions
- 40.3.4.1 The voice communication to passengers is terminated.

- 40.4 Use case: Service interworking and service continuation with GSM-R
- 40.4.1 Description
- 40.4.1.1 For migration purposes the service interworking and service continuation between the GSM-R system and FRMCS system for Voice communication to passengers needs to be clear.
- 40.4.1.2 Depending on the migration scenario the initiating user can be attached to the FRMCS system, to the GSM-R system or both. The public address system can be attached either in the GSM-R system or in the FRMCS system. When more than one public address system is involved, any of the public address systems can be attached in either the GSM-R system of the FRMCS system. Functional identities are applicable in one system only.
- 40.4.1.3 This use case only applies to end user devices supporting both FRMCS and GSM-R systems.
- 40.4.2 Pre-conditions
- 40.4.2.1 None.
- 40.4.3 Service flows

Public address system attached to GSM-R

40.4.3.1 When the public address system is attached to the GSM-R system and the initiating user is initiating a Voice communication to passengers, the FRMCS system will route the Voice communication to passengers through the GSM-R system. The information from the role management and presence application is used to route the communication and to present the identities of both the initiating user and the public address system.

Public address system attached to FRMCS

40.4.3.2 When the public address system is active in the FRMCS system and the initiating user is initiating Voice communication to passengers, the FRMCS system will route the Voice communication to passengers accordingly. The information from the role management and presence application is used to route the communication and to present the identities of both the initiating user and the public address system.

Public address system moving from GSM-R to FRMCS

40.4.3.3 When the GSM-R user equipment of the public address system is detached from the GSM-R system the end user device provides service continuation by setting up the communication via the FRMCS system. An interruption of voice communication is acceptable.

P public address system moving from FRMCS to GSM-R

- 40.4.3.4 When the FRMCS user equipment of the public address system is detached from the FRMCS system the end user device provides service continuation by setting up the communication via the GSM-R system. An interruption of voice communication is acceptable.
- 40.4.4 Post-conditions
- 40.4.4.1 None.
- 40.4.5 Related URS application interfaces
- 40.4.5.1 None.

# 40.4.6 HMI related criteria

40.4.6.1 None.

## 41 Station Public Address related use cases

#### 41.1 Introduction

In this chapter the use cases related to Station Public Address communication are defined. The following use cases are defined:

- Initiation of a Station Public Address communication
- Termination of a Station Public Address communication
- Service interworking and service continuation with GSM-R

## 41.2 Use case: Initiation of a Station Public Address communication

## 41.2.1 Description

- 41.2.1.1 An entitled user is able to set up voice communication to the station public address system in order to broadcast vocal information to passengers on platforms.
- 41.2.1.2 The user may be the a controller, a RU operator or an IM operator.

#### 41.2.2 Pre-conditions

- 41.2.2.1 The user is entitled to initiate the Station Public Address voice communication. This is managed by the authorisation of communication application.
- 41.2.2.2 The user is entitled to use the Station Public Address voice communication application by the application authorisation of application.

#### 41.2.3 Service flows

- 41.2.3.1 The initiating user initiates the Station Public Address voice communication to the passengers announcements system(s). The QoS class of the communication is managed by the QoS class application. The voice communication requests the QoS class which matches the application category of NORMAL (see [QoS]) within the FRMCS system.
- 41.2.3.2 The FRMCS system determines the requested passengers announcements system(s) based on the identity/identities provided by the initiating user.
- 41.2.3.3 The FRMCS system establishes the voice communication to the passengers announcements system(s) within a setup time specified as NORMAL (see [QoS]). The information from the role management and presence application may be used to present the identity to the initiating user. The location of the passengers announcements system(s) may presented to the initiating user which are retrieved from the location services application.
- 41.2.3.4 The arbitration is managed by the arbitration application.
- 41.2.3.5 The voice communication is recorded by the Voice recording and access to recorded data application.

#### 41.2.4 Post-conditions

41.2.4.1 The initiating user is connected to the requested passengers announcements system(s).

#### 41.2.5 Communication attributes

URS Ref.	Туре	Symmetry Up/Down	Distribution	Latency	Bandwidth	Reliability	Setup	Speed
6.7	Uni- directional Voice	0/100	User-to- User/Multi- user	Low	Low	Normal	Normal	Low

## 41.2.6 Related URS application interfaces

41.2.6.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application
8.3	Role management and presence
8.4	Location services
8.5	Authorisation of communication
8.7	Authorisation of application
8.8	QoS Class Negotiation
8.12	Arbitration

## 41.2.7 HMI related criteria

- 41.2.7.1 The initiation of a voice communication is achieved with the minimum of interaction (for example, a single button press or selection from a list).
- 41.2.7.2 Where selection from a list is determined to be the preferred option, then the list is accessed with the minimum of interaction and be intuitive.

- 41.3 Use case: Termination of a Station Public Address communication
- 41.3.1 Description
- 41.3.1.1 The initiating user is able to terminate the Station Public Address voice communication.
- 41.3.2 Pre-conditions
- 41.3.2.1 The Station Public Address voice communication is ongoing.
- 41.3.3 Service flows
- 41.3.3.1 The user is able to terminate the Station Public Address voice communication.
- 41.3.3.2 The FRMCS system terminates the voice communication.
- 41.3.4 Post-conditions
- 41.3.4.1 The user has terminated the Station Public Address voice communication.
- 41.3.4.2 The Station Public Address voice communication is terminated.

- 41.4 Use case: Service interworking and service continuation with GSM-R
- 41.4.1 Description
- 41.4.1.1 For migration purposes the service interworking and service continuation between the GSM-R system and FRMCS system for Station Public Address communication needs to be clear.
- 41.4.1.2 Depending on the migration scenario, the initiating user can be attached to the FRMCS system, to the GSM-R system or both. The system to make announcements to passengers can be attached either in the GSM-R system or in the FRMCS system. When more than one system to make announcements to passengers is involved, any of the systems to make announcements to passengers can be attached in either the GSM-R system of the FRMCS system. Functional identities are applicable in one system only.
- 41.4.1.3 This use case only applies to end user devices supporting both FRMCS and GSM-R systems.
- 41.4.2 Pre-conditions
- 41.4.2.1 None.
- 41.4.3 Service flows

System to make announcements to passengers attached to GSM-R

41.4.3.1 When the system to make announcements to passengers is attached to the GSM-R system and the initiating user is initiating a Station Public Address communication, the FRMCS system will route the Station Public Address communication through the GSM-R system. The information from the role management and presence application is used to route the communication and to present the identities of both the initiating user and the public address system.

System to make announcements to passengers attached to FRMCS

- 41.4.3.2 When the system to make announcements to passengers is active in the FRMCS system and the initiating user is initiating Station Public Address communication, the FRMCS system will route the Station Public Address communication accordingly. The information from the role management and presence application is used to route the communication and to present the identities of both the initiating user and the public address system.
- 41.4.4 Post-conditions
- 41.4.4.1 None.
- 41.4.5 Related URS application interfaces
- 41.4.5.1 None.
- 41.4.6 HMI related criteria
- 41.4.6.1 None.

# 42 Communication at stations and depots related use cases

#### 42.1 Introduction

In this chapter the use cases related to communication at stations and depots are defined. The following use cases are defined:

- Initiation of voice communication at stations and depots
- Leaving a voice communication at stations and depots
- Join a voice communication at stations and depots
- Termination of voice communication at stations and depots
- Service interworking and service continuation with GSM-R

## 42.2 Use case: Initiation of voice communication at stations and depots

## 42.2.1 Description

- 42.2.1.1 A station or depot user may need to communicate with other user(s) in order to exchange information (for example movement of trains, parking of trains, logistics in depots or stations, etc.).
- 42.2.1.2 When voice communication at stations and depots is initiated by a user, the FRMCS system determines which other FRMCS users are included in the communication, based on:
  - The functional identity (if any) of the users present on the station / depot, or
  - User selectable predefined group(s) of users or entered manually.
- 42.2.1.3 The station / depot user is able to initiate voice communication to other user(s).
- 42.2.1.4 This use case is available in both on-network and off-network conditions.

#### 42.2.2 Pre-conditions

- 42.2.2.1 The user is authorised to initiate the voice communication. This is managed by the authorisation of voice communication application.
- 42.2.2.2 The user is authorised to use the station and depot voice communication application by the application authorisation of application.

#### 42.2.3 Service flows

- 42.2.3.1 An station / depot user initiates the voice communication to any other. The QoS class of the communication is managed by the QoS class application. The voice communication requests the QoS class which matches the application category of VOICE (see [QoS]) within the FRMCS system.
- 42.2.3.2 The FRMCS system establishes the voice communication to the users within a setup time specified as NORMAL (see [QoS]). The information from the role management and presence application is used to present the identities to the parties involved.
- 42.2.3.3 The voice communication is recorded by the voice recording and access application.
- 42.2.3.4 The arbitration is managed by the arbitration application.
- 42.2.3.5 The talker control is managed by the multi user talker control application.

#### 42.2.4 Post-conditions

42.2.4.1 The station / depot user is connected to the requested user(s).

## 42.2.5 Communication attributes

URS Ref.	Туре	Symmetry Up/Down	Distribution	Latency	Bandwidth	Reliability	Setup	Speed
6.8	Bi- directional Voice	50/50	User-to- User/Multi- user	Low	Low	Normal	Normal	Low

## 42.2.6 Related URS application interfaces

42.2.6.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application
8.2	Multi-user talker control
8.3	Role management and presence
8.4	Location services
8.5	Authorisation of communication
8.7	Authorisation of application
8.8	QoS Class Negotiation
8.12	Arbitration
5.19	Voice Recording and access to the recorded data

## 42.2.7 HMI related criteria

- 42.2.7.1 The initiation of a voice communication is achieved with the minimum of interaction (for example a single button press or a selection from a list).
- 42.2.7.2 Where selection from a list is determined to be the preferred option, then the list is accessed with the minimum of interaction and be intuitive.

- 42.3 Use case: Leaving of voice communication at stations and depots
- 42.3.1 Description
- 42.3.1.1 The station / depot user is able to leave the ongoing station / depot voice communication.
- 42.3.1.2 This use case is available in both on-network and off-network conditions.
- 42.3.2 Pre-conditions
- 42.3.2.1 The voice communication is ongoing.
- 42.3.3 Service flows
- 42.3.3.1 The station / depot user is able to leave the communication at strations and depots. When a station / depot user has left, the other participants in the communication are informed and can continue the communication if there are still user(s) involved in the communication.
- 42.3.3.2 The FRMCS system terminates the communication at stations and depots if the last on-train user has left. All involved users are informed.
- 42.3.4 Post-conditions
- 42.3.4.1 The communication at stations and depot is either ongoing or terminated.
- 42.3.5 HMI related criteria
- 42.3.5.1 Leaving of an station / depot voice communication is achieved with the minimum of interaction

## 42.4 Use case: Join a voice communication at stations and depots

## 42.4.1 Description

- 42.4.1.1 An stations and depot user is able to connect to a stations and depots ongoing voice communication.
- 42.4.1.2 This use case is available in both on-network and off-network conditions.

#### 42.4.2 Pre-conditions

- 42.4.2.1 The stations and depot user is authorised to connect to a stations and depots voice communication. This is managed by the authorisation of voice communication application.
- 42.4.2.2 The stations and depot user is authorised to use the stations and depots voice communication application by the application authorisation of application.
- 42.4.2.3 The addressed stations and depot users(s) is/are involved in an ongoing stations and depots voice communication.

#### 42.4.3 Service flows

- 42.4.3.1 The stations and depot user requests to connect to an ongoing stations and depots voice communication to another stations and depot user(s) by selecting or dialling the corresponding functional identity. The QoS class of the communication is managed by the QoS class application. The voice communication requests the QoS class which matches the application category of VOICE (see [QoS]) within the FRMCS system.
- 42.4.3.2 The FRMCS system connects the stations and depot user requesting to join to the ongoing stations and depot voice communication. The information from the role management and presence application is used to present the identity to the trackside workers. The initiating stations and depot user is informed if the stations and depot voice communication is either user-to-user or multi-user.
- 42.4.3.3 The talker control is managed by the multi user talker control application.
- 42.4.3.4 The arbitration is managed by the arbitration application.
- 42.4.3.5 The communication is recorded by the Voice recording and access to recorded data application.

#### 42.4.4 Post-conditions

42.4.4.1 The user has been connected to the ongoing stations and depot voice communication

## 42.4.5 HMI related criteria

42.4.5.1 Joining of a voice communication is achieved with the minimum of interaction (for example a single button press or a selection from a list). Where selection from a list is determined to be the preferred option, then the list is accessed with the minimum of interaction and be intuitive.

- 42.5 Use case: Termination of a communication at stations and depots
- 42.5.1 Description
- 42.5.1.1 The station / depot user is able to terminate the voice communication.
- 42.5.1.2 This use case is available in both on-network and off-network conditions.
- 42.5.2 Pre-conditions
- 42.5.2.1 The communication at stations and depots is ongoing.
- 42.5.3 Service flows
- 42.5.3.1 The station / depot user terminates the voice communication.
- 42.5.3.2 The FRMCS system terminates the communication at stations and depots.
- 42.5.4 Post-conditions
- 42.5.4.1 The communication at stations and depots is terminated.
- 42.5.5 HMI related criteria
- 42.5.5.1 The termination of an station / depot voice communication is achieved with the minimum of interaction.

- 42.6 Use case: Service interworking and service continuation with GSM-R
- 42.6.1 Description
- 42.6.1.1 For migration purposes the service interworking and service continuation between the GSM-R system and FRMCS system for communication at stations and depots needs to be clear.
- 42.6.1.2 Depending on the migration scenario a user can be attached to the FRMCS system, to the GSM-R system. Functional identities are applicable in one system only.
- 42.6.1.3 This use case only applies to end user devices supporting both FRMCS and GSM-R systems.
- 42.6.2 Pre-conditions
- 42.6.2.1 None.
- 42.6.3 Service flows

Initiating voice communication on stations and depots when attached to GSM-R

- 42.6.3.1 When the station / depot user is attached to the GSM-R system and is initiating a communication at stations and depots, the GSM-R system will route the voice communication to the other users accordingly.
- 42.6.3.2 If the station / depot user is located in the FRMCS system, the GSM-R system can only route the call to the station / depot user(s) if they can be reached by an address or identity understood by the GSM-R system. The role management in FRMCS provides the appropriate address or identity e.g. by provide a mapping of GSM-R identities and FRMCS identities.
- 42.6.3.3 The information from the role management and presence application is used to route the communication and to present the identities of station / depot user(s).

  Initiating a voice communication at stations and depots when attached to FRMCS
- 42.6.3.4 When the station / depot user is active in the FRMCS system and is initiating a voice communication at stations and depots, the FRMCS system will route the communication to the other user(s) accordingly. The information from the role management and presence application is used to route the communication and to present the identities of station and depot user(s). The role management in FRMCS provides the appropriate address or identity e.g. by provide a mapping of GSM-R identities and FRMCS identities.
  - Station / depot user moving from GSM-R to FRMCS
- 42.6.3.5 When the GSM-R user equipment of the station / depot user is detached from the GSM-R system the FRMCS end user device provides service continuation by setting up the communication via the FRMCS system. An interruption of voice communication is acceptable.
  - Station / depot user moving from FRMCS to GSM-R
- 42.6.3.6 When the FRMCS user equipment of the station / depot user is detached from the FRMCS system, the FRMCS end user device provides service continuation by setting up the communication via the GSM-R system. An interruption of voice communication is acceptable.
- 42.6.4 Post-conditions
- 42.6.4.1 None.

42.6.5 Related URS application interfaces

42.6.5.1 None.

42.6.6 HMI related criteria

42.6.6.1 None.

# 43 On-Train Telemetry communications related use cases

## 43.1 Introduction

In this chapter the use cases related to On-Train Telemetry communication are described, the following use cases are identified

- Initiation of On-Train Telemetry communication
- Termination of On-Train Telemetry communication
- Service interworking and service continuation with GSM-R

## 43.2 Use case: Initiation of On-Train Telemetry communication

## 43.2.1 Description

- 43.2.1.1 It is possible to initiate data communication between on-train telemetry systems (on the same train or between 2 different trains) or between on-train telemetry systems and a ground based system.
- 43.2.1.2 This use case is available in both on-network and off-network conditions.

#### 43.2.2 Pre-conditions

- 43.2.2.1 The initiating application is authorised to initiate On-Train Telemetry communication. This is managed by the authorisation of data communication application.
- 43.2.2.2 The receiving application is authorised to use the On-Train Telemetry communication.

## 43.2.3 Service flows

- 43.2.3.1 The initiating application initiates the On-Train Telemetry communication to the receiving side. The communication requests the QoS class which matches the application category of NON-CRITICAL DATA (see [QoS]) within the FRMCS system.
- 43.2.3.2 The FRMCS system establishes the bearer service required for the data communication within a setup time specified as NORMAL (see [QoS]).
- 43.2.3.3 The arbitration is managed by the arbitration application.
- 43.2.3.4 The communication is recorded by the Data recording and access to recorded data application.

## 43.2.4 Post-conditions

- 43.2.4.1 The initating application is connected to the receiving application.
- 43.2.4.2 Data can be exchanged between the On-Train Telemetry communication applications.

#### 43.2.5 Communication attributes

Ref. Up/Down
--------------

6.9	Bi- directional Data	50/50	User-to-User	Normal	Low	High	Normal	Low
-----	----------------------------	-------	--------------	--------	-----	------	--------	-----

## 43.2.6 Related URS application interfaces

43.2.6.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application
8.3	Role management and presence
8.4	Location services
8.6	Authorisation of data communication
8.7	Authorisation of application
8.8	QoS Class negotiation
8.10	Secure data communication
8.12	Arbitration
5.20	Data recording and access
6.20	Transfer of data

## 43.2.7 HMI related criteria

43.2.7.1 No criteria related to this use case: no human interaction is expected to manage the data communication.

- 43.3 Use case: Termination of On-Train Telemetry communication
- 43.3.1 Description
- 43.3.1.1 It is possible to terminate data communication between on-train telemetry systems and/or a ground based system.
- 43.3.1.2 This use case is available in both on-network and off-network conditions.
- 43.3.2 Pre-conditions
- 43.3.2.1 The On-Train Telemetry communication applications have a data communication initiated.
- 43.3.2.2 Both applications are authorised to use the On-Train Telemetry communication.
- 43.3.3 Service flows
- 43.3.3.1 The terminating application terminates the On-Train Telemetry communication with the receiving side application.
- 43.3.4 Post-conditions
- 43.3.4.1 The terminating On-Train Telemetry communication application is disconnected from the receiving application.
- 43.3.4.2 Data cannot be exchanged between the On-Train Telemetry communication applications.
- 43.3.5 HMI related criteria
- 43.3.5.1 No criteria related to this use case: no human interaction is expected to manage the data communication.

- 43.4 Use case: service interworking and service continuation with GSM-R
- 43.4.1 Description
- 43.4.1.1 For migration purposes the service interworking and service continuation between the GSM-R system and FRMCS system for On-train telemetry communication needs to be clear.
- 43.4.1.2 This use case only applies to end user devices supporting both FRMCS and GSM-R systems.
- 43.4.1.3 For service interworking and service continuation only the packet switched (PS) bearer service is considered.
- 43.4.2 Pre-conditions
- 43.4.2.1 None.
- 43.4.3 Service flows
  - Initiating On-train telemetry communication application attached to GSM-R
- 43.4.3.1 When the initiating On-train telemetry communication application is attached to the GSM-R system and is initiating data communication to another application, the GSM-R system will route the data communication accordingly.
- 43.4.3.2 If the other application is attached to the FRMCS system the GSM-R system can only route the data communication if the destination can be reached by an address or identity understood by the GSM-R system. The role management in FRMCS provides the appropriate address or identity e.g. by providing a mapping of GSM-R identities and FRMCS identities.
- 43.4.3.3 The information from the role management and presence application is used to route the communication and to present the identities.
  - Initiating On-train telemetry communication application attached to FRMCS
- 43.4.3.4 When the initiating application is attached to the FRMCS system and is initiating data communication to another On-train telemetry application, the FRMCS system will route the communication accordingly.
- 43.4.3.5 If the other application is attached to the GSM-R system the FRMCS system can only route the data communication if the destination can be reached by an address or identity understood by the FRMCS system. The role management in FRMCS provides the appropriate address or identity e.g. by providing a mapping of GSM-R identities and FRMCS identities.
- 43.4.3.6 The information from the role management and presence application is used to route the communication and to present the identities.
  - On-train telemetry application moving from GSM-R to FRMCS
- 43.4.3.7 When the On-train telemetry application is detached from the GSM-R system the FRMCS end user device provides service continuation by setting up the communication via the FRMCS system. An interruption of data communication is acceptable.
  - On-train telemetry application moving from FRMCS to GSM-R
- 43.4.3.8 When the On-train telemetry application is detached from the FRMCS system the FRMCS end user device provides service continuation by setting up the communication via the GSM-R system. An interruption of data communication is acceptable.

43.4.4 Post-conditions

43.4.4.1 None.

43.4.5 Related URS application interfaces

43.4.5.1 None.

43.4.6 HMI related criteria

43.4.6.1 None.

# 44 Infrastructure Telemetry communications related use cases

## 44.1 Introduction

In this chapter the use cases related to Infrastructure Telemetry communications are described, the following use cases are identified

- Initiation of Infrastructure Telemetry communications
- Termination of a Infrastructure Telemetry communication
- Service interworking and service continuation with GSM-R

## 44.2 Use case: Initiation of Infrastructure Telemetry communications

## 44.2.1 Description

44.2.1.1 It is possible to initiate data communication between infrastructure telemetry systems and/or a ground based system (for example, to support demand forecasting and response, equipment supervision etc.).

### 44.2.2 Pre-conditions

- 44.2.2.1 The initiating application is authorised to initiate Infrastructure Telemetry communications. This is managed by the authorisation of data communication application.
- 44.2.2.2 The receiving application is authorised to use the Infrastructure Telemetry communications .

#### 44.2.3 Service flows

- 44.2.3.1 The initiating application initiates the Infrastructure Telemetry communications communication to the receiving side. The communication requests the QoS class which matches the application category of NON-CRITICAL DATA (see [QoS]) within the FRMCS system.
- 44.2.3.2 The FRMCS system establishes the bearer service required for the data communication within a setup time specified as NORMAL (see [QoS]).
- 44.2.3.3 The arbitration is managed by the arbitration application.
- 44.2.3.4 The communication is recorded by the Data recording and access to recorded data application.

## 44.2.4 Post-conditions

- 44.2.4.1 The initating application is connected to the receiving application.
- 44.2.4.2 Data can be exchanged between the Infrastructure Telemetry communications applications.

#### 44.2.5 Communication attributes

URS Type Symmetry Distribution Latency Bandwidth Reliability Setup S Ref. Up/Down
---

6.10	Bi- directional 50/50 Data	User-to-User	Normal	Low	High	Normal	Low	
------	----------------------------------	--------------	--------	-----	------	--------	-----	--

# 44.2.6 Related URS application interfaces

44.2.6.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application			
8.3	Role management and presence			
8.4	Location services			
8.6	Authorisation of data communication			
8.7	Authorisation of application			
8.8	QoS Class negotiation			
8.10	Secure data communication			
8.12	Arbitration			
5.20	Data recording and access			
6.20	Transfer of data			

## 44.2.7 HMI related criteria

44.2.7.1 No criteria related to this use case: no human interaction is expected to manage the data communication.

# 44.3 Use case: Termination of Infrastructure Telemetry communications Description

44.3.1.1 It is possible to terminate data communication between infrastructure telemetry systems.

#### 44.3.2 Pre-conditions

- 44.3.2.1 The Infrastructure Telemetry communications applications have a data communication initiated.
- 44.3.2.2 Both applications are authorised to use the Infrastructure Telemetry communications.

## 44.3.3 Service flows

44.3.3.1 The terminating application terminates the Infrastructure Telemetry communications with the receiving side application.

## 44.3.4 Post-conditions

- 44.3.4.1 The terminating Infrastructure Telemetry communications application is disconnected from the receiving application.
- 44.3.4.2 Data cannot be exchanged between the Infrastructure Telemetry communications applications.

## 44.3.5 HMI related criteria

44.3.5.1 No criteria related to this use case: no human interaction is expected to manage the data communication.

- 44.4 Use case: service interworking and service continuation with GSM-R
- 44.4.1 Description
- 44.4.1.1 For migration purposes the service interworking and service continuation between the GSM-R system and FRMCS system for Infrastructure telemetry communication needs to be clear.
- 44.4.1.2 This use case only applies to end user devices supporting both FRMCS and GSM-R systems.
- 44.4.1.3 For service interworking and service continuation only the packet switched (PS) bearer service is considered.
- 44.4.2 Pre-conditions
- 44.4.2.1 None.
- 44.4.3 Service flows
  - Initiating Infrastructure telemetry communication application attached to GSM-R
- 44.4.3.1 When the initiating Infrastructure telemetry communication application is attached to the GSM-R system and is initiating data communication to another application, the GSM-R system will route the data communication accordingly.
- 44.4.3.2 If the other application is attached to the FRMCS system the GSM-R system can only route the data communication if the destination can be reached by an address or identity understood by the GSM-R system. The role management in FRMCS provides the appropriate address or identity e.g. by providing a mapping of GSM-R identities and FRMCS identities.
- 44.4.3.3 The information from the role management and presence application is used to route the communication and to present the identities.
  - Initiating Infrastructure telemetry communication application attached to FRMCS
- 44.4.3.4 When the initiating application is attached to the FRMCS system and is initiating data communication to another Infrastructure telemetry application, the FRMCS system will route the communication accordingly.
- 44.4.3.5 If the other application is attached to the GSM-R system the FRMCS system can only route the data communication if the destination can be reached by an address or identity understood by the FRMCS system. The role management in FRMCS provides the appropriate address or identity e.g. by providing a mapping of GSM-R identities and FRMCS identities.
- 44.4.3.6 The information from the role management and presence application is used to route the communication and to present the identities.
  - Infrastructure telemetry application moving from GSM-R to FRMCS
- 44.4.3.7 When the Infrastructure telemetry application is detached from the GSM-R system the FRMCS end user device provides service continuation by setting up the communication via the FRMCS system. An interruption of data communication is acceptable.
  - Infrastructure telemetry application moving from FRMCS to GSM-R
- 44.4.3.8 When the Infrastructure telemetry application is detached from the FRMCS system the FRMCS end user device provides service continuation by setting up the communication via the GSM-R system. An interruption of data communication is acceptable.

44.4.4 Post-conditions

44.4.4.1 None.

44.4.5 Related URS application interfaces

44.4.5.1 None.

44.4.6 HMI related criteria

44.4.6.1 None.

## 45 On-train remote equipment control related use cases

#### 45.1 Introduction

In this chapter the use cases related to on-train remote equipment control are defined. The following use cases are defined:

- Initiation of on-train remote equipment control communication
- Termination of on-train remote equipment control communication
- Service interworking and service continuation with GSM-R

# 45.2 Use case: Initiation of on-train remote equipment control communication

#### 45.2.1 Description

- 45.2.1.1 It is possible to initiate a data communication to relevant on-train systems for control purposes, for example control of heating or lighting, initiation of power-up sequences in order to optimise train preparation and to support train maintenance.
- 45.2.1.2 This use case is available in both on-network and off-network conditions.

#### 45.2.2 Pre-conditions

- 45.2.2.1 The initiating application is authorised to initiate on-train remote equipment control communication. This is managed by the authorisation of application and authorisation of data communication applications.
- 45.2.2.2 The on-train system is authorised to receive on-train remote equipment control communication. This is managed by the authorisation of application and authorisation of data communication applications.

#### 45.2.3 Service flows

- 45.2.3.1 The application initiates the on-train remote equipment control communication to the receiving on-train system. The communication requests the Qos Class which matches the application category of NON-CRITICAL DATA (See [QoS]) within FRMCS system.
- 45.2.3.2 The FRMCS system establishes the bearer service required for the data communication within a setup time specified as NORMAL (see [QoS]).
- 45.2.3.3 The arbitration is managed by the arbitration application.
- 45.2.3.4 Data is exchanged between the systems by the transfer of data application
- 45.2.3.5 The communication is recorded by the Data recording and access to recorded data application.

#### 45.2.4 Post-conditions

- 45.2.4.1 The initiating application is connected to the receiving system.
- 45.2.4.2 Data can be exchanged between the initiating application and receiving system.

#### 45.2.5 Communication attributes

URS Ref.	Туре	Symmetry Up/Down	Distribution	Latency	Bandwidth	Reliability	Setup	Speed

6.11	Bi- directional Data	50/50	User-to-User	Normal	Low	Normal	Normal	High
------	----------------------------	-------	--------------	--------	-----	--------	--------	------

## 45.2.6 Related URS application interfaces

45.2.6.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application
8.3	Role management and presence
8.4	Location services
8.6	Authorisation of data communication
8.7	Authorisation of application
8.8	QoS Class Negotiation
8.12	Arbitration
5.20	Data recording and access
6.20	Transfer of data

#### 45.2.7 HMI related criteria

45.2.7.1 No criteria related to this use case: no human interaction is expected to manage the data communication

- 45.3 Use case: Termination of on-train remote equipment control communication
- 45.3.1 Description
- 45.3.1.1 It is possible to terminate on-train remote equipment control communication between user and on-train systems.
- 45.3.1.2 This use case is available in both on-network and off-network conditions.
- 45.3.2 Pre-conditions
- 45.3.2.1 On-train remote equipment control communication between user and on-train system is on-going.
- 45.3.3 Service flows
- 45.3.3.1 The application terminates the on-train remote equipment control communication with on-train system or vice versa.
- 45.3.4 Post-conditions
- 45.3.4.1 The initiating application is disconnected from the receiving system.
- 45.3.4.2 Data cannot be exchanged between the application and the receiving system.
- 45.3.5 HMI related criteria
- 45.3.5.1 No criteria related to this use case: no human interaction is expected to manage the data communication

- 45.4 Use case: Service interworking and service continuation with GSM-R
- 45.4.1 Description
- 45.4.1.1 For migration purposes the service interworking and service continuation between the GSM-R system and FRMCS system for on-train remote equipment control communication needs to be clear.
- 45.4.1.2 This use case only applies to end user devices supporting both FRMCS and GSM-R systems.
- 45.4.1.3 For service interworking and service continuation only the packet switched (PS) bearer service is considered.
- 45.4.2 Pre-conditions
- 45.4.2.1 None.
- 45.4.3 Service flows

**FRMCS** 

- Initiating on-train remote equipment control communication application attached to GSM-R
- 45.4.3.1 When the initiating on-train remote equipment control communication application is attached to the GSM-R system and is initiating data communication to another application, the GSM-R system will route the data communication accordingly.
- 45.4.3.2 If the other application is attached to the FRMCS system the GSM-R system can only route the data communication if the destination can be reached by an address or identity understood by the GSM-R system. The role management in FRMCS provides the appropriate address or identity e.g. by providing a mapping of GSM-R identities and FRMCS identities.
- 45.4.3.3 The information from the role management and presence application is used to route the communication and to present the identities.

  Initiating on-train remote equipment control communication application attached to
- 45.4.3.4 When the initiating application is attached to the FRMCS system and is initiating data communication to another on-train remote equipment control application, the FRMCS system will route the communication accordingly.
- 45.4.3.5 If the other application is attached to the GSM-R system the FRMCS system can only route the data communication if the destination can be reached by an address or identity understood by the FRMCS system. The role management in FRMCS provides the appropriate address or identity e.g. by providing a mapping of GSM-R identities and FRMCS identities.
- 45.4.3.6 The information from the role management and presence application is used to route the communication and to present the identities.
  - On-train remote equipment control application moving from GSM-R to FRMCS
- 45.4.3.7 When the on-train remote equipment control application is detached from the GSM-R system the FRMCS end user device provides service continuation by setting up the communication via the FRMCS system. An interruption of data communication is acceptable.
  - On-train remote equipment control application moving from FRMCS to GSM-R
- 45.4.3.8 When the on-train remote equipment control application is detached from the FRMCS system the FRMCS end user device provides service continuation by

setting up the communication via the GSM-R system. An interruption of data communication is acceptable.

45.4.4 Post-conditions

45.4.4.1 None.

45.4.5 Related URS application interfaces

45.4.5.1 None.

45.4.6 HMI related criteria

45.4.6.1 None.

# 46 Monitoring and Control of Non-Critical Infrastructure related use cases

#### 46.1 Introduction

In this chapter the use cases related to Monitoring and control of non-critical infrastructure communication are described, the following use cases are identified

- Initiation of Monitoring and control of non-critical infrastructure communication
- Termination of a Monitoring and control of non-critical infrastructure
- Service interworking and service continuation with GSM-R

# 46.2 Use case: Initiation of a Monitoring and control of non-critical infrastructure communication

#### 46.2.1 Description

46.2.1.1 It is possible to initiate data communication between non-critical infrastructure systems and railway staff or a ground based or an on-board system, in order to monitor or control non-critical infrastructure elements.

#### 46.2.2 Pre-conditions

- 46.2.2.1 The initiating application is authorised to initiate Monitoring and control of non-critical infrastructure communication. This is managed by the authorisation of data communication application.
- 46.2.2.2 The receiving application is authorised to use the Monitoring and control of non-critical infrastructure communication.

#### 46.2.3 Service flows

- 46.2.3.1 The initiating application initiates the Monitoring and control of non-critical infrastructure communication to the receiving side. The communication requests the QoS class which matches the application category of NON-CRITICAL DATA (see [QoS]) within the FRMCS system.
- 46.2.3.2 The FRMCS system establishes the bearer service required for the data communication within a setup time specified as NORMAL (see [QoS]).
- 46.2.3.3 The arbitration is managed by the arbitration application.
- 46.2.3.4 The communication is recorded by the Data recording and access to recorded data application.

#### 46.2.4 Post-conditions

- 46.2.4.1 The initating application is connected to the receiving application.
- 46.2.4.2 Data can be exchanged between the Monitoring and control of non-critical infrastructure applications.

#### 46.2.5 Communication attributes

	RS ef.	Туре	Symmetry Up/Down	Distribution	Latency	Bandwidth	Reliability	Setup	Speed
--	-----------	------	---------------------	--------------	---------	-----------	-------------	-------	-------

## 46.2.6 Related URS application interfaces

46.2.6.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application
8.3	Role management and presence
8.4	Location services
8.6	Authorisation of data communication
8.7	Authorisation of application
8.8	QoS Class Negotiation
8.12	Arbitration
5.20	Data recording and access
6.20	Transfer of data

#### 46.2.7 HMI related criteria

46.2.7.1 No criteria related to this use case: no human interaction is expected to manage the data communication.

# 46.3 Use case: Termination of a Monitoring and control of non-critical infrastructure communication

#### 46.3.1 Description

46.3.1.1 It is possible to terminate data communication between non-critical infrastructure systems and railway staff or a ground based or an on-board system, in order to monitor or control non-critical infrastructure elements.

#### 46.3.2 Pre-conditions

- 46.3.2.1 The Monitoring and control of critical infrastructure applications have a data communication initiated.
- 46.3.2.2 Both applications are authorised to use the Monitoring and control of non-critical infrastructure communication.

#### 46.3.3 Service flows

46.3.3.1 The terminating application terminates the Monitoring and control of non-critical infrastructure communication with the receiving side application.

#### 46.3.4 Post-conditions

- 46.3.4.1 The terminating Monitoring and control of non-critical infrastructure application is disconnected from the receiving application.
- 46.3.4.2 Data cannot be exchanged between the Monitoring and control of non-critical infrastructure applications.

#### 46.3.5 HMI related criteria

46.3.5.1 No criteria related to this use case: no human interaction is expected to manage the data communication.

### 46.4 Use case: service interworking and service continuation with GSM-R

#### 46.4.1 Description

- 46.4.1.1 For migration purposes the service interworking and service continuation between the GSM-R system and FRMCS system for Monitoring and control of non-critical infrastructure communication needs to be clear.
- 46.4.1.2 This use case only applies to end user devices supporting both FRMCS and GSM-R systems.
- 46.4.1.3 For service interworking and service continuation only the packet switched (PS) bearer service is considered.
- 46.4.2 Pre-conditions
- 46.4.2.1 None.
- 46.4.3 Service flows

Initiating Monitoring and control of non-critical infrastructure communication application attached to GSM-R

- 46.4.3.1 When the initiating Monitoring and control of non-critical infrastructure communication application is attached to the GSM-R system and is initiating data communication to another application, the GSM-R system will route the data communication accordingly.
- 46.4.3.2 If the other application is attached to the FRMCS system the GSM-R system can only route the data communication if the destination can be reached by an address or identity understood by the GSM-R system. The role management in FRMCS provides the appropriate address or identity e.g. by providing a mapping of GSM-R identities and FRMCS identities.
- 46.4.3.3 The information from the role management and presence application is used to route the communication and to present the identities.
  - Initiating Monitoring and control of non-critical infrastructure communication application attached to FRMCS
- 46.4.3.4 When the initiating application is attached to the FRMCS system and is initiating data communication to another Monitoring and control of non-critical infrastructure application, the FRMCS system will route the communication accordingly.
- 46.4.3.5 If the other application is attached to the GSM-R system the FRMCS system can only route the data communication if the destination can be reached by an address or identity understood by the FRMCS system. The role management in FRMCS provides the appropriate address or identity e.g. by providing a mapping of GSM-R identities and FRMCS identities.
- 46.4.3.6 The information from the role management and presence application is used to route the communication and to present the identities.
  - Monitoring and control of non-critical infrastructure application moving from GSM-R to FRMCS
- 46.4.3.7 When the Monitoring and control of non-critical infrastructure application is detached from the GSM-R system the FRMCS end user device provides service continuation by setting up the communication via the FRMCS system. An interruption of data communication is acceptable.

Monitoring and control of non-critical infrastructure application moving from FRMCS to GSM-R

- 46.4.3.8 When the Monitoring and control of non-critical infrastructure application is detached from the FRMCS system the FRMCS end user device provides service continuation by setting up the communication via the GSM-R system. An interruption of data communication is acceptable.
- 46.4.4 Post-conditions
- 46.4.4.1 None.
- 46.4.5 Related URS application interfaces
- 46.4.5.1 None.
- 46.4.6 HMI related criteria
- 46.4.6.1 None.

# 47 Non critical real Time Video communication related use cases

#### 47.1 Introduction

In this chapter the use cases related to real time video communication are described, the following use cases are identified

- Initiation of a real time video communication
- Termination of a real time video communication
- Service interworking and service continuation with GSM-R

#### 47.2 Description

- 47.2.1.1 The video image quality depends on the application needs, e.g. lip reading, pattern detection.
- 47.2.1.2 Video based supervision for rail operational purposes requires also the support of Real time video capabilities of the FRMCS system. Multiple recipients may use the real time video for different purposes.
- 47.2.1.3 The users in this case are applications both onboard of the train and on the ground, for example users in a train control center.
- 47.2.1.4 For real time video communication, both video and audio information are combined.

#### 47.3 Use case: Initiation of a real time video communication

#### 47.3.1 Pre-conditions

- 47.3.1.1 The initiating application is authorised to initiate the real time video communication.
- 47.3.1.2 The receiving application(s) is authorised to use the real time video communication.

#### 47.3.2 Service flows

- 47.3.2.1 The initiating application or FRMCS user requests a user-to-user real time video data communication to the receiving side. The QoS class of the communication is managed by the QoS class application. The video communication requests the QoS class which matches the application category of VIDEO or CRITICAL VIDEO (see [QoS]) within the FRMCS system, depending on the application needs.
- 47.3.2.2 The video quality requested to the FRMCS system by the initiating application or FRMCS user is checked by the FRMCS application.
- 47.3.2.3 If the requested quality can be reached, the FRMCS system establishes the real time video data communication with a setup time specified as NORMAL (see [QoS]).
- 47.3.2.4 If the requested quality can not be reached the application or the FRMCS user can decide to stop the request or to continue the setup of the data communication with a lower video quality, depending on the application needs.
- 47.3.2.5 During the real time video communication the FRMCS application constantly monitors the quality. If the delivered quality of the real time video data communication changes, the application or the FRMCS user is informed about the change. The application or the FRMCS user may decide to change the quality of the real time video data communication, depending on the applications needs.

- 47.3.2.6 If authorized, the real time video communication is recodred by the data recording and access to recorded data application.
- 47.3.2.7 The arbitration is managed by the arbitration application.

#### 47.3.3 Post-conditions

47.3.3.1 Depending on the QoS class offered and the application or an FRMCS user's decision data communiction is setup.

#### 47.4 Use case: Termination of a real time video data communication

#### 47.4.1 Pre-conditions

47.4.1.1 There is an ongoing real time video data communication.

#### 47.4.2 Service flows

47.4.2.1 The applications or FRMCS users involved terminate the real time video data communication

#### 47.4.3 Post-conditions

47.4.3.1 The real time video data communication is terminated. The application or the FRMCS user is informed about the termination.

#### 47.4.4 Communication attributes

URS Ref.	Туре	Symmetry Up/Down	Distribution	Latency	Bandwidth	Reliability	Setup	Speed
6.13	Bi- directional Data	95/5	User-to-User	Low	High	Normal	Normal	High

#### 47.4.5 Related URS application interfaces

47.4.5.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application
5.20	Data recording and access
6.20	Transfer of data
8.3	Role management and presence
8.4	Location services
8.6	Authorisation of data communication
8.7	Authorisation of application
8.8	QoS Class Negotiation
8.12	Arbitration

#### 47.4.6 HMI related criteria

47.4.6.1 None.

47.5	Use case: service	interworking	and	service	continuation	with	GSM-R
47.5.1.1	No requirements.						

# Wireless on-train data communication for train staff related use cases

#### 48.1 Introduction

In this chapter the use cases related to Wireless on-train data communication for train staff related use cases are described, the following use cases are identified:

- Initiation of Wireless on-train data communication for train staff
- Termination of Wireless on-train data communication for train staff
- · Service interworking and service continuation with GSM-R

#### 48.2 Use case: Wireless on-train data communication for train staff

#### 48.2.1 Description

48.2.1.1 Train staff are able to use intranet/internet services via a wireless connection in a train. The internet service continues when users are moving from the platform to on-train, and vice-versa.

#### 48.2.2 Pre-conditions

48.2.2.1 The initiating application is authorised to initiate Wireless on-train data communication for train staff. This is managed by the authorisation of data communication application.

#### 48.2.3 Service flows

- 48.2.3.1 The initiating application initiates the Wireless on-train data communication for train staff. The communication requests the QoS class which matches the application category of NON-CRITICAL DATA (see [QoS]) within the FRMCS system.
- 48.2.3.2 The FRMCS system establishes the bearer service required for the data communication within a setup time specified as NORMAL (see [QoS]).
- 48.2.3.3 The arbitration is managed by the arbitration application.
- 48.2.3.4 The communication is recorded by the Data recording and access to recorded data application.

#### 48.2.4 Post-conditions

48.2.4.1 The user is connected to the requested service.

#### 48.2.5 Communication attributes

UR Re		Туре	Symmetry Up/Down	Distribution	Latency	Bandwidth	Reliability	Setup	Speed
6.1	4	Bi- directional Data	50/50	User-to-User	Normal	Low	High	Normal	Low

## 48.2.6 Related URS application interfaces

48.2.6.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application
8.3	Role management and presence
8.4	Location services
8.6	Authorisation of data communication
8.7	Authorisation of application
8.8	QoS Class negotiation
8.12	Arbitration
5.20	Data recording and access
6.20	Transfer of data

#### 48.2.7 HMI related criteria

48.2.7.1 No criteria related to this use case: no human interaction is expected to manage the data communication.

- 48.3 Use case: Termination of Wireless on-train data communication for train staff
- 48.3.1 Description
- 48.3.1.1 It is possible to terminate the Wireless on-train data communication for train staff.
- 48.3.2 Pre-conditions
- 48.3.2.1 The Wireless on-train data communication for train staff applications have a data communication initiated.
- 48.3.3 Service flows
- 48.3.3.1 The terminating application terminates the Wireless on-train data communication for train staff
- 48.3.4 Post-conditions
- 48.3.4.1 The Wireless on-train data communication for train staff application is terminated.
- 48.3.5 HMI related criteria
- 48.3.5.1 No criteria related to this use case: no human interaction is expected to manage the data communication.

- 48.4 Use case: service interworking and service continuation with GSM-R
- 48.4.1 Description
- 48.4.1.1 Not applicable, the data capabilities of GSM-R is not sufficient for this type of application.

# Wireless internet for railway staff on platforms related use cases

#### 49.1 Introduction

In this chapter the use cases related to Wireless data communications for railway staff on platforms use cases are described, the following use cases are identified

- Initiation of Wireless data communications for railway staff on platforms
- Termination of Wireless data communications for railway staff on platforms
- Service interworking and service continuation with GSM-R

# 49.2 Use case: Initiation of Wireless data communications for railway staff on platforms

#### 49.2.1 Description

49.2.1.1 It is possible for railway staff to use intranet/internet services via a wireless connection in railway areas (for example platforms, station areas etc.). The internet service continues when users are moving from platform to on-train, and vice-versa.

#### 49.2.2 Pre-conditions

49.2.2.1 The initiating application is authorised to initiate Wireless datacommunications for railway staff on platforms. This is managed by the authorisation of data communication application.

#### 49.2.3 Service flows

- 49.2.3.1 The initiating application initiates the Wireless datacommunications for railway staff on platforms. The communication requests the QoS class which matches the application category of NON-CRITICAL DATA (see [QoS]) within the FRMCS system.
- 49.2.3.2 The FRMCS system establishes the bearer service required for the data communication within a setup time specified as NORMAL (see [QoS]).
- 49.2.3.3 The arbitration is managed by the arbitration application.
- 49.2.3.4 The communication is recorded by the Data recording and access to recorded data application.

#### 49.2.4 Post-conditions

49.2.4.1 The user is connected to the requested service.

#### 49.2.5 Communication attributes

UF Re		Туре	Symmetry Up/Down	Distribution	Latency	Bandwidth	Reliability	Setup	Speed
6.1	15	Bi- directional Data	50/50	User-to-User	Normal	Low	High	Normal	Low

## 49.2.6 Related URS application interfaces

49.2.6.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application				
8.3	Role management and presence				
8.4	Location services				
8.6	Authorisation of data communication				
8.7	Authorisation of application				
8.8	QoS Class negotiation				
8.12	Arbitration				
5.20	Data recording and access				
6.20	Transfer of data				

#### 49.2.7 HMI related criteria

49.2.7.1 No criteria related to this use case: no human interaction is expected to manage the data communication.

- 49.3 Use case: Termination of Wireless data communications for railway staff on platforms
- 49.3.1 Description
- 49.3.1.1 It is possible to terminate the Wireless datacommunications for railway staff on platforms.
- 49.3.2 Pre-conditions
- 49.3.2.1 The Wireless datacommunications for railway staff on platforms application have a data communication initiated.
- 49.3.3 Service flows
- 49.3.3.1 The terminating application terminates the Wireless datacommunications for railway staff on platforms
- 49.3.4 Post-conditions
- 49.3.4.1 The Wireless datacommunications for railway staff on platforms application is terminated.
- 49.3.5 HMI related criteria
- 49.3.5.1 No criteria related to this use case: no human interaction is expected to manage the data communication.

- 49.4 Use case: service interworking and service continuation with GSM-R
- 49.4.1 Description
- 49.4.1.1 Not applicable, the data capabilities of GSM-R is not sufficient for this type of application.

## 50 Train driver advisory - train performance related use cases

#### 50.1 Introduction

In this chapter the use cases related to Driver advisory train performance communication are described, the following use cases are identified

- Initiation of Driver advisory train performance communication
- Termination of Driver advisory train performance communication
- Service interworking and service continuation with GSM-R

## 50.2 Use case: Initiation of Driver advisory train performance communication

#### 50.2.1 Description

50.2.1.1 It is possible to initiate data communication to provide advisory information to the driver in order to optimise the train journey (for example Driver Advisory System (DAS), Traffic management (TM), Power consumption management).

#### 50.2.2 Pre-conditions

- 50.2.2.1 The initiating application is authorised to initiate Driver advisory train performance communication. This is managed by the authorisation of data communication application.
- 50.2.2.2 The receiving application is authorised to use the Driver advisory train performance communication.

#### 50.2.3 Service flows

- 50.2.3.1 The initiating application initiates the Driver advisory train performance communication to the receiving side. The communication requests the QoS class which matches the application category of NON-CRITICAL DATA (see [QoS]) within the FRMCS system.
- 50.2.3.2 The FRMCS system establishes the bearer service required for the data communication within a setup time specified as NORMAL (see [QoS]).
- 50.2.3.3 The arbitration is managed by the arbitration application.
- 50.2.3.4 The communication is recorded by the Data recording and access to recorded data application.

#### 50.2.4 Post-conditions

- 50.2.4.1 The initating application is connected to the receiving application.
- 50.2.4.2 Data can be exchanged between the Driver advisory train performance applications.

#### 50.2.5 Communication attributes

6.17	Bi- directional 50/50 Data	User-to-User	Normal	Low	High	Normal	Low	
------	----------------------------------	--------------	--------	-----	------	--------	-----	--

#### 50.2.6 Related URS application interfaces

50.2.6.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application					
8.3	Role management and presence					
8.4	Location services					
8.6	Authorisation of data communication					
8.7	Authorisation of application					
8.8	QoS Class negotiation					
8.10	Secure data communication					
8.12	Arbitration					
5.20	Data recording and access					
6.20	Transfer of data					

#### 50.2.7 HMI related criteria

50.2.7.1 The instructions for the driver is displayed on a dedicated HMI or on a multipurpose HMI

# 50.3 Use case: Termination of Driver advisory train performance communication

#### 50.3.1 Description

50.3.1.1 It is possible to terminate the Driver advisory train performance communication.

#### 50.3.2 Pre-conditions

- 50.3.2.1 The Driver advisory train performance communication applications have a data communication initiated.
- 50.3.2.2 Both applications are authorised to use the Driver advisory train performance communication.

#### 50.3.3 Service flows

50.3.3.1 The terminating application terminates the Driver advisory train performance communication with the receiving side application.

#### 50.3.4 Post-conditions

- 50.3.4.1 The terminating Driver advisory train performance communication application is disconnected from the receiving application.
- 50.3.4.2 Data cannot be exchanged between the Driver advisory train performance communication applications.

#### 50.3.5 HMI related criteria

50.3.5.1 No criteria related to this use case: no human interaction is expected to manage the data communication.

#### 50.4 Use case: service interworking and service continuation with GSM-R

#### 50.4.1 Description

- 50.4.1.1 For migration purposes the service interworking and service continuation between the GSM-R system and FRMCS system for Infrastructure telemetry communication needs to be clear.
- 50.4.1.2 This use case only applies to end user devices supporting both FRMCS and GSM-R systems.
- 50.4.1.3 For service interworking and service continuation only the packet switched (PS) bearer service is considered.
- 50.4.2 Pre-conditions
- 50.4.2.1 None.
- 50.4.3 Service flows

Initiating Driver advisory train performance communication application attached to GSM-R

- 50.4.3.1 When the initiating Driver advisory train performance communication application is attached to the GSM-R system and is initiating data communication to another application, the GSM-R system will route the data communication accordingly.
- 50.4.3.2 If the other application is attached to the FRMCS system the GSM-R system can only route the data communication if the destination can be reached by an address or identity understood by the GSM-R system. The role management in FRMCS provides the appropriate address or identity e.g. by providing a mapping of GSM-R identities and FRMCS identities.
- 50.4.3.3 The information from the role management and presence application is used to route the communication and to present the identities.
  - Initiating Driver advisory train performance communication application attached to FRMCS
- 50.4.3.4 When the initiating Driver advisory train performance communication application is attached to the FRMCS system and is initiating data communication to another Infrastructure telemetry application, the FRMCS system will route the communication accordingly.
- 50.4.3.5 If the other application is attached to the GSM-R system the FRMCS system can only route the data communication if the destination can be reached by an address or identity understood by the FRMCS system. The role management in FRMCS provides the appropriate address or identity e.g. by providing a mapping of GSM-R identities and FRMCS identities.
- 50.4.3.6 The information from the role management and presence application is used to route the communication and to present the identities.
  - Driver advisory train performance communication application moving from GSM-R to FRMCS
- 50.4.3.7 When the Driver advisory train performance communication application is detached from the GSM-R system the FRMCS end user device provides service continuation by setting up the communication via the FRMCS system. An interruption of data communication is acceptable.
  - Driver advisory train performance communication application moving from FRMCS to GSM-R

50.4.3.8 When the Driver advisory train performance communication application is detached from the FRMCS system the FRMCS end user device provides service continuation by setting up the communication via the GSM-R system. An interruption of data communication is acceptable.

50.4.4 Post-conditions

50.4.4.1 None.

50.4.5 Related URS application interfaces

50.4.5.1 None.

50.4.6 HMI related criteria

50.4.6.1 None.

## 51 Train departure data communications related use cases

#### 51.1 Introduction

In this chapter the use cases related to Train departure data communications are described, the following use cases are identified

- Initiation of Train departure data communications
- Termination of a Train departure data communication
- Service interworking and service continuation with GSM-R

#### 51.2 Use case: Initiation of Train departure data communications

#### 51.2.1 Description

- 51.2.1.1 Train departure data communications covers two operational scenarios:
  - Train ready message sent from the driver to the controller every time a train is ready to access the network for the first time. In this case data communication (format and procedures) in countries of the EU is according to [OPE TSI], [TAP TSI] and [TAF TSI].
  - Train ready for departure from a platform. This communication typically involves train staff (e.g. chief conductor) and driver.
- 51.2.1.2 A user is able to set up data communications with other involved users to support the departure processes.
- 51.2.1.3 This use case is available in both on-network and off-network conditions.

#### 51.2.2 Pre-conditions

- 51.2.2.1 The user is authorised to initiate Train departure data communications. This is managed by the authorisation of data communication application.
- 51.2.2.2 The user is authorised to use the Train departure data application by the application authorisation of application

#### 51.2.3 Service flows

Train ready message to the controller / external system

- 51.2.3.1 The driver initiates the Train departure data communication towards the controller and/or extrernal system. The communication requests the QoS class which matches the application category of NON-CRITICAL DATA (see [QoS]) within the FRMCS system.
- 51.2.3.2 The FRMCS system determines the responsible controller(s)/external system, based on e.g.:
  - location information provided by the locations services application, and/or
  - functional identity provided by the role management and presence application.
  - System configuration on which controller/external system is responsible for which part of the track/station/etc.
- 51.2.3.3 The FRMCS system establishes the data communication to the controller(s)/external system within a setup time specified as NORMAL (see [QoS]). The information from the role management and presence application is used to

- present the identities to the driver and controller(s)/ external system. Also the location of the driver is presented to the controller(s)/ external system which is retrived from the location services application.
- 51.2.3.4 The arbitration is managed by the arbitration application.
- 51.2.3.5 The communication is recorded by the data recording and access to recorded data application.

Train ready for departure message to the driver

- 51.2.3.6 A member of train staff initiates the Train departure data communication towards the driver. The communication requests the QoS class which matches the application category of NON-CRITICAL DATA (see [QoS]) within the FRMCS system.
- 51.2.3.7 The FRMCS system determines the requested driver based on the identity provided by the member of train staff.
- 51.2.3.8 The FRMCS system establishes the data communication to the driver within a setup time specified as NORMAL (see [QoS]). The information from the role management and presence application is used to present the identities to the driver and initiating user.
- 51.2.3.9 The arbitration is managed by the arbitration application.
- 51.2.3.10 The communication is recorded by the data recording and access to recorded data application.

#### 51.2.4 Post-conditions

- 51.2.4.1 The Train departure data communication is established between the driver and the controller(s) and/or external system.
- 51.2.4.2 The Train departure data communication is established between train staff and the driver.

#### 51.2.5 Communication Attributes

URS Ref.	Туре	Symmetry Up/Down	Distribution	Latency	Bandwidth	Reliability	Setup	Speed
6.18	Bi- directional data	50/50	User-to-User	Normal	Low	Normal	Normal	Low

#### 51.2.6 Related URS application interfaces

51.2.6.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application				
8.3	Role management and presence				
8.4	Location services				
8.5	Authorisation of communication				

8.7	Authorisation of application			
8.8	QoS Class Negotiation			
8.12	Arbitration			
5.20	Data recording and access			
6.20	Transfer of data			

#### 51.2.7 HMI related criteria

- 51.2.7.1 Initiating a departure command is achieved with the minimum of interaction (for example, a single button press or selection from a list). Where selection from a list is determined to be the preferred option, then the list is accessed with the minimum of interaction and be intuitive.
- 51.2.7.2 The driver receives the departure command with no or the minimum of interaction (for example by a visual alert).

- 51.3 Use case: Termination of Train departure data communication
- 51.3.1 Description
- 51.3.1.1 The initiating user is able to terminate the Train departure data communication.
- 51.3.1.2 The driver is able to terminate the Train departure data communication.
- 51.3.1.3 This use case is available in both on-network and off-network conditions.
- 51.3.2 Pre-conditions
- 51.3.2.1 The Train departure data communication is ongoing.
- 51.3.3 Service flows
- 51.3.3.1 The initiating user or the driver is able to terminate the train departure data communication.
- 51.3.3.2 The FRMCS system terminates the train departure data communication. The other party is informed.
- 51.3.4 Post-conditions
- 51.3.4.1 The Train departure data communication is terminated.
- 51.3.5 HMI related criteria
- 51.3.5.1 All users are informed when a communication is terminated.

- 51.4 Use case: Service interworking and service continuation with GSM-R
- 51.4.1 Description
- 51.4.1.1 For migration purposes the service interworking and service continuation between the GSM-R system and FRMCS system for Train departure data communication.
- 51.4.1.2 The intiating user as well as the driver can be attached either in the GSM-R system or in the FRMCS system.
- 51.4.1.3 This use case only applies to end user devices supporting both FRMCS and GSM-R systems.
- 51.4.2 Pre-conditions
- 51.4.2.1 None.
- 51.4.3 Service flows

User attached to GSM-R

- 51.4.3.1 When the initiating user is attached to the GSM-R system and is initiating Train departure data communication to the driver, the GSM-R system will route the communication to the the driver accordingly.
- 51.4.3.2 The Train departure data communication is linked together and controlled by the FRMCS system.
- 51.4.3.3 Service interworking between the talker control in the GSM-R system and the FRMCS system is required, but without changing the GSM-R system.
- 51.4.3.4 If the driver is located in the FRMCS system the GSM-R system can only route the call if it can be reached by an address or identity understood by the GSM-R system. The role management in FRMCS provides the appropriate address or identity e.g. by provide a mapping of GSM-R identities and FRMCS identities.
- 51.4.3.5 The information from the role management and presence application is used to route the communication and to present the identities of both initiating user and driver.

User attached to FRMCS

- 51.4.3.6 When the initiating user is active in the FRMCS system and is initiating Train departure data communication to the driver, the FRMCS system will route the communication to the driver accordingly.
- 51.4.3.7 The Train departure data communication is linked together and controlled by the FRMCS system.
- 51.4.3.8 The information from the role management and presence application is used to route the communication and to present the identities of both initiating user and driver. The role management in FRMCS provides the appropriate address or identity e.g. by provide a mapping of GSM-R identities and FRMCS identities.

Moving from GSM-R to FRMCS

51.4.3.9 When the GSM-R user equipment of the user or driver is detached from the GSM-R system the FRMCS end user device provides service continuation by setting up the communication via the FRMCS system. An interruption of the communication is acceptable.

Moving from FRMCS to GSM-R

51.4.3.10 When the FRMCS user equipment of the of the user or driver is detached from the FRMCS system the FRMCS end user device provides service continuation

by setting up the communication via the GSM-R system. An interruption of the communication is acceptable.

51.4.4 Post-conditions

51.4.4.1 None.

51.4.5 Related URS application interfaces

51.4.5.1 None.

51.4.6 HMI related criteria

51.4.6.1 None.

## 52 Messaging Services related use cases

#### 52.1 Introduction

In this chapter the use cases related to the messaging services are defined.

The following use cases are defined:

- Sending of a message
- Delivery of a message
- (Un)Subscription to a messaging channel
- Acknowledgement of a message
- · Service interworking and service continuation with GSM-R

#### 52.2 Description

52.2.1.1 A messaging service can be defined as a service allowing the delivery of information from a user, to a user or a group of users in a way which doesn't imply a voice communication between involved users.

#### 52.3 Use case: Sending of a message

#### 52.3.1 Description

- 52.3.1.1 A user or an external system is able to send non-critical messages like text, recorded voice (for example voicemail), data, pictures, video.
- 52.3.1.2 Messages can be adressed on user-to-user or a user-to-multi user level.
- 52.3.1.3 A user is able to send a message previously received (forwarding).
- 52.3.1.4 In the case the sending of the message is related to a specific messaging service requiring a pre-subscription, the user is subscribed to this channel (e.g. weather information, strike information).

#### 52.3.2 Pre-conditions

- 52.3.2.1 The initiating application is authorised to initiate the messaging service. This is managed by the authorisation of data communication application.
- 52.3.2.2 The receiving application is authorised to use the messaging service.

#### 52.3.3 Service flows

- 52.3.3.1 A user or an external system is able to send a message. The QoS class of the communication is managed by the QoS class application. The messaging communication requests the QoS class which matches the application category of MESSAGING (see [QoS]) within the FRMCS system.
- 52.3.3.2 The FRMCS system determines the set of adressed users based on:
  - the list of FRMCS users who have subscribed to the service and/or;
  - a list of FRMCS user/functional identities provided by the sender and/or;
  - the type of functional identities of FRMCS users (e.g. broadcasting only to certain functions) and/or;

- the position of the FRMCS users and/or;
- the status of the FRMCS users and/or;
- the time frame the message is to be delivered;
- the system configuration.
- 52.3.3.3 The FRMCS system handle the message within a time specified as NORMAL (see [QoS]).
- 52.3.3.4 The arbitration is managed by the arbitration application.
- 52.3.3.5 The messages are recorded by the data recording and access application.

#### 52.3.4 Post-conditions

52.3.4.1 The message is ready to be delivered to all potential adressed recipients (now and during all the defined timeframe).

#### 52.3.5 Communication Attributes

URS Ref.	Туре	Symmetry Up/Down	Distribution	Latency	Bandwidth	Reliability	Setup	Speed
6.19	Bi- directional data	50/50	User-to- User/Multi- user	Normal	Low	Normal	Normal	High

#### 52.3.6 Related URS application interfaces

52.3.6.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application				
8.3	Role management and presence				
8.4	Location services				
8.5	Authorisation of communication				
8.7	Authorisation of application				
8.8	QoS Class Negotiation				
8.12	Arbitration				
5.20	Data recording and access				

#### 52.3.7 HMI related criteria

- 52.3.7.1 When applicable, the input of textual content is eased by the HMI (e.g. predictive typing, speech-to-text,..).
- 52.3.7.2 When applicable, the selection of the recipients of a message is achieved with the minimum of interaction (for example, a single button press or selection from list). Where selection from a list is determined to be the preferred option, then the list is accessed with the minimum of interaction and be intuitive.

52.3.7.3 For predefined message the selection of the message is achieved with the minimum of interaction (for example, a single button press or selection from list). Where selection from a list is determined to be the preferred option, then the list is accessed with the minimum of interaction and be intuitive.

# 52.4 Use case: Delivery of a message

# 52.4.1 Description

- 52.4.1.1 A user is able to receive non-critical messages like text, recorded voice (for example voicemail), data, pictures, video.
- 52.4.1.2 Messages can be exchanged on user-to-user or a user-to-multi user level.

#### 52.4.2 Pre-conditions

- 52.4.2.1 The initiating application is authorised to initiate the messaging service. This is managed by the authorisation of data communication application.
- 52.4.2.2 The receiving application is authorised to use the messaging service.

#### 52.4.3 Service flows

- 52.4.3.1 A user is able to receive a message. The QoS class of the communication is managed by the QoS class application. The messaging communication requests the QoS class which matches the application category of MESSAGING (see [QoS]) within the FRMCS system.
- 52.4.3.2 The FRMCS system deliver the message to the recipients within a time specified as NORMAL (see [QoS]). The information from the role management and presence application is used to present the identity of the sender to the recipient(s).
- 52.4.3.3 For each recipient, the FRMCS system is providing to the sender a delivery report including information like:
  - the time of delivery;
  - the position of delivery;
  - the user identity of the FRMCS user;
  - the functional identity/ies of the FRMCS user (based on the criteria of the receiver):
  - the unique reference of the initially sent message.
- 52.4.3.4 The arbitration is managed by the arbitration application. Depending on the arbitration application, the incoming message is notified immediately or later to the user.
- 52.4.3.5 The user who has been notified about the incoming message is able to play the message.
- 52.4.3.6 The messages are recorded by the data recording and access application.

#### 52.4.4 Post-conditions

- 52.4.4.1 The message is delivered to all adressed recipients.
- 52.4.4.2 The message is notified to the adressed users.
- 52.4.4.3 The message is played by the adressed users.

#### 52.4.5 HMI related criteria

- 52.4.5.1 Users receiving a message are presented with meaningful information about it, for example:
  - User/Functional identity of the originator.
  - Information relating to the position of the originator.
  - A simple description of incoming communication.

52.4.5.2 Where a functional identity is provided, it is consistent with the harmonised operational rules (where necessary).

# 52.5 Use case: (Un)Subscription to a messaging channel

# 52.5.1 Description

52.5.1.1 A user is able to subscribe and unsubscribe to/from a specific messaging channel within the messaging service in order to be be adressed by the messages delivered by this service. A messaging channel is for example a train staff from a specific RU or train staff of an RU on a specific station.

#### 52.5.2 Pre-conditions

52.5.2.1 The user is authorised to use the specific Messaging Service.

#### 52.5.3 Service flows

Subscribe to a messaging channel

- 52.5.3.1 The user selects the requested messaging channel. The messaging channel can be selected from a list based on the location of the user, operational schedules, etc. and/or on the functional identities registered by the user.
- 52.5.3.2 The user sends the subscription request(s) to system.
- 52.5.3.3 If the FRMCS system accepts the subscription request, the user is informed. The messaging channel is enabled for the user.
- 52.5.3.4 If the FRMCS system rejects the subscription request, the user is informed of this rejection including the reason.

Unsubscribe from a messaging channel

- 52.5.3.5 The user chooses the messaging channel to be unsuscribed among the list of currently subscribed mesaging services.
- 52.5.3.6 The user sends the unsubscription request to the system.
- 52.5.3.7 If the FRMCS system accepts the unsubscription request, the user is informed. The messaging channel is disabled for the user.
- 52.5.3.8 If the FRMCS system rejects the unsubscription request, the user is informed of this rejection including the reason.

# 52.5.4 Post-conditions

52.5.4.1 The messaging channel is enabled (disabled) for the user.

- 52.6 Use case: Acknowledgement of a message
- 52.6.1 Description
- 52.6.1.1 As soon as the user has played a previously delivered message, he is able to send an acknowledgement to the sender.
- 52.6.2 Pre-conditions
- 52.6.2.1 The message that is acknowledged has been played by the user.
- 52.6.3 Service flows
- 52.6.3.1 The user is invited to send an acknowledgement report to the sender of the message or the equipment determines automatically that the acknowledgement report is mandatory.
- 52.6.3.2 The equipment is providing to the sender an acknowledgement including information like:
  - the time of acknowledge;
  - the position of acknowledge;
  - the user identity of the FRMCS user;
  - the functional identity of the FRMCS user.
  - · the unique reference of the initially sent message

# 52.6.4 Post-conditions

52.6.4.1 The sender of the message has received an acknowledgement from the recipient.

- 52.7 Use case: service interworking and service continuation with GSM-R
- 52.7.1 Description
- 52.7.1.1 Not applicable, the data capabilities of GSM-R is not sufficient for this type of application.

# 53 Transfer of data related use cases

#### 53.1 Introduction

In this chapter the use cases related to the transfer of data are described, the following use cases are identified

- Initiation of a transfer of data
- Termination of a transfer of data
- Service interworking and service continuation with GSM-R

# 53.2 Use case: Initiation of a transfer of data related use case

# 53.2.1 Description

53.2.1.1 It is possible to initiate a transfer of recorded data between on-board systems and ground based systems for post-accident/incident analysis (for example, CCTV, JRU, energy metering data), or any other data that requires to be transferred between users, for example, data from train staff, time table data.

## 53.2.2 Pre-conditions

- 53.2.2.1 The initiating user is authorised to initiate a transfer of recorded data. This is managed by the authorisation of data application.
- 53.2.2.2 The receiving user is authorised to receive the transfer of recorded data.

#### 53.2.3 Service flows

- 53.2.3.1 The initiating user initiates a transfer of recorded data from/to the other user. The communication requests the QoS class which matches the application category of NON-CRITICAL DATA (see [QoS]) within the FRMCS system.
- 53.2.3.2 The FRMCS system establishes the bearer service required for the data communication within a setup time specified as NORMAL (see [QoS]).
- 53.2.3.3 The arbitration is managed by the arbitration application.
- 53.2.3.4 The communication is recorded by the Data recording and access to recorded data application.

## 53.2.4 Post-conditions

- 53.2.4.1 The initiating user is connected to the user which is the owner/recipient of the recorded data to be transfered.
- 53.2.4.2 Data can be exchanged between both authorised users.

# 53.2.5 Communication attributes

URS Ref.	Туре	Symmetry Up/Down	Distribution	Latency	Bandwidth	Reliability	Setup	Speed
6.20	Bi- directional data	50/50	User-to-User	Normal	Medium	Normal	Normal	High

# 53.2.6 Related URS application interfaces

53.2.6.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application
8.3	Role management and presence
8.4	Location services
8.5	Authorisation of communication
8.7	Authorisation of application
8.8	QoS Class Negotiation
8.12	Arbitration

# 53.2.7 HMI related criteria

- 53.2.7.1 Users receiving recorded data are presented with all railway operational data information about it, for example:
  - train identity
  - engine identity
  - functional identity
  - location data etc.
- 53.2.7.2 Where a functional identity is provided, it is consistent with the harmonised operational rules (where necessary).

- 53.3 Use case: Termination of a transfer of data related use case
- 53.3.1 Description
- 53.3.1.1 It is possible to terminate a transfer of recorded data between on-board systems and ground based systems for post-accident/incident analysis or any other data that requires to be transferred between users.
- 53.3.2 Pre-conditions
- 53.3.2.1 The initiating user is connected to the user which is the owner/recipient of the recorded data to be transfered.
- 53.3.2.2 Data can be exchanged between both authorised users.
- 53.3.3 Service flows
- 53.3.3.1 The applications or users involved terminate the transfer of recorded data between on-board systems and ground based systems or any other data that requires to be transferred between users.
- 53.3.4 Post-conditions
- 53.3.4.1 The applications or users involved are disconnected from the receiving resp. sending application.
- 53.3.4.2 Data cannot be exchanged between the users.
- 53.3.5 HMI related criteria
- 53.3.5.1 The termination of the transfer of data is achieved with the minimum of interaction.

- 53.4 Use case: Service interworking and service continuation with GSM-R
- 53.4.1 Description
- 53.4.1.1 For migration purposes the service interworking and service continuation between the GSM-R system and FRMCS system for transfer of recorded data needs to be clear.
- 53.4.1.2 This use case only applies to end user devices supporting both FRMCS and GSM-R systems.
- 53.4.1.3 For service interworking and service continuation only the packet switched (PS) bearer service is considered.
- 53.4.2 Pre-conditions
- 53.4.2.1 None.
- 53.4.3 Service flows
  - Initiating the transfer of recorded data from/to the other user attached to GSM-R
- 53.4.3.1 When the initiating user of transfer of recorded data is attached to the GSM-R system and is initiating data communication to another user, the GSM-R system will route the data communication accordingly.
- 53.4.3.2 If the other user is attached to the FRMCS system the GSM-R system can only route the data communication if the destination can be reached by an address or identity understood by the GSM-R system. The role management in FRMCS provides the appropriate address or identity e.g. by providing a mapping of GSM-R identities and FRMCS identities.
- 53.4.3.3 The information from the role management and presence application is used to route the communication and to present the identities.
  - Initiating the transfer of recorded data from/to the other user attached to FRMCS
- 53.4.3.4 When the initiating user of transfer of recorded data is attached to the FRMCS system and is initiating data communication to another Monitoring and control of non-critical infrastructure application, the FRMCS system will route the communication accordingly.
- 53.4.3.5 If the other application is attached to the GSM-R system the FRMCS system can only route the data communication if the destination can be reached by an address or identity understood by the FRMCS system. The role management in FRMCS provides the appropriate address or identity e.g. by providing a mapping of GSM-R identities and FRMCS identities.
- 53.4.3.6 The information from the role management and presence application is used to route the communication and to present the identities.
  - Transfer of recorded data moving from GSM-R to FRMCS
- 53.4.3.7 When the transfer of recorded data user is detached from the GSM-R system the FRMCS end user device provides service continuation by setting up the communication via the FRMCS system. An interruption of data communication is acceptable.
  - Transfer of recorded data moving from FRMCS to GSM-R
- 53.4.3.8 When the transfer of recorded data user is detached from the FRMCS system the FRMCS end user device provides service continuation by setting up the communication via the GSM-R system. An interruption of data communication is acceptable.

# 53.4.4 Post-conditions

53.4.4.1 None.

# Record and broadcast of information related use cases

# 54.1 Introduction

In this chapter the use cases related to Record and broadcast are defined. The following use cases are defined:

- Recording of a broadcast information
- Broadcast of a pre-recorded information
- Acknowledgement of a received broadcast information
- Cancellation of the broadcast
- Service interworking with GSM-R
- 54.2 Use case: Recording of a broadcast information
- 54.2.1 Description
- 54.2.2 A user is able to record a voice or a video information for a later delivery to the selected users.
- 54.2.3 Pre-conditions
- 54.2.3.1 The user is authorised to use Record and broadcast application by the application authorisation of application
- 54.2.4 Service flows
- 54.2.5 A user is able to generate and record a voice or video information for a later delivery.
- 54.2.6 Post-conditions
- 54.2.6.1 The information is recorded by the FRMCS system.

- 54.3 Use case: Broadcast of a pre-recorded information
- 54.3.1 Description
- 54.3.2 A user is able to broadcast a pre-recorded voice or a video information to the selected users.
- 54.3.3 Pre-conditions
- 54.3.3.1 The user is authorised to use Record and broadcast application by the application authorisation of application
- 54.3.4 Service flows
- 54.3.5 A user is able to select a pre-recorded voice or video information for broadcast.
- 54.3.6 A user is able to define characteristics for the broadcast:
  - recipients of the information based on:
    - geographical area over which the information will be delivered
    - selected functional identities or types of identities
  - number of broadcast repetitions and interval
  - triggers for broadcast based on certain criteria's (e.g. certain time, users arriving on the area etc.)
  - Request for acknowledgement of the received information
- 54.3.7 A user is able to broadcast a pre-recorded a voice or video information. The QoS class of the communication is managed by the QoS class application. The Record and broadcast application requests the QoS class which matches the application category of NON-CRITICAL DATA (see [QoS]) within the FRMCS system.
- 54.3.7.1 The FRMCS system deliver the information to the recipients within a setup time specified as NORMAL (see [QoS]). The information from the role management and presence application is used to present the identity of the sender to the recipient(s).
- 54.3.7.2 The arbitration is managed by the arbitration application.
- 54.3.7.3 The data communication is recorded by the data recording and access application.
- 54.3.8 Post-conditions
- 54.3.8.1 The information is broadcasted and delivered to all adressed recipients.
- 54.3.9 HMI related criteria
- 54.3.9.1 When applicable, the selection of the recipients of information is achieved with the minimum of interaction (for example, a single button press or selection from list). Where selection from a list is determined to be the preferred option, then the list is accessed with the minimum of interaction and be intuitive.
- 54.3.9.2 The selection of a pre-recorded information is achieved with the minimum of interaction (for example, a single button press or selection from list). Where selection from a list is determined to be the preferred option, then the list is accessed with the minimum of interaction and be intuitive.
- 54.3.9.3 Users receiving information are presented with meaningful information about it, for example:
  - Functional identity of the originator.

# 54.3.10 Communication Attributes

URS Ref.	Туре	Symmetry Up/Down	Distribution	Latency	Bandwidth	Reliability	Setup	Speed
6.21	Bi- directional Data	5/95	User-to- User/Multi- user	Normal	Medium	Normal	Normal	High

# 54.3.11 Related URS application interfaces

54.3.11.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application
8.3	Role management and presence
8.4	Location services
8.5	Authorisation of communication
8.7	Authorisation of application
8.8	QoS Class Negotiation
8.12	Arbitration
8.10	Secure data communication
5.20	Data recording and access

# 54.3.12 HMI related criteria

- 54.3.12.1 The user is able to listen to the recorded information and to delete it.
- 54.3.12.2 The duration of the generated information is displayed to the controller.

- 54.4 Use case: Acknowledgement of the received broadcast information
- 54.4.1 Description
- 54.4.2 A user is able to acknowledge the received information.
- 54.4.3 Pre-conditions
- 54.4.3.1 The user is authorised to use Record and broadcast application by the application authorisation of application.
- 54.4.3.2 The user has received the broadcasted information.
- 54.4.4 Service flows
- 54.4.5 A user acknowledges the received information.
- 54.4.6 The acknowledgement is delivered to the initiator of the information. The QoS class of the communication is managed by the QoS class application. The Record and broadcast application requests the QoS class which matches the application category of NON-CRITICAL DATA (see [QoS]) within the FRMCS system.
- 54.4.6.1 The FRMCS system deliver the information to the recipients within a setup time specified as NORMAL (see [QoS]). The information from the role management and presence application is used to present the identity of the sender to the recipient(s).
- 54.4.6.2 The arbitration is managed by the arbitration application.
- 54.4.6.3 The data communication is recorded by the data recording and access application.
- 54.4.7 Post-conditions
- 54.4.7.1 The acknowledgement is delivered to the iniatiator of the information.
- 54.4.8 HMI related criteria
- 54.4.8.1 The user is clearly indicated about the requested acknowledgement of the received information.
- 54.4.8.2 The acknowledgement of the received information is achieved with the minimum of interaction (for example, a single button press).

- 54.5 Use case: Cancellation of the broadcast
- 54.5.1 Description
- 54.5.2 A user is able to manually stop the ongoing broadcast of the information.
- 54.5.3 Pre-conditions
- 54.5.3.1 The user is authorised to use Record and broadcast application by the application authorisation of application.
- 54.5.3.2 The broadcasting is ongoing.
- 54.5.4 Service flows
- 54.5.5 A user is able to select the information, whose broadcast is cancelled.
- 54.5.6 The broadcast of the information will be cancelled by the FRMCS system. The QoS class of the communication is managed by the QoS class application. The Record and broadcast application requests the QoS class which matches the application category of NON-CRITICAL DATA (see [QoS]) within the FRMCS system.
- 54.5.6.1 The arbitration is managed by the arbitration application.
- 54.5.6.2 The data communication is recorded by the data recording and access application.
- 54.5.7 Post-conditions
- 54.5.7.1 The broadcast of the information is stopped.
- 54.5.8 HMI related criteria
- 54.5.8.1 The seletion of the information to be cancelled is achieved with the minimum of interaction.

_	- 4	_																														- 1																					4.1				· B	А		
5	71	.6			C	Δ	- (	7	ם כ	26	٦.	 21	וב	r١	/1	$\sim$	_	-11	า1	_	r	۱۸.	ır	٦r	٦k	ш	n	$\sim$		וב	n	േ	- 0	21	וב	r١	71		Δ	•	7/	ור	വ	ш	n	П	Э.	11/	$\cap$	n	١٨	11	tr	<b>า</b>	G	~	: 1\	Λ.	_ 1-	~
U	т	٠. ر	,	U	O	ᆫ	٠,	JC	a.	סכ	J.	 20	51	١ ١	7 II	اب	_	ш	ш	.0		٧v	ľ	JΙ	-11	M	I I'	u	- 0	ж	н	u	- 1	יכ	_	ı١	/ I	U	,	٠,	ハ	JI	ш	ш	ш	ш	а	U١	U		V١	٧I	u		u	U	ווי	/ 1 -	- 1	ı

54.6.1.1 No service interworking and service continuation with GSM-R is required.

# 55 Transfer of CCTV archives related use cases

## 55.1 Introduction

In this chapter the use cases related to Transfer of CCTV archives are defined. The following use cases are defined:

- Initiation of CCTV archives transfer
- Termination of CCTV archives transfer
- Service interworking and service continuation with GSM-R

# 55.2 Use case: Initiation of CCTV archives transfer

# 55.2.1 Description

55.2.1.1 A user is able to bulk transfer CCTV archives between on-board systems or between on-board systems and a ground system. To support railway operations and in case there is no need for real time video, and in order to minimize the load on the radio network, CCTV archives may be stored locally and transferred to a central system based on configurable rules, like only when approaching a station or a depot.

## 55.2.2 Pre-conditions

- 55.2.2.1 The initiating user is authorised to initiate the transfer of CCTV archives.
- 55.2.2.2 The receiving application(s) is authorised to use the transfer of CCTV archives.

#### 55.2.3 Service flows

- 55.2.3.1 The initiating user requests a user-to-user data communication to the receiving side. The QoS class of the communication is managed by the QoS class application. The transfer of CCTV archives requests the QoS class which matches the application category of NON-CRITICAL DATA (see [QoS]) within the FRMCS system, depending on the application needs.
- 55.2.3.2 If the QoS can be reached, the FRMCS system establishes the data communication with a setup time specified as NORMAL (see [QoS]).
- 55.2.3.3 If authorized, the transfer of CCTV archives is recorded by the data recording and access to recorded data application.
- 55.2.3.4 The arbitration is managed by the arbitration application.

## 55.2.4 Post-conditions

55.2.4.1 The transfer of CCTV archives data communication is setup.

# 55.2.5 Communication attributes

URS Ref.	Туре	Symmetry Up/Down	Distribution	Latency	Bandwidth	Reliability	Setup	Speed
6.22	Uni- directional Data	100/0	User-to-User	Normal	High	Normal	Normal	Low

# 55.2.6 Related URS application interfaces

55.2.6.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application
8.3	Role management and presence
8.5	Authorisation of communication
8.7	Authorisation of application
8.8	QoS Class Negotiation
8.12	Arbitration
5.20	Data recording and access

- 55.2.7 HMI related criteria
- 55.2.7.1 The transfer of CCTV archives can be triggered by a train approaching a station or a depot.
- 55.3 Use case: Termination of CCTV archives transfer
- 55.3.1 Pre-conditions
- 55.3.1.1 There is an ongoing transfer of CCTV archives data communication.
- 55.3.2 Service flows
- 55.3.2.1 The initiating user terminates the transfer of CCTV archives.
- 55.3.3 Post-conditions
- 55.3.3.1 The transfer of CCTV archives is terminated. The application or the FRMCS user is informed about the termination.
- 55.3.4 HMI related criteria
- 55.3.4.1 None.

5	5	.4	1	l	lo	20		0	a	9	Δ,	. (	9	Δ	r۱	/i		Δ	'n	n	te	r	۱۸	ıc	٦r	·k	rii	n	a	-	<b>a</b> i	n	Ч	-	26	וב	٦.	/i	<u>_</u>	Δ	-	7	٦ı	h	ŀίι	ni	1	a	fi,	<b>1</b>	n	۱/	νi	tŀ	า	(-	3	1	<b>/</b> /	-1	P	į
J	U		T	_	ノこ	סכ	, ,	<b>_</b> (	a٠	יכ	$\Box$		$\mathbf{-}$	_	ı١	יו י	U	$\overline{}$	ш	ш	LΣ	71	V١	ľ	JΙ	-13	VΗ	ш	u	- 0	a.	ш	u	- 1	זכ	71	V	11	U	$\overline{}$	٠.	ハ	וע	ш	ш	ш	ш	а	Ш١	J		V.	٧ı	ш		L	4 🔍	21	٧I	-1		ŧ.

55.4.1.1 No service interworking and service continuation with GSM-R is required.

# 56 Real time video call related use cases

#### 56.1 Introduction

In this chapter the use cases related to Real time video call are defined. The following use cases are defined:

- A user initiates Real time video call communication.
- A user extends voice communication to a Real time video call communication
- A user changes Real time video call communication to a voice communication
- A user terminates Real time video call communication
- · A user joins an ongoing Real time video call communication
- Service interworking and service continuation with GSM-R

# 56.2 Use case: A user initiates Real time video call communication

# 56.2.1 Description

56.2.1.1 A user is able to setup a real time video call to other user(s). A real time video call can be used to support railway operations, like maintanence staff when investigating infrastructure or vehicles components where help is need from other staff or during testing of infrastructure or vehicles. The real time video call consist of both voice and video communication.

#### 56.2.2 Pre-conditions

- 56.2.2.1 The user(s) are authorised to initiate the Real time video call communication. This is managed by the authorisation of data communication and authorisation of voice communication applications.
- 56.2.2.2 The users are authorised to use the Real time video call application by the application authorisation of application.

#### 56.2.3 Service flows

- 56.2.3.1 The user initiates the Real time video call communication to other user(s). The priority of the communication is managed by the arbitration application. The QoS class of the communication is managed by the QoS class application. The data communication has the QoS class which matches the application category of NON-CRITICAL DATA (see [QoS]) within the FRMCS system.
- 56.2.3.2 The FRMCS system determines the user(s) to be included in the communication, based on:
  - selection by the initiating user
  - location information of all users provided by the locations services application, and/or
  - functional identity of all users provided by the role management and presence application and/or
  - system configuration.
- 56.2.3.3 The FRMCS system establishes the Real time video call voice communication and data communication within a setup time specified as NORMAL (see [QoS]). The

information from the role management and presence application is used to present the identities to the user(s). The initiating user is indicated to the other user(s). Also the location of the initiating user is presented to other user(s) which is retrived from the location services application.

- 56.2.3.4 The talker control is managed by the multi user talker control application.
- 56.2.3.5 The arbitration is managed by the arbitration application.
- 56.2.3.6 The communication is recorded by the Data recording and access to recorded data applications.

## 56.2.4 Post-conditions

- 56.2.4.1 The user(s) involved in the Real time video call can transmit and receive video image and voice during the ongoing communication.
- 56.2.4.2 The user(s) are able to select which video content is to be presented (at both sender and receiver side).

#### 56.2.5 Communication attributes

URS Ref.	Туре	Symmetry Up/Down	Distribution	Latency	Bandwidth	Reliability	Setup	Speed
6.23	Bi- directional Data	50/50	User-to- User/Multi- user	Low	Medium	Normal	Normal	High

# 56.2.6 Related URS application interfaces

56.2.6.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application
8.3	Role management and presence
8.4	Location services
8.5	Authorisation of communication
8.7	Authorisation of application
8.8	QoS Class Negotiation
8.12	Arbitration
5.20	Data recording and access

#### 56.2.7 HMI related criteria

- 56.2.7.1 The initiation of a Real time video call communication is achieved with the minimum of user interaction.
- 56.2.7.2 The quality of the video image's are based on a best effort principle.

# 56.3 Use case: A user extends voice communication to a Real time video call communication

# 56.3.1 Description

56.3.1.1 A user is able to extend an ongoing voice communication to a real time video call.

## 56.3.2 Pre-conditions

- 56.3.2.1 There is an ongoing voice communication between involved users.
- 56.3.2.2 The user(s) are authorised to initiate the Real time video call communication. This is managed by the authorisation of data communication and authorisation of voice communication applications.
- 56.3.2.3 The users are authorised to use the Real time video call application by the application authorisation of application.

## 56.3.3 Service flows

- 56.3.3.1 The user changes an ongoing voice communication to a Real time video call communication. The priority of the communication is managed by the arbitration application. The QoS class of the communication is managed by the QoS class application. The voice communication keeps the assigned QoS class (either CRITICAL VOICE or NON-CRITICAL VOICE; see [QoS]) within the FRMCS system. The data communication has the QoS class which matches the application category of NON-CRITICAL DATA (see [QoS]) within the FRMCS system.
- 56.3.3.2 The FRMCS system establishes the Real time video call data communication within a setup time specified as NORMAL (see [QoS]).
- 56.3.3.3 The talker control is managed by the multi user talker control application.
- 56.3.3.4 The arbitration is managed by the arbitration application.
- 56.3.3.5 The communication is recorded by the Data recording and access to recorded data applications.

## 56.3.4 Post-conditions

56.3.4.1 The user(s) involved in the Real time video call can transmit and receive video image and voice during the ongoing communication.

# 56.3.5 HMI related criteria

- 56.3.5.1 The initiation of a Real time video call communication is achieved with the minimum of user interaction.
- 56.3.5.2 The extension of ongoing voice communication to a Real time video call is clearly indicated to the involved user(s).
- 56.3.5.3 The quality of the video image's are based on a best effort principle.

- 56.4 Use case: A user changes Real time video call communication to a voice communication
- 56.4.1 Description
- 56.4.1.1 A user is able to change an ongoing Real time video call communication to a voice communication.
- 56.4.2 Pre-conditions
- 56.4.2.1 There is an ongoing Real time video call communication.
- 56.4.3 Service flows
- 56.4.3.1 The user changes an ongoing Real time video call communication to a voice communication by terminating the ongoing data communication (used for the real time video call communication).
- 56.4.4 Post-conditions
- 56.4.4.1 The user(s) involved in Voice communication cannot transmit video image anymore.
- 56.4.5 HMI related criteria
- 56.4.5.1 The change of a Real time video call communication to Voice communication is achieved with the minimum of user interaction.
- 56.4.5.2 The change of ongoing Real time video call communication to a voice communication to is clearly indicated to the involved user(s).

- 56.5 Use case: A user terminates Real time video call communication
- 56.5.1 Description
- 56.5.1.1 A user is able put on hold, leave or terminate Real time video call communication.
- 56.5.2 Pre-conditions
- 56.5.2.1 Real time video call communication is ongoing.
- 56.5.3 Service flows

User on hold

- 56.5.3.1 The user is able to put the Real time video call communication on hold.
- 56.5.3.2 After the user has put the Real time video call communication on hold, the communication remains in the FRMCS system, and the user is able to return to the communication again. When put on hold the other participants in the communication are informed and can continue the communication

User leaving

- 56.5.3.3 The user is able to leave the Real time video call communication. When a user has left the other participants in the communication are informed and can continue the communication if there are still user(s) involved in the communication.
- 56.5.3.4 The FRMCS system terminates the Real time video call communication if the last user has left.

User termination

- 56.5.3.5 Any user is able to terminate the Real time video call communication.
- 56.5.3.6 The FRMCS system terminates the Real time video call communication. All involved users are informed.
- 56.5.4 Post-conditions
- 56.5.5 A user has left the communication or the user or the system has terminated the communication.
- 56.5.6 HMI related criteria
- 56.5.6.1 Leaving, termination or hold of a Real time video call communication is achieved with the minimum of user interaction.

- 56.6 Use case: A user joins an ongoing Real time video call communication
- 56.6.1 Description
- 56.6.1.1 A user is able to connect to an ongoing Real time video call communication.
- 56.6.2 Pre-conditions
- 56.6.2.1 The user is authorised to connect to a Real time video call communication. This is managed by the authorisation of voice communication application and authorisation of data communication application.
- 56.6.2.2 The user is authorised to use the Real time video call communication application by the application authorisation of application.
- 56.6.2.3 There is an ongoing Real time video call communication.
- 56.6.2.4 The entitled user has the (operational) need to be added to an ongoing voice communication.

# 56.6.3 Service flows

- 56.6.3.1 The entitled user requests toconnect to the ongoing Real time video call communication. The information from the role management and presence application is used to present the identities to the user(s). The joining user is indicated to the other user(s). Also the location of the joining user is presented to other user(s) which is retrieved from the location services application.
- 56.6.3.2 The FRMCS system connects to the user requesting to join to the ongoing Real time video call communication based on:
  - selection by the initiating user
  - location information of all users provided by the locations services application, and/or
  - functional identity of all users provided by the role management and presence application and/or
  - system configuration.
- 56.6.3.3 The talker control is managed by the multi user talker control application.
- 56.6.3.4 The arbitration is managed by the arbitration application.
- 56.6.3.5 The communication is recorded by the Data recording and access to recorded data applications.

## 56.6.4 Post-conditions

- 56.6.4.1 The user has been connected to the ongoing Real time video call communication.
- 56.6.4.2 The user(s) involved in the Real time video call can transmit and receive video image and voice during the ongoing communication.

# 56.6.5 HMI related criteria

- 56.6.5.1 Joining a Real time video call communication is achieved with the minimum of user interaction.
- 56.6.5.2 Joining the ongoing voice communication to a Real time video call is clearly indicated to the involved user(s).
- 56.6.5.3 The quality of the video image's are based on a best effort principle.

_	$\sim$	<b>-</b>																																																		4.1				N R	А		
h	h	/ 1		C	Δ	- 1	7	٦.	~ (	Э.	~	וב	^\	/ 1	$\sim$	<b>⊃</b>	-11	n:	10	אכ	"\ <i>I</i>	۱I	$\frown$	r	v	Ιľ	٦/	Α.		١r	٦/	٦.	c	 ٦r	'n,	717	$\sim$	$\sim$		~	۱r	۱t	ır	١ı	10	T C	10	٦r	<u>ገ</u>	۱Λ	71	t r	<b>า</b>	ι.		. II	\ /I	_	ᆮ
J	6.	/	U	O	ᆫ	٠,	) ر	a	zς	J.	Эτ	71	١.	ш	U	_	ш	ш	ĽC	71	V	V١	U		n	ш	ж	л.	c	ш	ж	л.	-	71	v	ш	<b>ا</b> ت	$\overline{}$	u	·L	"	Iι	ш	ΙL	иc	aι	ıv	וע		V١	71	u	1	L	4 🔍	וכ	٧I	. – 1	1 1

56.7.1.1 No service interworking and service continuation with GSM-R is required.

# 57 Augmented reality data communication related use cases

# 57.1 Introduction

In this chapter the use cases related to Augmented reality data communication are defined. The following use cases are defined:

- Initiation of an Augmented reality data communication
- Extension of a voice communication with an Augmented reality data communication
- Termination of an Augmented reality data communication
- Service interworking and service continuation with GSM-R

# 57.2 Use case: initiation of an Augmented reality data communication

# 57.2.1 Description

- 57.2.1.1 A user is able to setup an augmented reality data communication to the ground system. The ground system overlays information to the video stream presented to the user.
- 57.2.1.2 Once a user is connected to the ground system, the controller is able to view the augmented reality images visiable for the user.
- 57.2.1.3 The controller is able to add information (or guidance) via the ground system in the augmented reality view which is visable to the user.

#### 57.2.2 Pre-conditions

- 57.2.2.1 The user is authorised to initiate the Augmented reality data communication. This is managed by the authorisation of data communication.
- 57.2.2.2 The user and the ground system are authorised to use the Augmented reality application by the application authorisation of application.

## 57.2.3 Service flows

- 57.2.3.1 The user initiates the Augmented reality data communication to the ground system. The priority of the communication is managed by the arbitration application. The QoS class of the communication is managed by the QoS class application. The data communication has the QoS class which matches the application category of NON-CRITICAL DATA (see [QoS]) within the FRMCS system.
- 57.2.3.2 The FRMCS system establishes the Augmented reality data communication within a setup time specified as NORMAL (see [QoS]). The information from the role management and presence application is used to present the identities to the user and the ground system. The initiating user is indicated to the ground system. Also the location of the initiating user is presented to the ground system which is retrieved from the location services application.
- 57.2.3.3 The arbitration is managed by the arbitration application.
- 57.2.3.4 The communication is recorded by the Data recording and access to recorded data applications.

## 57.2.4 Post-conditions

57.2.4.1 The user and the ground system involved in the Augmented reality data communication can transmit and receive augmented reality video image.

57.2.4.2 The user and the ground system are able to select which augmented reality video content is to be presented (at both sender and receiver side).

# 57.2.5 Communication attributes

URS Ref.	Туре	Symmetry Up/Down	Distribution	Latency	Bandwidth	Reliability	Setup	Speed
6.24	Bi- directional Data	20/80	User-to-User	Low	Medium	Normal	Normal	High

# 57.2.6 Related URS application interfaces

57.2.6.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application			
8.3	Role management and presence			
8.4	Location services			
8.5	Authorisation of communication			
8.7	Authorisation of application			
8.8	QoS Class Negotiation			
8.12	Arbitration			
5.20	Data recording and access			

# 57.2.7 HMI related criteria

- 57.2.7.1 The initiation of a Augmented reality data communication is achieved with the minimum of user interaction.
- 57.2.7.2 The quality of the video image's are based on a best effort principle, but has quality (video quality and latency) which is accepted in public mobile networks and prevents the user to experience 'virtual reality sickness'.

# 57.3 Use case: Extension of a voice communication with an Augmented reality data communication

# 57.3.1 Description

57.3.1.1 A user is able to extend an ongoing voice communication with an Augmented reality data communication.

#### 57.3.2 Pre-conditions

- 57.3.2.1 There is an ongoing voice communication between involved users. The voice communication can be user-to-user or multi-user.
- 57.3.2.2 The user is authorised to extend the voice communication with an Augmented reality data communication.
- 57.3.2.3 The user is authorised to initiate the Augmented reality data communication. This is managed by the authorisation of data communication.
- 57.3.2.4 The user is authorised to use the Augmented reality application by the application authorisation of application.

# 57.3.3 Service flows

57.3.4 The user extends an ongoing voice communication with an Augmented reality data communication. From this point onwards the use cases of the voice communications and the Augmented reality data communication apply.

#### 57.3.5 Post-conditions

57.3.5.1 The user and the ground system involved in the Augmented reality data communication can transmit and receive video image and voice during the ongoing communication.

#### 57.3.6 HMI related criteria

- 57.3.6.1 The initiation of a Augmented reality data communication is achieved with the minimum of user interaction.
- 57.3.6.2 The extension of ongoing voice communication to a Augmented reality data communication is clearly indicated to the involved user(s).
- 57.3.6.3 The quality of the video image's are based on a best effort principle, but has quality (video quality and latency) which is accepted in public mobile networks and prevents the user to experience 'virtual reality sickness'.

- 57.4 Use case: Termination of an Augmented reality data communication
- 57.4.1 Description
- 57.4.1.1 A user is able to terminate the Augmented reality data communication.
- 57.4.2 Pre-conditions
- 57.4.2.1 Augmented reality data communication is ongoing.
- 57.4.3 Service flows
- 57.4.3.1 The user and/or the ground system is able to terminate the Augmented reality data communication.
- 57.4.3.2 The FRMCS system terminates the Augmented reality data communication. All involved users are informed.
- 57.4.4 Post-conditions
- 57.4.5 The user or the ground system has terminated the Augmented reality data communication. Ongoing voice communication will remain.
- 57.4.6 HMI related criteria
- 57.4.6.1 Termination of an Augmented reality data communication is achieved with the minimum of user interaction.

					and the second second	A Company of the Comp			and the second second second	2.4	COLLD
r	<b>、</b> /	'.E	、 I	Hed caed:	CARVICA	Intorwor	kina and	CARVICA	continuation	with	
×	ו כ		, (	USE Case.	301 VIUC		niilu ailu	SCIVICE	Continuation	VVILII	GOIVITI 1

57.5.1.1 No service interworking and service continuation with GSM-R is required.

# 58 Information Help Point for public related use cases

## 58.1 Introduction

In this chapter the use cases related to Information Help Point communication are defined. The following use cases are defined:

- Initiation of an Information Help Point communication
- Termination of an Information Help Point communication
- Service interworking and service continuation with GSM-R

# 58.2 Use case: Initiation of an Information Help Point communication

# 58.2.1 Description

58.2.1.1 A member of the public, either on a train or e.g. in a station, is able to set up a voice communication in order to obtain railway-relevant information to assist his or her their interaction with the railway. This information could for example be train movement or ticketing related.

#### 58.2.2 Pre-conditions

- 58.2.2.1 The Information Help Point equipment is logged in the FRMCS system. There is no need for the user to log in manually.
- 58.2.2.2 The Information Help Point equipment is identified by a functional identity assigned to the Information Help Point equipment.
- 58.2.2.3 The Information Help Point equipment is authorised to initiate the voice communication. This is managed by the authorisation of voice communication application.
- 58.2.2.4 The Information Help Point equipment is authorised to use the Information Help Point application. This is managed by the application authorisation of application.

# 58.2.3 Service flows

- 58.2.3.1 The user initiates a Information Help Point communication e.g. by pressing a single key. The QoS class of the communication is managed by the QoS class application. The voice communication requests the QoS class which matches the application category of VOICE (see [QoS]) within the FRMCS system.
- 58.2.3.2 The FRMCS system determines the user(s) to be included in the communication, based on:
  - · selection by the initiating user
  - location information of all users provided by the locations services application, and/or
  - functional identity of all users provided by the role management and presence application and/or
  - system configuration.
- 58.2.3.3 The FRMCS system determines the responsible ground user or train staff based on the functional identity assigned to the Information Help Point equipment.
- 58.2.3.4 The FRMCS system establishes the voice communication to the ground user or train staff within a setup time specified as NORMAL (see [QoS]).

- 58.2.3.5 The voice communication is recorded by the voice recording and access application.
- 58.2.3.6 The arbitration is managed by the arbitration application.
- 58.2.3.7 The talker control is managed by the multi user talker control application.

# 58.2.4 Post-conditions

58.2.4.1 The initiator is connected to the ground user or train staff.

## 58.2.5 Communication attributes

URS Ref.	Туре	Symmetry Up/Down	Distribution	Latency	Bandwidth	Reliability	Setup	Speed
7.1	Bi- directional Voice	50/50	User-to-User	Low	Low	Normal	Normal	Low

# 58.2.6 Related URS application interfaces

58.2.6.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application			
8.3	Role management and presence			
8.4	Location services			
8.5	Authorisation of communication			
8.7	Authorisation of application			
8.8	QoS Class Negotiation			
8.12	Arbitration			
5.19	Voice Recording and access to the recorded data			

## 58.2.7 HMI related criteria

- 58.2.7.1 The initiation of a Information Help Point voice communication is based on a simple action.
- 58.2.7.2 The HMI of the responsible ground user or train staff allows the quick and easy identification of the concerned location of the initiator.

- 58.3 Use case: Termination of an Information Help Point communication
- 58.3.1 Description
- 58.3.1.1 The responsible ground user or train staff is able to terminate the Information Help Point communication.
- 58.3.1.2 The responsible ground user or train staff is able to put on hold the Information Help Point communication.
- 58.3.2 Pre-conditions
- 58.3.2.1 The Information Help Point communication is ongoing.
- 58.3.3 Service flows

On hold

- 58.3.3.1 The responsible ground user or train staff is able to put the Information Help Point communication on hold.
- 58.3.3.2 After the responsible ground user or train staff has put the communication on hold, the communication remains in the FRMCS system, and the responsible ground user or train staff is able to be part of the communication again.

**Termination** 

- 58.3.3.3 The responsible ground user or train staff is able to terminate the Information Help Point communication.
- 58.3.3.4 The FRMCS system terminates the Information Help Point communication. All involved users are informed.
- 58.3.4 Post-conditions
- 58.3.4.1 The Information Help Point communication is put on hold or terminated.
- 58.3.5 HMI related criteria
- 58.3.5.1 The termination of a Information Help Point communication is based on a simple action.

- 58.4 Use case: Service interworking and service continuation with GSM-R
- 58.4.1 Description
- 58.4.1.1 For migration purposes the service interworking between the GSM-R system and FRMCS system for Information Help Point voice communication needs to be clear.
- 58.4.1.2 Depending on the migration scenario a responsible ground user or train staff can be attached to the FRMCS system, to the GSM-R system or both. The Information Help Point equipment can be attached either in the GSM-R system or in the FRMCS system. Functional identities are applicable in one system only.
- 58.4.1.3 This use case only applies to end user devices supporting both FRMCS and GSM-R systems.
- 58.4.2 Pre-conditions
- 58.4.2.1 None.
- 58.4.3 Service flows

Information Help Point equipment attached to GSM-R

- 58.4.3.1 When the Information Help Point equipment is attached to the GSM-R system and is initiating a Information Help Point voice communication to a responsible ground user or train staff, the GSM-R system will route the voice communication to the responsible ground user or train staff accordingly.
- 58.4.3.2 If the responsible ground user or train staff is located in the FRMCS system, the GSM-R system can only route the call to the responsible ground user or train staff if the responsible ground user or train staff can be reached by an address or identity understood by the GSM-R system. The role management in FRMCS provides the appropriate address or identity e.g. through a mapping of GSM-R identities and FRMCS identities.
- 58.4.3.3 The information from the role management and presence application is used to route the communication and to present the identity(ies) of the intiating party.

  \*Information Help Point equipment attached to FRMCS\*
- 58.4.3.4 When the Information Help Point equipment is active in the FRMCS system and is initiating a voice communication to a responsible ground user or train staff, the FRMCS system will route the communication to the responsible ground user or train staff accordingly.
- 58.4.3.5 The role management in FRMCS provides the appropriate address or identity e.g. through a mapping of GSM-R identities and FRMCS identities.
- 58.4.3.6 The information from the role management and presence application is used to route the communication and to present the identity(ies) of the initiating party.

  \*Train staff moving from GSM-R to FRMCS\*
- 58.4.3.7 When the GSM-R user equipment of the train staff is detached from the GSM-R system, the FRMCS end user device provides service continuation by setting up the communication via the FRMCS system. An interruption of voice communication is acceptable.
  - Train staff moving from FRMCS to GSM-R
- 58.4.3.8 When the FRMCS user equipment of the train staff is detached from the FRMCS system the FRMCS end user device provides service continuation by setting up the communication via the GSM-R system. An interruption of voice communication is acceptable.

58.4.4 Post-conditions

58.4.4.1 None.

58.4.5 Related URS application interfaces

58.4.5.1 None.

58.4.6 HMI related criteria

58.4.6.1 None.

# 59 Emergency Help Point for public related use cases

## 59.1 Introduction

In this chapter the use cases related to Emergency Help Point communication are defined. The following use cases are defined:

- Initiation of an Emergency Help Point communication
- Termination of an Emergency Help Point communication
- Service interworking and service continuation with GSM-R

# 59.2 Use case: Initiation of an Emergency Help Point communication

# 59.2.1 Description

59.2.1.1 A member of the public, either on a train or e.g. in a station, is able to set up a voice communication in order to report emergency situations.

#### 59.2.2 Pre-conditions

- 59.2.2.1 The Emergency Help Point equipment is logged in the FRMCS system. There is no need for the user to log in manually.
- 59.2.2.2 The Emergency Help Point equipment is identified by a functional identity assigned to the Emergency Help Point equipment.
- 59.2.2.3 The Emergency Help Point equipment is authorised to initiate the voice communication. This is managed by the authorisation of voice communication application.
- 59.2.2.4 The Emergency Help Point equipment is authorised to use the Emergency Help Point application. This is managed by the application authorisation of application.

## 59.2.3 Service flows

- 59.2.3.1 The user initiates a Emergency Help Point communication e.g. by pressing a single key. The QoS class of the communication is managed by the QoS class application. The voice communication requests the QoS class which matches the application category of VOICE (see [QoS]) within the FRMCS system.
- 59.2.3.2 The FRMCS system determines the user(s) to be included in the communication, based on:
  - selection by the initiating user
  - location information of all users provided by the locations services application, and/or
  - functional identity of all users provided by the role management and presence application and/or
  - system configuration.
- 59.2.3.3 The FRMCS system determines the responsible ground user, train staff of driver based on the functional identity assigned to the Emergency Help Point equipment.
- 59.2.3.4 The FRMCS system establishes the voice communication to the ground user, train staff or driver within a setup time specified as NORMAL (see [QoS]).
- 59.2.3.5 The voice communication is recorded by the voice recording and access application.

- 59.2.3.6 The arbitration is managed by the arbitration application.
- 59.2.3.7 The talker control is managed by the multi user talker control application.

#### 59.2.4 Post-conditions

59.2.4.1 The initiator is connected to the ground user, train staff or driver.

#### 59.2.5 Communication attributes

URS Ref.	Туре	Symmetry Up/Down	Distribution	Latency	Bandwidth	Reliability	Setup	Speed
7.2	Bi- directional Voice	50/50	User-to-User	Low	Low	Normal	Normal	Low

## 59.2.6 Related URS application interfaces

59.2.6.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application
8.3	Role management and presence
8.4	Location services
8.5	Authorisation of communication
8.7	Authorisation of application
8.8	QoS Class Negotiation
8.12	Arbitration
5.19	Voice Recording and access to the recorded data

## 59.2.7 HMI related criteria

- 59.2.7.1 The initiation of a Emergency Help Point voice communication is based on a simple action.
- 59.2.7.2 The HMI of the initiator compensates for system disfunction or misuse (such as communication retries or deactivation of the equipment of the initiator).
- 59.2.7.3 The HMI of the responsible ground user, train staff or driver allows the quick and easy identification of the concerned location of the initiator.

- 59.3 Use case: Termination of an Emergency Help Point communication
- 59.3.1 Description
- 59.3.1.1 The responsible ground user, train staff or driver is able to terminate the Emergency Help Point communication.
- 59.3.1.2 The responsible ground user, train staff or driver is able to put on hold the Emergency Help Point communication.
- 59.3.2 Pre-conditions
- 59.3.2.1 The Emergency Help Point communication is ongoing.
- 59.3.3 Service flows

On hold

- 59.3.3.1 The responsible ground user, train staff or driver is able to put the Emergency Help Point communication on hold.
- 59.3.3.2 After the responsible ground user, train staff or driver has put the communication on hold, the communication remains in the FRMCS system, and the responsible ground user, train staff or driver is able to be part of the communication again.

  Termination
- 59.3.3.3 The responsible ground user, train staff or driver is able to terminate the Emergency Help Point communication.
- 59.3.3.4 The FRMCS system terminates the Emergency Help Point communication. All involved users are informed.
- 59.3.4 Post-conditions
- 59.3.4.1 The Emergency Help Point communication is put on hold or terminated.
- 59.3.5 HMI related criteria
- 59.3.5.1 The termination of a Emergency Help Point communication is based on a simple action.

- 59.4 Use case: Service interworking and service continuation with GSM-R
- 59.4.1 Description
- 59.4.1.1 For migration purposes the service interworking between the GSM-R system and FRMCS system for Emergency Help Point voice communication needs to be clear.
- 59.4.1.2 Depending on the migration scenario, a responsible ground user, train staff or driver can be attached to the FRMCS system, to the GSM-R system or both. The Emergency Help Point equipment can be attached either in the GSM-R system or in the FRMCS system. Functional identities are applicable in one system only.
- 59.4.1.3 This use case only applies to end user devices supporting both FRMCS and GSM-R systems.
- 59.4.2 Pre-conditions
- 59.4.2.1 None.
- 59.4.3 Service flows

Emergency Help Point equipment attached to GSM-R

- 59.4.3.1 When the Emergency Help Point equipment is attached to the GSM-R system and is initiating a Emergency Help Point voice communication to a responsible ground user, train staff or driver, the GSM-R system will route the voice communication to the responsible ground user, train staff or driver accordingly.
- 59.4.3.2 If the responsible ground user, train staff or driver is located in the FRMCS system, the GSM-R system can only route the call to the responsible ground user, train staff or driver if the responsible ground user, train staff or driver can be reached by an address or identity understood by the GSM-R system. The role management in FRMCS provides the appropriate address or identity e.g. through a mapping of GSM-R identities and FRMCS identities.
- 59.4.3.3 The information from the role management and presence application is used to route the communication and to present the identity(ies) of the intiating party.

  Emergency Help Point equipment attached to FRMCS
- 59.4.3.4 When the Emergency Help Point equipment is active in the FRMCS system and is initiating a voice communication to a responsible ground user, train staff or driver, the FRMCS system will route the communication to the responsible ground user, train staff or driver accordingly.
- 59.4.3.5 The role management in FRMCS provides the appropriate address or identity e.g. through a mapping of GSM-R identities and FRMCS identities.
- 59.4.3.6 The information from the role management and presence application is used to route the communication and to present the identity(ies) of the initiating party.

  Train staff or driver moving from GSM-R to FRMCS
- 59.4.3.7 When the GSM-R user equipment of the train staff or driver is detached from the GSM-R system, the FRMCS end user device provides service continuation by setting up the communication via the FRMCS system. An interruption of voice communication is acceptable.
  - Train staff or driver moving from FRMCS to GSM-R
- 59.4.3.8 When the FRMCS user equipment of the train staff or driver is detached from the FRMCS system, the FRMCS end user device provides service continuation by setting up the communication via the GSM-R system. An interruption of voice communication is acceptable.

59.4.4 Post-conditions

59.4.4.1 None.

59.4.5 Related URS application interfaces

59.4.5.1 None.

59.4.6 HMI related criteria

59.4.6.1 None.

# 60 Wireless internet on-train for passengers related use cases

# 60.1 Introduction

In this chapter the use cases related to Wireless internet on-train for passengers are described, the following use cases are identified

- Initiation of data communication for Wireless internet on-train for passengers
- Termination of data communication for Wireless internet on-train for passengers
- Service interworking and service continuation with GSM-R

# 60.2 Use case: Initiation of data communication for Wireless internet ontrain for passengers

## 60.2.1 Description

60.2.1.1 It is possible for passengers to use internet services via a wireless access point in a train. The FRMCS provides the data communication between internet and the wireless acces point. This use case describes this data communication.

#### 60.2.2 Pre-conditions

60.2.2.1 The initiating application in the wireless access point is authorised to use the data communication for Wireless internet on-train for passengers. This is managed by the authorisation of data communication application.

#### 60.2.3 Service flows

- 60.2.3.1 The initiating application in the wireless access point initiates the data communication for Wireless internet on-train for passengers. The communication requests the QoS class which matches the application category of NON-CRITICAL DATA (see [QoS]) within the FRMCS system.
- 60.2.3.2 The FRMCS system establishes the bearer service required for the data communication within a setup time specified as NORMAL (see [QoS]).
- 60.2.3.3 The arbitration is managed by the arbitration application.

#### 60.2.4 Post-conditions

- 60.2.4.1 The wireless access point is connected to the requested service.
- 60.2.4.2 Passengers can now set up a communication to the wireless access point.

#### 60.2.5 Communication attributes

UF Re		Туре	Symmetry Up/Down	Distribution	Latency	Bandwidth	Reliability	Setup	Speed
7.	3	Bi- directional Data	20/80	User-to-User	Normal	High	Normal	Normal	High

# 60.2.6 Related URS application interfaces

60.2.6.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application
8.3	Role management and presence
8.4	Location services
8.6	Authorisation of data communication
8.7	Authorisation of application
8.8	QoS Class negotiation
5.20	Recording and access of data

# 60.2.7 HMI related criteria

60.2.7.1 No criteria related to this use case: no human interaction is expected to manage the data communication.

- 60.3 Use case: Termination of data communication for Wireless internet ontrain for passengers
- 60.3.1 Description
- 60.3.1.1 It is possible to terminate the data communication for Wireless internet on-train for passengers.
- 60.3.2 Pre-conditions
- 60.3.2.1 The data communication for Wireless internet on-train for passengers application have a data communication initiated.
- 60.3.3 Service flows
- 60.3.3.1 The terminating application terminates the data communication for Wireless internet on-train for passengers communication
- 60.3.4 Post-conditions
- 60.3.4.1 The data communication for Wireless internet on-train for passengers communication is terminated.
- 60.3.4.2 Passengers can no longer set up a communication to the wireless access point.
- 60.3.5 HMI related criteria
- 60.3.5.1 No criteria related to this use case: no human interaction is expected to manage the data communication.

- 60.4 Use case: service interworking and service continuation with GSM-R
- 60.4.1 Description
- 60.4.1.1 Not applicable, the data capabilities of GSM-R is not sufficient for this type of application.

# Wireless internet for passengers on platforms related use cases

## 61.1 Introduction

In this chapter the use cases related to Wireless internet for passengers on platforms are described, the following use cases are identified

- Initiation of data communication for Wireless internet for passengers on platforms
- Termination of data communication for Wireless internet for passengers on platforms
- Service interworking and service continuation with GSM-R

# 61.2 Use case: Initiation of data communication for Wireless internet for passengers on platforms

## 61.2.1 Description

61.2.1.1 It is possible for passengers to use internet services via a wireless acess point in railway area(s) (for example platforms, station area(s) etc.). The FRMCS provides the data communication between internet and the wireless acces point. This use case describes this data communication.

#### 61.2.2 Pre-conditions

61.2.2.1 The initiating application in the wireless access point is authorised to use the Wireless internet for passengers on platforms application. This is managed by the authorisation of data communication application.

#### 61.2.3 Service flows

- 61.2.3.1 The initiating application in the wireless access point initiates the data communication for Wireless internet for passengers on platforms. The communication requests the QoS class which matches the application category of NON-CRITICAL DATA (see [QoS]) within the FRMCS system.
- 61.2.3.2 The FRMCS system establishes the bearer service required for the data communication within a setup time specified as NORMAL (see [QoS]).
- 61.2.3.3 The arbitration is managed by the arbitration application.

## 61.2.4 Post-conditions

- 61.2.4.1 The wireless access point is connected to the requested service.
- 61.2.4.2 Passengers can now set up a communication to the wireless access point.

#### 61.2.5 Communication attributes

URS Ref.	Туре	Symmetry Up/Down	Distribution	Latency	Bandwidth	Reliability	Setup	Speed
7.4	Bi- directional Data	20/80	User-to-User	Normal	High	Normal	Normal	High

# 61.2.6 Related URS application interfaces

61.2.6.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application
8.3	Role management and presence
8.4	Location services
8.6	Authorisation of data communication
8.7	Authorisation of application
8.8	QoS Class negotiation
5.20	Recording and access of data

## 61.2.7 HMI related criteria

61.2.7.1 No criteria related to this use case: no human interaction is expected to manage the data communication.

- 61.3 Use case: Termination of data communication for Wireless internet for passengers on platforms
- 61.3.1 Description
- 61.3.1.1 It is possible to terminate the data communication for Wireless internet for passengers on platforms communication.
- 61.3.2 Pre-conditions
- 61.3.2.1 The data communication for Wireless internet for passengers on platforms application have a data communication initiated.
- 61.3.3 Service flows
- 61.3.3.1 The terminating application terminates the data communication for Wireless internet for passengers on platforms communication
- 61.3.4 Post-conditions
- 61.3.4.1 The data communication for Wireless internet for passengers on platforms application is terminated.
- 61.3.4.2 Passengers can no longer set up a communication to the wireless access point.
- 61.3.5 HMI related criteria
- 61.3.5.1 No criteria related to this use case: no human interaction is expected to manage the data communication.

- 61.4 Use case: service interworking and service continuation with GSM-R
- 61.4.1 Description
- 61.4.1.1 Not applicable, the data capabilities of GSM-R is not sufficient for this type of application.

# 62 Assured voice communication related use cases

#### 62.1 Introduction

In this chapter the use cases related to the function of assured voice communication (AVC) are defined. The following use cases are defined:

- Invocation of AVC
- Stopping AVC
- Degradation of a communication link
- Joining an AVC
- Service interworking and service continuation with GSM-R

## 62.2 Use case: Invocation of Assured Voice Communication

# 62.2.1 Description

- 62.2.1.1 The assured voice communication application provides a clear indication to the users as soon as an end-to-end voice communication link is degraded. This use case describes the activation of the communication link supervision.
- 62.2.1.2 This use case is available in both on-network and off-network conditions.

#### 62.2.2 Pre-conditions

- 62.2.2.1 The end user device is part of an ongoing user-to-user or multi-user voice communication.
- 62.2.2.2 The use of Assured Voice Communication is enabled for the ongoing voice communication.

## 62.2.3 Service flows

Automatic Activation

- 62.2.3.1 Upon establishment of a voice communication, for which automatic activation of Assured Voice Communication is configured in the FRMCS system, the end-to-end supervision of the communication links of all end user devices involved in the communication is activated by the FRMCS system.
- 62.2.3.2 The involved users are informed about the successful activation of the supervision.

  Manual Activation
- 62.2.3.3 The user activates Assured Voice Communication through a simple MMI interaction on the end user devices
- 62.2.3.4 The end-to-end supervision of the communication links of all end user devices involved in the communication is then activated by the FRMCS system.
- 62.2.3.5 The involved users are informed about the successful activation of the supervision.

## 62.2.4 Post-conditions

- 62.2.4.1 The end user device is still part of an ongoing user-to-user or multi-user voice communication.
- 62.2.4.2 The communication links of all end user devices involved in the communication are supervised end-to-end.

#### 62.2.5 Communication attributes

URS Ref.	Туре	Symmetry Up/Down	Distribution	Latency	Bandwidth	Reliability	Setup	Speed
	Bi- directional Voice	50/50	User-to- User/Multi- user	Low	Low	High	Normal	Normal
8.1	Bi- directional Data	50/50	User-to- User/Multi- user	Normal	Low	High	Normal	Normal

# 62.2.6 Related URS application interfaces

62.2.6.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

None.

## 62.2.7 HMI related criteria

- 62.2.7.1 The manual activation of Assured Voice Communication is a simple action.
- 62.2.7.2 The status of Assured Voice Communication (active / inactive) is clearly indicated.

# 62.3 Use case: Stopping Assured Voice Communication

## 62.3.1 Description

- 62.3.1.1 The assured voice communication application provides a clear indication to the users as soon as an end-to-end voice communication link is degraded. This use case describes the deactivation of the communication link supervision.
- 62.3.1.2 This use case is available in both on-network and off-network conditions.
- 62.3.2 Pre-conditions
- 62.3.2.1 The end user device is part of an ongoing user-to-user or multi-user voice communication.
- 62.3.2.2 Assured Voice Communication is activated, therefore the communication links of all end user devices involved in the communication are supervised end-to-end.
- 62.3.3 Service flows

Automatic deactivation

- 62.3.3.1 If the ongoing voice communication is terminated by one of the involved users, the Assured Voice Communication is deactivated.
- 62.3.3.2 The involved users are informed about the successful deactivation of the supervision.

Manual deactivation

- 62.3.3.3 The user deactivates Assured Voice Communication through a simple MMI interaction on the end user devices. Only the user who has previously activated the Assured Voice Communication is allowed to deactivate the Assured voice communication.
- 62.3.3.4 The end-to-end supervision of the communication links of all end user devices involved in the communication is then deactivated by the FRMCS system.
- 62.3.3.5 The involved users are informed about the successful deactivation of the supervision.
- 62.3.4 Post-conditions

Automatic deactivation

62.3.4.1 The end user device is no longer part of an ongoing user-to-user or multi-user voice communication.

Manual deactivation

- 62.3.4.2 The end user device is still part of an ongoing user-to-user or multi-user voice communication.
- 62.3.5 Related URS application interfaces
- 62.3.5.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

None.

- 62.3.6 HMI related criteria
- 62.3.6.1 The manual deactivation of Assured Voice Communication is a simple action.
- 62.3.6.2 The status of Assured Voice Communication (active / inactive) is clearly indicated.

# 62.4 Use case: Degradation of a communication link

# 62.4.1 Description

- 62.4.1.1 The assured voice communication application provides a clear indication to the users as soon as an end-to-end voice communication link is degraded (negative notification) or as long as the end-to-end communication link is unaffected (positive notification). This use case describes the procedure when the system detects a communication links degradation.
- 62.4.1.2 This use case is available in both on-network and off-network conditions.

#### 62.4.2 Pre-conditions

- 62.4.2.1 The end user device is part of an ongoing user-to-user or multi-user voice communication.
- 62.4.2.2 The communication links of all end user devices involved in the communication are supervised end-to-end.

#### 62.4.3 Service flows

Positive Notification

- 62.4.3.1 The system continuously checks if the communication links are unaffected.
- 62.4.3.2 The system indicates to the end user devices that the communication service is working properly. In this case the end user devices generate a periodic tone.
- 62.4.3.3 If a degradation of at least one of the communication link is detected, the positive notification is immediately stopped on all end user devices, including the device(s) with the degraded communication link.
- 62.4.3.4 If the supervision functionality itself fails, the positive notification is stopped immediately.
- 62.4.3.5 If a user with supervised communication link decides to leave the ongoing voice communication, the positive notification immediately stops for all user involved in the voice communication.
- 62.4.3.6 Talker activity suppresses the positive notification on all the involved end user devices as long as the user is talking.
- 62.4.3.7 Optionally the user having activated the Assured Voice Communication may need to confirm his availability periodically (e.g. by pressing a button or by talking). If this confirmation is not received, the positive notification is immediately stopped on all end user devices.
- 62.4.3.8 When the assured voice communication is stopped, the ongoing voice communication is continued. It is possible to reactivate the Assured Voice Communication for the remaining users in the ongoing voice communication.

Negative Notification

- 62.4.3.9 The system continuously checks if the communication service (connectivity and quality) is available to all users at their end user devices.
- 62.4.3.10 The system warns all involved users of an ongoing voice communication if a degradation of a communication link is detected, by generating a warning tone on each of the end user devices, including the device with the degraded communication link.
- 62.4.3.11 If the supervision functionality itself fails, the warning tone is generated immediately.

- 62.4.3.12 If a user with supervised communication link decides to leave the ongoing voice communication the negative notification stops immediately and therefore generate a warning tone.
- 62.4.3.13 Optionally the user having activated the Assured Voice Communication may need to confirm his availability periodically (e.g. by pressing a button or by talking). If this confirmation is not received, a warning tone is generated on all end user devices involved in the communication.
- 62.4.3.14 When the assured voice communication is stopped, the ongoing voice communication is continued. It is possible to reactivate the Assured Voice Communication for the remaining users in the ongoing voice communication.

#### 62.4.4 Post-conditions

62.4.4.1 The end user device is still part of an ongoing user-to-user or multi-user voice communication.

## 62.4.5 Related URS application interfaces

62.4.5.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application
8.7	Authorisation of application

#### 62.4.6 HMI related criteria

62.4.6.1 Tone duration and silence duration of the positive notification is configurable within the system.

- 62.5 Use case: Joining an Assured Voice Communication
- 62.5.1 Description
- 62.5.1.1 A user is able to connect to an ongoing assured voice communication.
- 62.5.1.2 This use case is available in both on-network and off-network conditions.
- 62.5.2 Pre-conditions
- 62.5.2.1 The use of Assured Voice Communication is activated for the ongoing voice communication.
- 62.5.3 Service flows
- 62.5.3.1 A user connecting to an ongoing assured voice communication is informed that assured voice communication is active.
- 62.5.3.2 The joining user is not supervised but is part of the communication.
- 62.5.4 Post-conditions
- 62.5.4.1 The new user is not supervised by the assured voice communication, but is part of the existing ongoing communication.
- 62.5.5 Related URS application interfaces
- 62.5.5.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.
- 62.5.6 HMI related criteria
- 62.5.6.1 The manual activation of Assured Voice Communication is a simple action.
- 62.5.6.2 The status of Assured Voice Communication (active / inactive) is clearly indicated.

- 62.6 Use case: service interworking and service continuation with GSM-R
- 62.6.1.1 For migration purposes the service interworking and service continuation between the GSM-R system and FRMCS system for assured voice communication needs to be defined.
- 62.6.1.2 Depending on the migration scenario a user being part of a assured voice communication, could be part of the GSM-R system.
- 62.6.1.3 In the GSM-R system the Link Assurance Signal (LAS) is a means to provide endto-end confirmation between users that a voice communication link remains intact. This is specified in EIRENE FRS Version 8.0.0, Chapter 14.4. and EIRENE SRS Version 16.0.0, Chapter 14.7.
- 62.6.2 Pre-conditions
- 62.6.2.1 None.
- 62.6.3 Service flows
- 62.6.3.1 When the assured voice communication is invoked in the FRMCS system, the FRMCS systems sends a link assurance signal to the user in the GSM-R system.
- 62.6.3.2 When the assured voice communication is stopped in the FRMCS system, the FRMCS system stops sending the link assurance signal to the user in the GSM-R system.
- 62.6.3.3 When degradation of the communication link is detected in the FRMCS system, the FRMCS system stops sending the link assurance signal to the user in the GSM-R system.
- 62.6.3.4 When the FRMCS system detects the loss of connection to the GSM-R user, the users in the FRMCS system are notified according to the use case of degradation of a communication link.
- 62.6.4 Post-conditions
- 62.6.4.1 None.
- 62.6.5 Related URS application interfaces
- 62.6.5.1 None.
- 62.6.6 HMI related criteria
- 62.6.6.1 None.

# 63 Multi user talker control related use cases

#### 63.1 Introduction

In this chapter the use cases related to multi user talker control for voice communication are defined. The following use cases are defined:

- Set the number of simultaneous talkers
- Set initial talker permissions and priorities
- Request permission to talk
- · Grant permission to talk
- Revoke permission to talk
- Service interworking and service continuation with GSM-R

# 63.2 Generic requirements

- 63.2.1 Multi user talker control is available in both on-network and off-network operations.
- 63.2.2 The multi user talker control is available in both user-to-user voice communication and in multi-user voice communication.

# 63.3 Use case: Set the number of simultaneous talkers

## 63.3.1 Description

- 63.3.1.1 There is a need to restrict/control the number of simultaneous talkers based on applications, identies and/or location of involved users.
- 63.3.1.2 The number of simultaneous talkers is either one, a limited number or unrestricted.
- 63.3.1.3 It is the task of the communication application to set the number of simultaneous talkers.

#### 63.3.2 Pre-conditions

63.3.2.1 The application wanting to use the multi users talker control is active.

#### 63.3.3 Service flows

- 63.3.3.1 The communication application sends the number of simultaneous talker(s) information to the multi user talker control application.
- 63.3.3.2 This information is used in multi user talker control application when setting up the communication.
- 63.3.3.3 If there is a need to change the number of simultaneous talkers, it is the communication application which sends this information to the multi user talker control application.
- 63.3.3.4 If the number of talker permissions are reduced and the reduction results in having more active talkers than permitted, the active talkers lose their permission to talk as soon as they stop talking (e.g. voice detection, release PTT) until the new maximum allowed number of talkers is met.
- 63.3.3.5 The multi user talker control application then uses this updated information for controlling the number of simultaneous talkers in the communication.

# 63.3.4 Post-conditions

63.3.4.1 The multi user talker control application is aware about the number of simultaneous users and uses this information during communication.

# 63.4 Use case: Set initial talker permissions and priorities

# 63.4.1 Description

- 63.4.1.1 There are different requirements for talker permissions and to priorise talkers in different communication applications.
- 63.4.1.2 The users are identified by their functional identities.
- 63.4.1.3 The communication application defines the talker permissions and priorities based on the functional identities and the type of communication application, e.g. railway emergency call, shunting, multi train.
- 63.4.1.4 One or multiple users can be granted with the permission to perform as talker in a certain communication. These users are able to request permission to talk during communication.
- 63.4.1.5 Certain user(s) can be granted with an initial talker permission (the first speaker in the communication) ensuring that the entitled user(s) are able to talk first, once the communication is established.
- 63.4.1.6 Different users can be granted with a different talker priority. In case of parallel requests for permission to talk, the permission is granted to the user(s) with highest talker priority. The requests with identical talker priorities will be queued based on the time of request.

#### 63.4.2 Pre-conditions

63.4.2.1 The application wanting to use multi users talker control is active.

#### 63.4.3 Service flows

- 63.4.3.1 The communication application sends information about talker permissions and talker priorities to the multi user talker control application.
- 63.4.3.2 This information is used in multi user talker control when setting up the communication.
- 63.4.3.3 If there is a need to change the information about talker permissions and talker priorities, it is the communication application who sends this information to the multi user talker control application.
- 63.4.3.4 The multi user control application then uses this updated information for controlling the talker permissions and talker priorities in the communication.

## 63.4.4 Post-conditions

63.4.4.1 The multi user control application is aware of the talker permissions and talker priorities and uses this information for call control/setup.

# 63.5 Use case: Request permission to talk

# 63.5.1 Description

- 63.5.1.1 There are occasions in the railway environment where it is needed to mitigate the risk of miscommunication. Use cases include, for example:
  - Emergency communication
  - Shunting communication
  - Trackside worker communication
- 63.5.1.2 The system therfore is able to limit the number of simultaneous talkers in a voice communication.
- 63.5.1.3 An entitled user is able to select and de-select user(s) being able to talk in a voice communication.
- 63.5.1.4 The user is able to request to talk (raise the hand).

#### 63.5.2 Pre-conditions

63.5.2.1 The user in an active voice communication. The number of simultatious talkers is limited in this communication.

#### 63.5.3 Service flows

- 63.5.3.1 The user requests permission to talk on the MMI of the communication application (e.g. by pressing a Push-to-talk button).
- 63.5.3.2 The communication application sends the request to the multi user talker control service in the FRMCS system.
- 63.5.3.3 The communication application indicates on the MMI that talker permission has been requested.

#### 63.5.4 Post-conditions

63.5.4.1 Permission to talk has been requested and a response from the multi user talker control service in the FRMCS system expected.

# 63.5.5 Communication attributes

URS Ref.	Туре	Symmetry Up/Down	Distribution	Latency	Bandwidth	Reliability	Setup	Speed
8.2	Bi- directional data	50/50	User-to- User/Multi- user	Low	Low	High	Normal	High

## 63.5.6 Related URS application interfaces

63.5.6.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application
8.3	Role management and presence

8.4	Location services
8.7	Authorisation of application

# 63.5.7 HMI related criteria

63.5.7.1 Requesting permission to speak is a simple MMI action.

# 63.6 Use case: Grant permission to talk

# 63.6.1 Description

- 63.6.1.1 There are occasions in the railway environment where it is needed to mitigate the risk of miscommunication. Use cases include, for example:
  - Emergency communication
  - Shunting communication
  - Trackside worker communication
- 63.6.1.2 The system is able to limit the number of simultaneous talkers in a voice communication.
- 63.6.1.3 The list of users with permission to talk and those who have requested it, is available to the Multi User Talker Control application.

#### 63.6.2 Pre-conditions

- 63.6.2.1 The user is an active voice communication.
- 63.6.2.2 Multi User Talker Control is configured by the communication application to limit the number of simultaneous talkers.
- 63.6.2.3 By default the Multi User Control application uses a set of criteria, like priorities, identities, etc. to manage the requests automatically
- 63.6.2.4 In addition, an entitled user (i.e. based on functional identity) who is monitoring the progress of the communication, can select and de-select simultaneous talkers.

#### 63.6.3 Service flows

Automatic management of requests

- 63.6.3.1 The Multi User Talker Control service in the FRMCS system receives a request to talk from a user.
- 63.6.3.2 The Multi User Talker Control service in the FRMCS system verifies the number of users who already have permission to talk.
- 63.6.3.3 If the number of users with permission to talk does not exceed the maximum number of simultaneous talkers, the Multi User Talker Control service automatically grants the permission to the requester. The talker assignment time, the timeframe between the talker request and the permission to talk, is specified in QoS.
- 63.6.3.4 If the number of users with permission to talk exceeds the maximum number of simultaneous talkers, the Multi User Talker Control decides based on certain criteria, like priorities, functional identity, etc. who will keep the right to speak and who will be granted the permission to talk The Multi User Talker Control service configures the system accordingly.
- 63.6.3.5 If the number of talker permissions is reduced and the reduction results in having more active talkers than permitted, the active talkers loses their permission to talk as soon as the stop talking (e.g. voice detection, release PTT) until to new maximum allowed number of talkers is met.
- 63.6.3.6 The Multi User Talker Control service sends an indication to the users who have modified their situation with respects to the permission to talk
  - Management of requests by an entitled user
- 63.6.3.7 The Multi User Talker Control service in the FRMCS system receives a request to talk from a user.

- 63.6.3.8 The Multi User Talker Control service in the FRMCS system verifies the number of users who already have permission to talk.
- 63.6.3.9 If the number of users with permission to talk does not exceed the maximum number of simultaneous talkers, the Multi User Talker Control service automatically grants the permission to the requester.
- 63.6.3.10 If the number of users with permission to talk exceeds the maximum number of simultaneous talkers, the Multi User Talker Control service alerts the entitled user that is monitoring the communication, who is presented with the list of simultaneous talkers and the list of pending requests and decides who will keep the right to speak and who will be granted the permission to talk by selecting and de-selecting the corresponding user.
- 63.6.3.11 The Multi User Talker Control service configures the system accordingly.
- 63.6.3.12 The Multi User Talker Control service sends an indication to the users who have modified their situation with respects to the permission to talk
- 63.6.4 Post-conditions
- 63.6.4.1 Permission to talk is granted to the selected users.
- 63.6.5 HMI related criteria
- 63.6.5.1 The list of UE who have permission to speak is presented in a simple way to an entitled user who is controlling the progress of the communication.
- 63.6.5.2 The entitled user is able to select and de-select UE with the right to talk with a simple MMI action.

# 63.7 Use case: Revoke permission to talk

## 63.7.1 Description

- 63.7.1.1 There are occasions in the railway environment where it is needed to mitigate the risk of miscommunication. Use cases include, for example:
  - Emergency communication
  - Shunting communication
  - Trackside worker communication
- 63.7.1.2 The system is able to limit the number of simultaneous talkers in a voice communication.
- 63.7.1.3 The list of users with permission to talk is available to the Multi User Talker Control service.
- 63.7.1.4 An entitled user who monitors the progress of the communication is able at any point to revoke the permission to talk of any of the users with permission to talk. Automatic revocation of talkers in case the maximum number of simultaneous talkers has been reached and a request to talk is received, is included in the use case above.

#### 63.7.2 Pre-conditions

63.7.2.1 A number of users are in an active voice communication for which Multi User Talker Control is enabled and have been granted permission to talk.

An entitled user is monitoring the progress of the communication and can de-select simultaneous talkers

#### 63.7.3 Service flows

- 63.7.3.1 The Multi User Talker Control service in the FRMCS system monitors users who have permission to talk.
- 63.7.3.2 The Multi User Talker Control service presents a list of simultaneous talkers to an entitled user, who decides who will not keep the right to speak by de-selecting the corresponding user.
- 63.7.3.3 The Multi User Talker Control service configues the system accordingly.
- 63.7.3.4 The Multi User Talker Control service sends an indication to the users who have modified their situation with respects to the permission to talk.
- 63.7.3.5 The FRMCS-user is no longer able to talk after the entitled FRMCS-user has changed the permission.

#### 63.7.4 Post-conditions

63.7.4.1 Permission to talk is revoked to the de-selected users.

## 63.7.5 HMI related criteria

- 63.7.5.1 The list of UE who have permission to speak is presented in a simple way to an entitled user who is controlling the progress of the communication.
- 63.7.5.2 The entitled user is able to de-select UEs with the right to talk with a simple MMI action.

- 63.8 Use case: service interworking and service continuation with GSM-R
- 63.8.1.1 For migration purposes the service interworking and service continuation between the GSM-R system and FRMCS system for Multi user talker control needs to be defined.
- 63.8.1.2 Depending on the migration scenario a talker could be part of FRMCS system or GSM-R system.
- 63.8.2 Pre-conditions
- 63.8.2.1 The user is authorised to talk during a multi user voice communication.
- 63.8.3 Service flows
- 63.8.3.1 Service interworking between the talker control in the GSM-R system and the FRMCS system is required, but without changing the GSM-R system.
- 63.8.4 Post-conditions
- 63.8.4.1 None.
- 63.8.5 HMI related criteria
- 63.8.5.1 None.

# Role management related use cases

# 64.1 Introduction

In this chapter the use cases related to role management and presence are defined:

- Registration to a functional identity
- Deregistration of a functional identity
- · Change of a functional identity
- User login to the system
- User logout from the system
- Presentation of identities
- Interrogation of identities within a certain context
- Service interworking and service continuation with GSM-R

# 64.2 Definition of identities

In order to fully understand the uses cases in this chapter it is required to set the following definitions / order. Please see Figure 2.

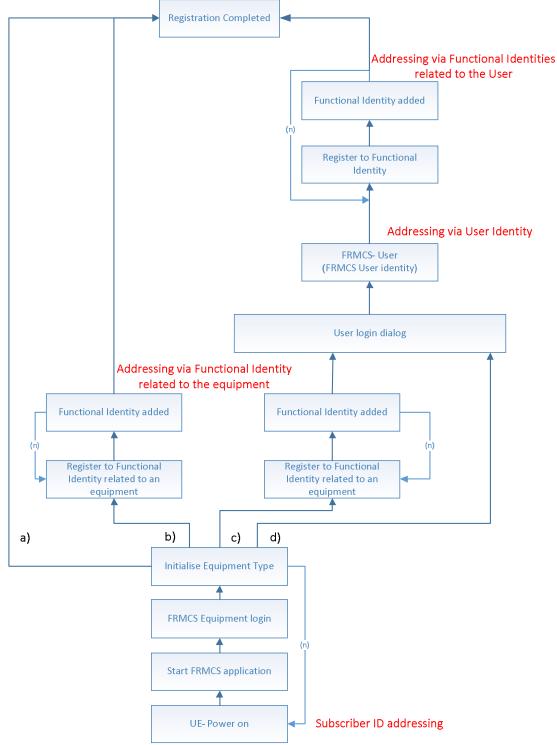


Figure 2: Role management overview

In this definition it is needed to make a distinction between different types of end user devices. The following are, as a principle, defined:

- a) a device with no MMI, not requiring a functional identity, like a "Sensor".
- b) a device with no MMI, requiring a functional identity, like a "PA".
- c) a device with a MMI used in a train by a train driver, like a "Cab radio".
- d) a device with a MMI for general purpose use, like a "Handheld".

## Steps:

- □ <u>UE-Power on</u>: The end user device has started up and is attached to the FRMCS network on telecoms level. The end user device is reachable via its subscriber identity address.
- ⇒ <u>Start FRMCS application</u>: On the end user device the applicable FRMCS application(s) start up and are ready for use.
- ⇒ FRMCS equipment login: The equipment is logging in into the FRMCS system on application level.
- ⇒ <u>Initialise equipment type</u>: the type of equipment used is identified. This can be changed at any time depending on the use.

At this stage of the user flow four different routes can be followed, based on the determined equipment type of the end user device.

#### Type a) "sensor":

No action required. The end user device is now reachable via its subscriber identity address.

After this step the process of registration is completed.

# Type b) "PA":

- ⇒ Register to a functional number: the equipment will request for a registration on a functional number. This functional number is related to the equipment and identifies the device, like a PA system on a train.
- ⇒ <u>Functional identity added</u>: the request for a functional identity is granted by the FRMCS system. The end user device is now reachable via its functional identity (and its subscriber identity address).

After this step the process of registration is completed.

# Type c) "cab radio":

- Register to a functional number: the user will request for a registration on a functional number. This functional number is related to the user and identifies where the equipment is used, like a cab radio in a cabin of a train.
- ⇒ <u>Functional identity added</u>: the request for a functional identity is granted by the FRMCS system. The end user device is now reachable via its functional identity related to the equipment (and its subscriber identity address).

## Type d) "Handheld":

⇒ For an equipment type like a handheld, it is likely that a functional registration will not take place related to the position.

Next, for both the types c) and d) the following steps apply:

- ⇒ <u>User login dialog</u>: the user is presented with a login MMI action. The user can now login into the end user device via his credentials. This can be functional of personal.
- ⇒ <u>FRMCS-User</u>: The user is now identified by the FRMCS system. The end user device is now reachable via its user identity (and its functional identity related to the equipment, and its subscriber identity address).
- Register to a functional number: the user will request for a registration on a functional number. This functional number is related to the user and identifies where the equipment is used, like a cab radio in a cabin of a train.
- ⇒ <u>Functional identity added</u>: the request for a functional identity is granted by the FRMCS system. The end user device is now reachable via its functional identity related to the user (and its functional identity related to the equipment, and its user identity, and its subscriber identity address).

After this step the process of registration is completed.

Based on the usage of the functional identity, mostly related to the equipment type, the registration of a FRMCS-user to a functional number can be:

- ⇒ Permanent: the registration has no expiry limit;
- ⇒ Non-permanent: the registration is valid for a configurable time.

As examples: a permanent functional identity is used for the cab radio which is installed in a train. A non-permanent functional identity is used for the duration of a train journey where a unique functional identity is required during one day.

For border crossing scenario's a functional identity is applicable to a home or a visiting country / FRMCS system.

The FRMCS system is using functional identity in every kind of FRMCS communication unless it is explicitly stated.

The use cases related to the steps UE-Power on until Initialise equipment type are covered in chapter 5.

# 64.3 Use case: Registration to a functional identity

## 64.3.1 Description

64.3.1.1 A user or the equipment is able to register to one functional indentity or to multiple functional identities. A functional identity can therefor be equipment related of user related.

#### 64.3.2 Pre-conditions

- 64.3.2.1 The equipement type is identified.
- 64.3.2.2 For functional registration of the user, the user is logged in into the FRMCS system.

# 64.3.3 Service flows

Requested functional identity not in use

- 64.3.3.1 The user or the equipment selects the functional identity. The identity can be selected from a list based (dynamically generated) based on the location of the user, operational schedules, etc. or the functional identity can be entered manually (free format).
- 64.3.3.2 The user or the equipment sends the registration request(s) to system.
- 64.3.3.3 If the FRMCS system accepts the registration request, the user or the equipment is informed. The functional identity is assigned to the user or the equipment.
- 64.3.3.4 If the FRMCS system rejects the registration request, the user or the equipment is informed of this rejection including the reason.

Requested functional identity is in use

- 64.3.3.5 The user or the equipment selects the functional identity. The identity can be selected from a list based (dynamically generated) based on the location of the user, operational schedules, etc. Or the functional identity can be entered manually (free format).
- 64.3.3.6 The user or the equipment is indicated that the functional identity is already used by an other user.
- 64.3.3.7 The user or the equipment is presented with the following options:
  - The user or the equipment can cancel the process of registration
  - The user or the equipment can select to take over the functional identity, if the selected functional identity allows it.
  - The user or the equipment can select to register as an additional user of this identity, if the selected functional identity allows it.
- 64.3.3.8 The user or the equipment sends the registration request(s) to system.
- 64.3.3.9 If the FRMCS system accepts the registration request, the user or the equipment is informed.
- 64.3.3.10 If the FRMCS system rejects the registration request, the user or the equipment is informed of this rejection including the reason.
- 64.3.3.11 In the case of taking over a identity, the FRMCS system deregisters the other user or the equipment (see x dereg use case x).

Registration by the system

64.3.3.12 The system is able to push a registration to a user or the equipment, based on user identification, operational conditions, like schedules

when entering the train (for example by using Near Field Communication, SmartCard etc.), location, time, recent activity, etc.

64.3.3.13 The user or the equipment is informed of this registration by the system.

#### 64.3.4 Post-conditions

- 64.3.4.1 If the system has accepted the registration, the user or the equipment can be reached on this functional identity or identities.
- 64.3.4.2 If the system has not accepted the registration, the user or the equipment can not be reached on this functional identity.

#### 64.3.5 Communication attributes

URS Ref.	Туре	Symmetry Up/Down	Distribution	Latency	Bandwidth	Reliability	Setup	Speed
8.3	Bi- directional data	50/50	User-to- User/Multi- user	Normal	Low	High	Normal	High

# 64.3.6 Related URS application interfaces

64.3.6.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application
8.3	Role management and presence
8.4	Location services
8.7	Authorisation of application

#### 64.3.7 HMI related criteria

- 64.3.7.1 Simple HMI interaction: presentation of functional identities is performed in a comprehensive way for example using text description of the functions instead of numbers
- 64.3.7.2 Single sign on principle is implemented to allow users to access different applications by a single registration.

# 64.4 Use case: Deregistration of a functional identity

## 64.4.1 Description

64.4.1.1 A user or the equipment is able to deregister from one functional indentity or from multiple functional indentities.

#### 64.4.2 Pre-conditions

64.4.2.1 The user or the equipment has at least one functional identity.

## 64.4.3 Service flows

Deregistration functional identity by the user

- 64.4.3.1 The user or the equipment chooses the functional identities to be deregistered among the list of currently registered functional identities by:
  - selecting a set of functional identities (the application may select the appropriate set of functional identities automatically)
  - · selecting one functional identity
- 64.4.3.2 The user or the equipment sends the deregistration request(s) to system.
- 64.4.3.3 If the FRMCS system accepts the deregistration request, the user or the equipment is informed.
- 64.4.3.4 If the FRMCS system rejects the deregistration request, the user or the equipment is informed of this rejection including the reason.

Deregistration by the system

64.4.3.5 The system deregisters the user or the equipment from the functional identities and informes the user or the equipment. The deregistration can be based on a number of criteria (like a timer, location, operatinal schedules, another user or equipment taking over the functional identity).

#### 64.4.4 Post-conditions

- 64.4.4.1 If the system has deregistered the functional identity successfully, the previously registered user(s) or equipment(s) can no longer be reached on this identity.
- 64.4.4.2 If the system has not deregistered the functional identity, the registered user or equipment stays registered and can still be reached on this identity.

#### 64.4.5 HMI related criteria

- 64.4.5.1 Simple HMI interaction: presentation of functional identities is performed in a comprehensive way for example using text description of the functions instead of numbers
- 64.4.5.2 Single sign off principle is implemented to allow users to stop the access to different applications by a single deregistration.

# 64.5 Use case: change of a functional identity

64.5.1.1 Changing a functional identity is performed via the deregistration procedure followed by the registration procedure. The procudures is automated in order to minimize the MMI handling.

- 64.6 Use case: User login to the system
- 64.6.1 Description
- 64.6.1.1 The user is able to login into the FRMCS system.
- 64.6.2 Pre-conditions
- 64.6.2.1 The equipment type is initialised.
- 64.6.2.2 The login procedure is presented and/or available for the user on the end user device.
- 64.6.3 Service flows
- 64.6.3.1 The user performs the login procedure on the end user device. This depends on the end user device how this is performed (e.g. username/password, smart card, finger print, eye scan, etc).
  - Successful identification
- 64.6.3.2 The user is informed about the successful login into the FRMCS system.
  - Unsuccessful identification
- 64.6.3.3 The user is informed about the unsuccesfull login to the FRMCS system. The user is redirected to the login procedure.
- 64.6.4 Post-conditions
- 64.6.4.1 The user is identified in the FRMCS system and can register a functional identity.
- 64.6.4.2 The user is reachable via the user identity.
- 64.6.5 HMI related criteria
- 64.6.5.1 The login is performed by simple HMI actions.

- 64.7 Use case: User logout from the system
- 64.7.1 Description
- 64.7.1.1 The user is able to logout of the FRMCS system.
- 64.7.2 Pre-conditions
- 64.7.2.1 The user is login into the FRMCS system.
- 64.7.2.2 The user can activate the logout procedure manually or the end user device can perform the logout automatically.
- 64.7.3 Service flows
- 64.7.3.1 The user performs the logout procedure on the end user device.

Succesfull logout

- 64.7.3.2 The FRMCS system logs out the user.
- 64.7.3.3 The user is informed about the successful logout of the FRMCS system.

Unsuccesfull logout

- 64.7.3.4 The user is informed about the unsuccesfull logout to the FRMCS system.
- 64.7.4 Post-conditions
- 64.7.4.1 The user is logged out of the FRMCS system.
- 64.7.4.2 The user is not reachable via the user identity anymore.
- 64.7.5 HMI related criteria
- 64.7.5.1 The logout is performed by simple HMI actions.

- 64.8 Use case: Presentation of identities
- 64.8.1 Description
- 64.8.1.1 A user or the equipment is able to be identified by others.
- 64.8.2 Pre-conditions
- 64.8.2.1 The end user device (UE) is initialised.
- 64.8.3 Service flows

Prior to communication initiation

64.8.3.1 The end user device will present to the user relevant information for example status e.g. available, busy, dealing with emergency situation, based on the identity of the user and/or the location and/or active applications on the end user device.

During communication initiation

- 64.8.3.2 The available identities of the caller (functional identity of a user, functional identity of equipment, user identity and subscriber identity) are sent to the end user device(s) of the receiver(s) of the communication.
- 64.8.3.3 The end user device(s) will present the appropriate functional identity(ies) based on a certain context (like location, destination, time, local configuration, status, etc.).
- 64.8.3.4 If multiple functional identities are used by the FRMCS-user, the presentation is based on certain context (e.g. a call to a train controller shows the running number, a call to a maintenance controller shows the engine number).
- 64.8.3.5 If no functional identity is available, the user identity is presented.
- 64.8.3.6 If both the functional identity and the user identity are not available, the subscriber identity is presented.

During a communication

- 64.8.3.7 The available identities of the connected user(s) (functional identity of a user, functional identity of equipment, user identity and subscriber identity) are sent to the end user device(s) participating in the communication.
- 64.8.3.8 The end user device(s) will present the appropriate functional identity(ies) based on a certain context (like location, destination, time, local configuration, status, etc.).
- 64.8.3.9 If multiple functional identities are used by the FRMCS-user, the presentation is based on certain context (e.g. a call to a train controller shows the running number, a call to a maintenance controller shows the engine number).
- 64.8.3.10 If no functional identity is available, the user identity is presented.
- 64.8.3.11 If both the functional identity and the user identity are not available, the subscriber identity is presented.
- 64.8.3.12 The functional identity(ies) of the user who is talking is indicated to the other user(s) in the communication.
- 64.8.3.13 If no functional identity is available, the user identity of the talker is presented.
- 64.8.3.14 If both the functional identity and the user identity are not available, the subscriber identity of the talker is presented.
- 64.8.4 Post-conditions
- 64.8.4.1 The identity of the initiator of the communication is presented.
- 64.8.4.2 The identity of the connected users in the communication is presented.

64.8.4.3 The identity of the talker in the communication is presented.

#### 64.8.5 HMI related criteria

- 64.8.5.1 Simple HMI interaction: presentation of functional identities is performed in a comprehensive way for example using text description of the functions instead of numbers
- 64.8.5.2 When applicable, location information of the user is added besides the functional identity in the presented list of users.
- 64.8.5.3 The list of displayed users automatically adapts the application used, the ongoing communication and the identity registered by user.
- 64.9 Use case: Interrogation of identities within a certain context
- 64.9.1 Description
- 64.9.1.1 A user or the equipment is able to be identified by others within a certain context (for example train, region, communication group, Railway Emergency Communication, all drivers on a station, etc.).
- 64.9.2 Pre-conditions
- 64.9.2.1 The end user device (UE) is initialised.
- 64.9.3 Service flows

Interrogation of a functional identity

- 64.9.3.1 The user or the equipment can request the system to provide the functional identity(ies) of a user based on a user identity or a subscriber identity.
- 64.9.3.2 The system will return the functional identity(ies) of the user or the equipment.

  Interrogation of a user identity
- 64.9.3.3 The user or the equipment can request the system to provide the user identity of user(s) based on a functional identity or a subscriber identity.
- 64.9.3.4 The system will return the user identity of the user(s).

Interrogation of a subscriber identity

- 64.9.3.5 The user or the equipment can request the system to provide the subscriber identity based on a functional identity or a user identity.
- 64.9.3.6 The system will return the subscriber identity(ies).

Interrogation of indentity(ies) in a certain context

- 64.9.3.7 The user or the equipment sends a request to the system to receive the identities of users or the equipment within a certain context (like all drivers on a track section).
- 64.9.3.8 The system returns to the user or the equipment a set of identities within the certain context.
- 64.9.4 Post-conditions
- 64.9.4.1 The requesting user or the equipment is informed about the identities requested.
- 64.9.5 HMI related criteria
- 64.9.5.1 Simple HMI interaction: presentation of functional identities is performed in a comprehensive way for example using text description of the functions instead of numbers

- 64.9.5.2 When applicable, location information of the user is added besides the functional identity in the presented list of users.
- 64.9.5.3 The list of displayed users automatically adapts the application used, the ongoing communication and the identity registered by user.

- 64.10 Use case: Service interworking and service continuation with GSM-R 64.10.1 Description
- 64.10.1.1 For migration purposes the service interworking and service continuation between the GSM-R system and FRMCS system for role management needs to be defined.
- 64.10.1.2 Depending on the migration scenario a controller can be attached to the FRMCS system, to the GSM-R system or both. The mobile user can be attached either in the GSM-R system or in the FRMCS system.
- 64.10.1.3 This use case only applies to end user devices supporting both FRMCS and GSM-R systems.
- 64.10.2 Pre-conditions
- 64.10.2.1 None.
- 64.10.3 Service flows

Mobile user attached to GSM-R

64.10.3.1 When the mobile user is attached to the GSM-R system the numbering plan of GSM-R is only used (EIRENE). Only numeric identities can be used.

Mobile user attached to FRMCS

64.10.3.2 When the mobile user is attached to the FRMCS system the numbering plan of FRMCS is used. Numeric and alpha numeric identities can be used.

Mobile user moving from GSM-R to FRMCS

64.10.3.3 When the user equipment of the mobile user changes from the GSM-R system to the FRMCS system, the FRMCS system provides service continuation of role management, e.g. the identities will be kept.

Mobile user moving from FRMCS to GSM-R

64.10.3.4 When the user equipment of the mobile user changes from the FRMCS system to the GSM-R system, the GSM-R system provides service continuation of role management, e.g. the identities will be kept. Alpha numeric identities used in FRMCS is translated to numeric identities to align to the GSM-R numbering plan (EIRENE).

Numbering plan support

64.10.3.5 The FRMCS system supports the GSM-R numbering plan (EIRENE) as a minimum. In addition the FRMCS system supports other numbering plans, e.g. different call type, different numbering lengths, different function codes. The FRMCS system also supports alpha numeric numbering plans.

64.10.4 Post-conditions

64.10.4.1 None.

64.10.5 HMI related criteria

64.10.5.1 None.

# 65 Location services related use cases

#### 65.1 Introduction

In this chapter the use cases related to location services are defined. The following use cases are defined:

- Provide location information
- Request for location information
- Request for identities based on location
- Service interworking and service continuation with GSM-R

#### 65.2 Use Case: Provide location information

# 65.2.1 Description

- 65.2.1.1 An end user device provides its location information to the location services application for further processing.
- 65.2.1.2 The location information may be provided to other applications on the same device.
- 65.2.1.3 An external system (like interlocking system, ATC, balise, RFID, external GPS/Galileo, etc.) can provide location information to the location services application for further processing.

#### 65.2.2 Pre-conditions

65.2.2.1 The FRMCS equipment supports mechanisms to obtain its location.

#### 65.2.3 Service flows

- 65.2.3.1 The end user device provides periodically location information to the location services application, including the identities (functional, user and/or device).
- 65.2.3.2 An external system can provide additional information to the location service application in order to improve accuracy of the location information of an end user devices.
- 65.2.3.3 The location services application receives the location information and identifies the end user device and any assigned identities (functional, user and/or device).
- 65.2.3.4 The received location information is stored by the location services application.
- 65.2.3.5 If the location services application doesn't receive the periodic location information from the end user device, the location service application is able to send a request to the end user device to provide its location information.

#### 65.2.4 Post-conditions

65.2.4.1 The location information of the end user device is available in the location service application.

#### 65.2.5 Communication attributes

URS Ref.	Туре	Symmetry Up/Down	Distribution	Latency	Bandwidth	Reliability	Setup	Speed	
-------------	------	---------------------	--------------	---------	-----------	-------------	-------	-------	--

8.4	Bi- directional data	80/20	User-to- User/Multi- user	Low	Low	High	Normal	High
-----	----------------------------	-------	---------------------------------	-----	-----	------	--------	------

# 65.2.6 Related URS application interfaces

65.2.6.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application					
8.3	Role management and presence					
8.7	Authorisation of application					
8.8	QoS Class Negotiation					
8.12	Arbitration					

# 65.2.7 HMI related criteria

65.2.7.1 None

- 65.3 Use Case: Request for location information
- 65.3.1 Description
- 65.3.1.1 A user, an application or an external system can request the location information of an end user device from the location services application. The user can also request the location of its own device.
- 65.3.2 Pre-conditions
- 65.3.2.1 The user has a functional identity.
- 65.3.3 Service flows
- 65.3.3.1 The user, an application or an external system sends a request for location information of an end user device to the location service application based on an identity (functional, user or device).
- 65.3.3.2 The user, an application or an external system can request for a single location information or a periodical update of the location information.
- 65.3.3.3 The user, an application or an external system can send a request to the location service to stop the periodical update of location information.

Positive outcome

65.3.3.4 The location services application provides the location information as requested (once or periodically).

Negative outcome

- 65.3.3.5 The location information is not available in the location services application.
- 65.3.3.6 The location service application sends a response back to the requesting user, application or external system that the location information is not available.
- 65.3.4 Post-conditions
- 65.3.4.1 The location information is provided, if available.
- 65.3.5 HMI related criteria
- 65.3.5.1 None

- 65.4 Use Case: Request for identities based on area
- 65.4.1 Description
- 65.4.1.1 A user, an application or an external system can request identities based on location information from the location services application.
- 65.4.2 Pre-conditions
- 65.4.2.1 The user has a functional identity.
- 65.4.3 Service flows
- 65.4.3.1 The user, an application or an external system sends a request for identity(ies) (functional, user or device) based on location information (like a point, an area, a station, a track section, etc.).
- 65.4.3.2 The user, an application or an external system can request the identity(ies) once or request a periodical update of the identity(ies).
- 65.4.3.3 The user, an application or an external system can send a request to the location service to stop the periodical update of the identity(ies).
  - Positive outcome
- 65.4.3.4 The location services application provides the identity(ies) and the location of the identity(ies) as requested (once or periodically).
  - Negative outcome
- 65.4.3.5 The information of the identity(ies) and their location is not available in the location services application.
- 65.4.3.6 The location service application sends a response back to the requesting user, application or external system that the location information is not available.
- 65.4.4 Post-conditions
- 65.4.4.1 The information of the identity(ies) and their location is provided, if available.
- 65.4.5 HMI related criteria
- 65.4.5.1 None.

$\sim$	_	_					1.1		4.5	2.44	$\sim$		٩.
_	5	_		$\alpha \alpha \alpha \cdot$	OOKMOO	INTOKALO	TINO OF	A COMMO	AAMTIMITATIAM	VALITIO	1	1 /I L	_
	ריו	-	١ ١	75	SHIVICE		KILICIAL	CISPIVICE			17.71	<b>1/1</b> – F	٦.
_	$\sim$	. •	,	aoc.		IIILOI VVOI	mind an	G GGI VIGG	continuation		$\sim$	. V I	

65.5.1.1 No service interworking and service continuation with GSM-R is required.

# 66 Authorisation of communication related use cases

#### 66.1 Introduction

In this chapter the use cases related to authorisation of communication are described, the following use case is identified:

- Permit / deny communication
- 66.2 Use case: Permit / deny communication
- 66.2.1 Description
- 66.2.1.1 The purpose of the authorisation function it to allow the network operator to control and regulate communications in order to avoid disruption/distraction to the users (for example drivers during voice communication) and preventing unauthorised communication.
- 66.2.1.2 The system may therefore restrict communication based on a configurable access matrix related to the FRMCS subscriber identity, the FRMCS functional identity of the equipment, the FRMCS user identity, the FRMCS functional identity of the FRMCS-users considering the source and destination.
- 66.2.1.3 This use case applies to any voice and data communication.
- 66.2.1.1 This use case is available in both on-network and off-network conditions by using a default profile.
- 66.2.2 Pre-conditions
- 66.2.2.1 The user attempts to establish a communication.
- 66.2.3 Service flows
- 66.2.3.1 Upon an attempt to establish a communication, the system checks if the source user is allowed to invite the destination user(s) and the destination user(s) is allowed to receive the communication. The system considers for the verification process the source and destination user(s) address and/or identity.
- 66.2.3.2 If multiple identities are simultaneously active to an users, the FRMCS system allows the operator to configure the order in which the:
  - Functional Identities related to the user
  - User identity
  - Functional Identities related to the equipment
  - Subscriber identity

are evaluated to authorisation of communication.

- 66.2.3.3 If the user is allowed to establish the communication, the FRMCS system proceeds the communication setup.
- 66.2.3.4 If the user is not allowed establish the communication, the FRMCS system rejects the attempt including indicating the reason cause.

#### 66.2.4 Post-conditions

66.2.4.1 Either the communication has been established or the user has been informed about the denial of the callcommunication attempt.

# 66.2.5 Communication attributes

URS Ref.	Туре	Symmetry Up/Down	Distribution	Latency	Bandwidth	Reliability	Setup	Speed
8.5	Bi- directional data	50/50	User-to-User	Low	Low	High	N/A	High

# 66.2.6 Related URS application interfaces

66.2.6.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application
8.7	Authorisation of application

# Authorisation of application related use cases

## 67.1 Introduction

In this chapter the use cases related to authorisation of application are described, the following use case is identified

- Enabling/Disabling applications
- 67.2 Use case: Enabling/Disabling applications
- 67.2.1 Description
- 67.2.1.1 The system allows the network operators to control the use of applications in order to avoid disruption/distraction to the users (for example drivers), preventing unauthorised usage according to his role.
- 67.2.1.2 The system therefore is able to enable / disable applications for a user depending on subscriber identity, the functional identity of the equipment, the user identity or the functional identity/ies of the user or the location of the user. Also context based criteria like location information and other conditions are to be taken into account.
- 67.2.1.1 This use case is available in both on-network and off-network conditions by using a default profile.
- 67.2.2 Pre-conditions
- 67.2.2.1 The end user device is powered on and the FRMCS application on the end user device has started.
- 67.2.3 Service flows

Power-on

67.2.3.1 After powering on the end user device and start of the FRMCS application on the device, the system enbles the application(s) on the device according to the role related to the subscriber identity.

Change of registration status

- 67.2.3.2 Upon a change in registration by registration to/deregistration to/from a functional identity, change of a functional identity, user login logout to/from the system, the system enables / disables applications.
- 67.2.3.3 The FRMCS system allows the operator to configure the order in which the:
  - Functional Identities related to the user
  - User identity
  - Functional Identities related to the equipment
  - Subscriber identity

are evaluated to come up with the set of application authorised for use.

- 67.2.3.4 If a user has registered to multiple functional identities, the user is authorised to use all applicable applications related to the different functional identities.
- 67.2.3.5 If an application is relying on other applications, enabling of all required applications is managed by the system.

67.2.3.6 Only authorised applications are presented to the user.

Change of area

- 67.2.3.7 If the user enters a certain area, the system may prevent the use of application(s).) which had been authorised previously.
- 67.2.3.8 If the user enters a certain area, the system may enable the use of application(s) which had not been authorised previously.
- 67.2.3.9 If an application is relying on other applications, enabling of all required applications is managed by the system.
- 67.2.3.10 Only authorised applications are presented to the user.
- 67.2.4 Post-conditions
- 67.2.4.1 The user has access to all authorised applications.

#### 67.2.5 Communication attributes

URS Ref.	Туре	Symmetry Up/Down	Distribution	Latency	Bandwidth	Reliability	Setup	Speed
8.7	Bi- directional data	50/50	User-to-User	Normal	Low	High	Normal	High

# 67.2.6 Related URS application interfaces

67.2.6.1 None.

# 68 QoS class negotiation related use cases

#### 68.1 Introduction

In this chapter the use case(s) related to QoS class negotiation are defined. The following use case(s) are defined:

- Requesting/(re)negotiating QoS classes
- Service interworking and service continuation with GSM-R

# 68.2 Use case: Requesting/(re)negotiating QoS profile classes

# 68.2.1 Description

68.2.1.1 In order to be able to deliver a certain level of communication quality, the application is able to request and (re)negotiate a Quality of Service (QoS) class from the system. The system is able to assign the QoS class<sup>4</sup>.

#### 68.2.2 Pre-conditions

68.2.2.1 The application is authorised to request a QoS class.

#### 68.2.3 Service flows

- 68.2.3.1 The application requests a QoS class from the system, as part of setting up the communication.
- 68.2.3.2 The system grants the requested QoS profile class, if available.
- 68.2.3.3 If the requested QoS class cannot be granted, the system performs the following actions:
  - 1. Downgrade the QoS classes of ongoing communications with lower priority, or
  - 2. Release ongoing communications with lower priority, or
  - 3. Offer a lower QoS class or reject the request.
- 68.2.3.4 If the application accepts the proposed QoS class values, the communication is established.
- 68.2.3.5 If the application rejects the proposed QoS parameters, the communication is not established.
- 68.2.3.6 The QoS class assigned is constantly monitored by the FRMCS application. If the FRMCS application is assigned with a lower QoS class than requested and a better QoS class becomes available, a renegotiation is required by the FRMCS application.

#### 68.2.4 Post-conditions

68.2.4.1 The communication is either established or not established.

#### 68.2.5 Communication attributes

URS Ref.	Туре	Symmetry Up/Down	Distribution	Latency	Bandwidth	Reliability	Setup	Speed
-------------	------	---------------------	--------------	---------	-----------	-------------	-------	-------

<sup>&</sup>lt;sup>4</sup> In a QoS class only the parameters latency and reliability are negotiable, See QoS.

8.8	Bi- directional 50/50 data	User-to-User	Normal	Low	High	N/A	High	
-----	----------------------------------	--------------	--------	-----	------	-----	------	--

# 68.2.6 Related URS application interfaces

68.2.6.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application
8.7	Authorisation of application

#### 68.2.7 HMI related criteria

68.2.7.1 None

# 68.3 Use case: service interworking and service continuation with GSM-R

## 68.3.1 Description

- 68.3.1.1 For migration purposes the service interworking and service continuation between the GSM-R system and FRMCS system for QoS class negotiation needs to be clear.
- 68.3.1.2 Depending on the migration scenario a user can be attached to the FRMCS system, to the GSM-R system or both.
- 68.3.1.3 For user-to-user/Multi-user communication the QoS/arbitration information between FRMCS and GSM-R needs to be exchanged.
- 68.3.1.4 This use case only applies to end user devices supporting both FRMCS and GSM-R systems.
- 68.3.2 Post-conditions
- 68.3.2.1 None.
- 68.3.3 Service flows
- 68.3.3.1 For user-to-user/Multi-user communication in the direction from GSM-R to FRMCS the GSM-R priority needs to be exchanged. Mapping of GSM-R priority to FRMCS QoS and arbitration information is performed in the FRMCS system.
- 68.3.3.2 For user-to-user/Multi-user communication in the direction from FRMCS to GSM-R the QoS and arbitration information is mapped to GSM-R priority by the FRMCS system, and needs to be exchanged.

# 68.3.4 Post-conditions

68.3.4.1 None.

# 69 Safety application key management communication related use cases

#### 69.1 Introduction

In this chapter the use cases related to Safety application key management communication are defined. The following use cases are defined:

- Initiation of a Safety application key management data communication
- Termination of a Safety application key management data communication
- Service interworking and service continuation with GSM-R

# 69.2 Use case: Initiation of a Safety application key management data communication

## 69.2.1 Description

- 69.2.1.1 Safety application key management communication is the application which performs the functions that ensure the exchange of credentials/keys required by other applications (such as ATO, ATC) to ensure the correct authentication of the end users of each application and the integrity of the messages exhanged.
- 69.2.1.2 Some Safety application key management systems require radio communication to interchange the relevant data between a train and its corresponding key distribution center (Key Management Center). This key distribution center may be located in the same network or in an external network.
- 69.2.1.3 The users in this case are the Safety application key management applications both on-board of the train and in the key distribution center at the trackside (ground system).
- 69.2.1.4 Safety application key management communication is considered to be user-touser data communication.
- 69.2.1.5 The communication of keys may be requested each time that an ATC or ATO communication session is established or at any other time, depending on the specific configuration of the Safety application key management application.

#### 69.2.2 Pre-conditions

- 69.2.2.1 The initiating application is authorised to initiate the Safety application key management data communication. This is managed by the authorisation of communication application.
- 69.2.2.2 The receiving application is authorised to use the Safety application key management data communication. This is managed by the authorisation of communication application.

#### 69.2.3 Service flows

69.2.3.1 The initiating application (e.g. on-board of the train or the key distribution center at the track side) initiates the Safety application key management data communication to the receiving side (e.g. key distribution center at the trackside or on-board of the train). The QoS profile of the communication is managed by the QoS Profile application. The data communication requests the QoS profile which matches the application category of CRITICAL DATA (see [QoS]) within the FRMCS system, depending on the application needs.

- 69.2.3.2 The FRMCS system establishes the bearer service required for the data communication within a setup time specified as IMMEDIATE (see [QoS]).
- 69.2.3.3 The arbitration is managed by the arbitration application.
- 69.2.3.4 The communication is recorded by the Data recording and access to recorded data application.

## 69.2.4 Post-conditions

- 69.2.4.1 The initating application is connected to the receiving application.
- 69.2.4.2 Data can be exchanged between the Safety application key management applications.

#### 69.2.5 Communication attributes

URS Ref.	Туре	Symmetry Up/Down	Distribution	Latency	Bandwidth	Reliability	Setup	Speed
8.9	Bi- directional Data	50/50	User-to-User	Normal	Low	High	Immediate	High

# 69.2.6 Related URS application interfaces

69.2.6.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application			
5.9	Automatic Train Control Communication			
5.10	Automatic Train Operation communication			
8.6	Authorisation of data communication			
8.7	Authorisation of application			
8.8	QoS Class Negotiation			
8.12	Arbitration			
5.20	Data recording and access			
6.20	Transfer of data			

#### 69.2.7 HMI related criteria

69.2.7.1 None.

- 69.3 Use case: Termination of a Safety application key management data communication
- 69.3.1 Description
- 69.3.1.1 The initiating or the receiving application can terminate de Safety application key management data communication.
- 69.3.2 Pre-conditions
- 69.3.2.1 The Safety application key management applications onboard and trackside have a data communication initiated.
- 69.3.3 Service flows
- 69.3.3.1 The terminating application (e.g. on-board of the train or the key distribution center at the track side) terminates the Safety application key management data communication with the receiving side application (e.g. key distribution center at the trackside or on-board of the train).
- 69.3.3.2 The FRMCS system terminates the bearer service required for the data communication.
- 69.3.4 Post-conditions
- 69.3.4.1 The terminating Safety application key management data application is disconnected from the receiving application.
- 69.3.5 HMI related criteria
- 69.3.5.1 None.

# 69.4 Use case: service interworking and service continuation with GSM-R

## 69.4.1 Description

- 69.4.1.1 For migration purposes the service interworking and service continuation between the GSM-R system and FRMCS system for Safety application key management data communication needs to be clear.
- 69.4.1.2 Depending on the migration scenario a key distribution center can be attached to the FRMCS system, to the GSM-R system or both. The on-board Safety application key management application can be attached either in the GSM-R system or in the FRMCS system. Functional identities are applicable in one system only.
- 69.4.1.3 This use case only applies to end user devices supporting both FRMCS and GSM-R systems.
- 69.4.1.4 Online Safety application key management data exchange is supported only with a packet switched (PS) bearer in the GSM-R system. Therefore, for service interworking and service continuation only the PS bearer is required.

#### 69.4.2 Pre-conditions

- 69.4.2.1 The initiating application is authorised to initiate the Safety application key management data communication. This is managed by the authorisation of communication application.
- 69.4.2.2 The receiving application is authorised to use the Safety application key management data communication. This is managed by the authorisation of communication application.

#### 69.4.3 Service flows

Initiating Safety application key management application attached to GSM-R

- 69.4.3.1 When the initiating Safety application key management application is attached to the GSM-R system and is initiating data communication to another Safety application key management application, the GSM-R system will route the data communication accordingly.
- 69.4.3.2 If the other Safety application key management application is attached to the FRMCS system, the GSM-R system can only route the data communication if the destination can be reached by an address or identity understood by the GSM-R system. The role management in FRMCS provides the appropriate address or identity e.g. by providing a mapping of GSM-R identities and FRMCS identities.
- 69.4.3.3 The information from the role management and presence application is used to route the communication and to present the identities.
  - Initiating Safety application key management application attached to FRMCS
- 69.4.3.4 When the initiating Safety application key management application is attached to the FRMCS system and is initiating data communication to another Safety application key management application, the FRMCS system will route the communication accordingly.
- 69.4.3.5 If the other Safety application key management application is attached to the GSM-R system, the FRMCS system can only route the data communication if the destination can be reached by an address or identity understood by the FRMCS system. The role management in FRMCS provides the appropriate address or identity e.g. by providing a mapping of GSM-R identities and FRMCS identities.
- 69.4.3.6 The information from the role management and presence application is used to route the communication and to present the identities.

- Safety application key management application moving from GSM-R to FRMCS
- 69.4.3.7 When the Safety application key management application is detached from the GSM-R system the FRMCS end user device provides service continuation by setting up the communication via the FRMCS system. An interruption of data communication is acceptable.
  - Safety application key management application moving from FRMCS to GSM-R
- 69.4.3.8 When the Safety application key management application is detached from the FRMCS system, the FRMCS end user device provides service continuation by setting up the communication via the GSM-R system. An interruption of data communication is acceptable.
- 69.4.4 Post-conditions
- 69.4.4.1 None.

# 70 Assured data communication related use cases

#### 70.1 Introduction

In this chapter the use cases related to assured data communication (ADC) are defined. The following use cases are defined:

- Initiation of ADC
- Stopping of ADC
- Service interworking and service continuation with GSM-R

# 70.2 Description

- 70.2.1.1 The need of indicating to the users that a data communication is active arises in those situations where the users are put at risk when the communication is interrupted; for example, in shunting communication during pushing movements.
- 70.2.1.2 The Assured Data Communication application is initiated together with another data communication or voice communication application, when required. There can be multiple recipients.
- 70.2.1.3 The users in this case are applications on an end user device. These applications inform the user if the data communication is interrupted.
- 70.2.1.4 The indication can be either a positive confirmation (i.e. keep alive) or negative (i.e. an alarm) in the case of a broken or degraded link. The type of indication is configurable by the application that triggers the use of the Assured Data Communication.

#### 70.3 Use case: Initiation of Assured Data Communication

#### 70.3.1 Pre-conditions

- 70.3.1.1 The initiating application is authorised to initiate the Assured Data Communication.
- 70.3.1.2 The receiving application(s) is authorised to use the Assured Data Communication.
- 70.3.1.3 This use case is available in both on-network and off-network conditions.

#### 70.3.2 Service flows

- 70.3.2.1 The initiating application or the FRMCS user requests Assured Data
  Communication to the receiving side. The QoS class of the communication is
  managed by the QoS class application. The data communication requests the QoS
  class which matches the application category of CRITICAL DATA or VERY
  CRITICAL DATA (see [QoS]) within the FRMCS system.
- 70.3.2.2 The FRMCS system establishes the Assured Data Communication with a setup time specified as NORMAL (see [QoS]) between the initiating and receiving application.
- 70.3.2.3 The indication mode (positive or negative) is set according to the configuration requested by the initiating application.
- 70.3.2.4 The communication is recorded by the Data recording application.
- 70.3.2.5 The assured data communication is available in both on-network and off-network situation.

#### 70.3.3 Post-conditions

70.3.3.1 Information about that status of the data communication is available for the user.

## 70.3.4 Communication attributes

URS Ref.	Туре	Symmetry Up/Down	Distribution	Latency	Bandwidth	Reliability	Setup	Speed
8.10	Bi- directional Data	50/50	User-to- User/Multi- user	Normal	Low	High	Normal	Normal

# 70.3.5 Related URS application interfaces

70.3.5.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application			
5.20	Data recording and access			
8.3	Role management and presence			
8.6	Authorisation of data communication			
8.7	Authorisation of application			
8.8	QoS Class Negotiation			
8.12	Arbitration			

# 70.3.6 HMI related criteria

70.3.6.1 No criteria related to this use case: no human interaction is expected.

# 70.4 Use case: Stopping of Assured Data Communication

## 70.4.1 Description

- 70.4.1.1 The application is able to stop the assured data communication.
- 70.4.1.2 This use case is available in both on-network and off-network conditions.

## 70.4.2 Pre-conditions

70.4.2.1 There is an ongoing Assured Data Communication.

## 70.4.3 Service flows

70.4.3.1 The user(s) stops the application that initiated the Assured Data Communication.

#### 70.4.4 Post-conditions

70.4.4.1 The Assured Data Communication is stopped. Data communication may remain (unassured data communication).

#### 70.4.5 HMI related criteria

70.4.5.1 No criteria related to this use case: no human interaction is expected.

		1.1		A Company of the Comp	and the second second	and the second second second	2.4	OOLA D
70	<b>h</b>	LICA CACA:	CORVICO	Intorworking	and carvica	continuation	with	
<i>1</i> U		USE Case.	SCIVICE		and service	Continuation	VVILII	GOIVITI 1

70.5.1.1 No service interworking and service continuation with GSM-R is required.

# 71 Inviting-a-user related use cases

# 71.1 Introduction

In this chapter the use cases related to the function of inviting-a-use are defined. The following use cases are defined:

- Invite-a-user to a voice communication
- Receiving an invitation to a voice communication
- Accepting an invitation to a voice communication
- Rejecting an invitation to a voice communication
- Ignore an invitation to a voice communication
- Service interworking and service continuation with GSM-R

# 71.2 Use Case: Invite-a-user to a voice communication

## 71.2.1 Description

- 71.2.1.1 A user can invite another user to a new or an existing voice communication.
- 71.2.1.2 This use case is available in both on-network and off-network conditions.

#### 71.2.2 Pre-conditions

- 71.2.2.1 The inviting user might or might not be part of an already established voice communication of two or more users.
- 71.2.2.2 The recipient can be addressed by the functional identity, user identity, subscriber identity or phone number (including users of external/public networks).

# 71.2.3 Service flows

Inviting user

- 71.2.3.1 The user selects a user, or a group of users, to be invited from a list of users or by dialing.
- 71.2.3.2 If the selected user(s) is confirmed (by the system) to be able to receive the request, an inviting a user message is sent.

#### 71.2.4 Post-conditions

- 71.2.4.1 The inviting a user message has been sent.
- 71.2.4.2 The end user device is still part of an ongoing user-to-user or multi-user voice communication.

## 71.2.5 Communication attributes

URS Ref.	Туре	Symmetry Up/Down	Distribution	Latency	Bandwidth	Reliability	Setup	Speed
8.11	Uni- directional Data	50/50	User-to-User	Normal	Low	Normal	Normal	High

# 71.2.6 Related URS application interfaces

71.2.6.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application				
8.3	Role management and presence				
8.7	.7 Authorisation of application				
8.8	QoS Class Negotiation				
8.12	8.12 Arbitration				

# 71.2.7 HMI related criteria

71.2.7.1 None.

# 71.3 Use Case: Receiving an invitation to a voice communication

# 71.3.1 Description

- 71.3.1.1 A user will receive the invitation originated by another user.
- 71.3.1.2 This use case is available in both on-network and off-network conditions.

# 71.3.2 Pre-conditions

71.3.2.1 The user may be involved or not involved in voice communication.

# 71.3.3 Service flows

71.3.3.1 The incoming request is presented to the user by audible and visual notification.

## 71.3.4 Post-conditions

- 71.3.4.1 The inviting a user message has been presented to the recipient.
- 71.3.4.2 An ongoing voice communication is not affected.

## 71.3.5 HMI related criteria

71.3.5.1 None.

# 71.4 Use case: Accepting an invitation to a voice communication

## 71.4.1 Description

- 71.4.1.1 A user can accept the invitation sent by the inviting user.
- 71.4.1.2 This use case is available in both on-network and off-network conditions.

#### 71.4.2 Pre-conditions

71.4.2.1 The end user device has received an inviting-a-user message which is not yet expired.

#### 71.4.3 Service flows

Invited user not involved in a voice communication

- 71.4.3.1 The user indicates to the device that the invite is accepted.
- 71.4.3.2 The user device is connected to the ongoing voice communication related to the received invite.
- 71.4.3.3 Other users involved in the ongoing voice communication get a visible and audible notification that the invited user has been connected to the communication.

Invited user is involved in a voice communication

- 71.4.3.4 The user indicates to the device that it has accepting the invite.
- 71.4.3.5 The user is asked by the device what to do with the ongoing voice communication.

  Depending on the communication type and status, he can have the choice between some or all of these options:
  - a) Leave
- 71.4.3.6 The user device leaves the current voice communication and connects to the ongoing voice communication related to the received invite.
  - b) Terminate
- 71.4.3.7 The user device terminates the current voice communication and connects to the ongoing voice communication related to the received invite.
  - c) Merge
- 71.4.3.8 The FRMCS system merges the two ongoing voice communications into one single voice communication.
- 71.4.3.9 Other users involved in the ongoing voice communication get a visible and audible notification that the invited user has been connected to the communication or that the communication has been merged.

#### 71.4.4 Post-conditions

- 71.4.4.1 The invited user is participating in the ongoing voice communication related to the received invite.
- 71.4.4.2 The invited user is indicated as connected to the voice communication on the display of all involved user devices.
- 71.4.4.3 The presence status of the invited user is updated with the appropriate attributes.

#### 71.4.5 HMI related criteria

71.4.5.1 None.

# 71.5 Use case: Rejecting an invitation to a voice communication

## 71.5.1 Description

- 71.5.1.1 A user can reject the invitation sent by the inviting use.
- 71.5.1.2 This use case is available in both on-network and off-network conditions.

# 71.5.2 Pre-conditions

71.5.2.1 The end user device has received an inviting-a-user message which is not yet expired.

# 71.5.3 Service flows

- 71.5.3.1 The user indicates to the device he is rejecting the invite.
- 71.5.3.2 The user who sent the inviting-a-user message gets a visible and audible notification the request was rejected by user.

#### 71.5.4 Post-conditions

71.5.4.1 The invited user is not participating in the ongoing voice communication related to the received request.

## 71.5.5 HMI related criteria

71.5.5.1 None.

# 71.6 Use case: Ignore an invitation to a voice communication

## 71.6.1 Description

- 71.6.1.1 A user can ignore the invitation sent by the inviting user.
- 71.6.1.2 This use case is available in both on-network and off-network conditions.

#### 71.6.2 Pre-conditions

71.6.2.1 The end user device has received an inviting-a-user message which is not yet expired.

#### 71.6.3 Service flows

- 71.6.3.1 The user gives no answer to the device concerning the received inviting-a-user message.
- 71.6.3.2 After timer expiration the audible notification of the inviting-a-user message is no more played by device.
- 71.6.3.3 After timer expiration the visible notification of the inviting-a-user message is no more displayed by device and the invite is rejected.
- 71.6.3.4 The user who sent the inviting-a-user message gets a visible and audible notification the request was rejected by timeout.

#### 71.6.4 Post-conditions

71.6.4.1 The invited user is not participating in the ongoing voice communication related to the received request.

#### 71.6.5 HMI related criteria

71.6.5.1 None.

- 71.7 Use case: Service interworking and service continuation with GSM-R
- 71.7.1 Description
- 71.7.1.1 For migration purposes the service interworking and service continuation between the GSM-R system and FRMCS system for inviting a user needs to be defined.
- 71.7.1.2 Interworking use case is needed for alerting a controller functionality (the case that there is a group call in GSM-R and a user would like to invite a controller who is in FRMCS. V.v. also applies. Only applies if the controller system is only connected to one system. If the controller system is connected to both FRMCS and GSM-R there is no need).
- 71.7.1.3 This use case only applies to end user devices supporting both FRMCS and GSM-R systems.
- 71.7.2 Pre-conditions
- 71.7.2.1 None.
- 71.7.3 Service flows

Group call in GSM-R and controller in FRMCS

- 71.7.3.1 There is a need to be able to invite a controller located in FRMCS Group call in FRMCS and controller in GSM-R
- 71.7.3.2 There is a need to be able to invite a controller located in GSM-R
- 71.7.4 Post-conditions
- 71.7.4.1 None.
- 71.7.5 Related URS application interfaces
- 71.7.5.1 None.
- 71.7.6 HMI related criteria
- 71.7.6.1 None.

# 72 Arbitration related use cases

# 72.1 Introduction

In this chapter the use cases related to arbitration are defined. The following use cases are defined:

- Arbitration
- Service interworking and service continuation with GSM-R

# 72.2 Use case: Arbitration

# 72.2.1 Description

- 72.2.1.1 The system is able to perform arbitration, based on the context of the communication. Arbitration means that the system is able to determine the behaviour of the end user device in case of multiple competing communications and/or in case the addressed user is logged into more than one device.
- 72.2.1.2 The FRMCS system allows the user of a device to interact with several applications with a minimum of interactions (e.g. it is not always required to put an application in background to interact with another application).
- 72.2.1.3 In the case the available input/output resources (e.g. when all the "widgets" boxes of the display are already used by applications), the FRMCS system has to determine based on Arbitration application which one(s) must be put in background.
- 72.2.1.4 This use case is available in both on-network and off-network conditions.

#### 72.2.2 Pre-conditions

- 72.2.2.1 The system is authorised to perform arbitration on communication on the end user device.
- 72.2.2.2 Some input/output resources are available for the user device.

# 72.2.3 Service flows

Incoming communication

- 72.2.3.1 When the communication is received by the end user device(s), the FRMCS system determines the arbitration rule to apply based on the type of applications, on the type of the addressed device(s) and on the functional identities.
- 72.2.3.2 Depending on the applicable arbitration rule, the arbitration application handles the incoming and/or the ongoing communication in the following way on the addressed device(s):
  - Automatically present/accept, reject, put on hold or queue the incoming and/or the ongoing communication
  - Present the options to the user to accept, reject, put on hold or queue the incoming and/or the ongoing communication to the end user
  - Present the option to the user to takeover ongoing communication(s) from another device where the user has logged in to.
  - The involved users are informed about result of the arbitration

Outgoing communication

- 72.2.3.3 When the user is initiating a new communication, the FRMCS system determines the arbitration rule to apply based on the type of applications, on the type of the end user device and on the functional identities.
- 72.2.3.4 Depending on the applicable arbitration rule, the arbitration application handles the outgoing and/or the ongoing communication in one of the following ways:
  - Automatically establish the outgoing communication and terminate, put on hold or keep the ongoing communication
  - Prohibit the establishment of the outgoing communication.
  - The involved users are informed about result of the arbitration

## 72.2.4 Post-conditions

- 72.2.4.1 Allocation of the input/output resources to the applications simultaneously active on a user device is performed in a way that complies with the rules applied by the Arbitration application.
- 72.2.4.2 The communication is either established—with at least one of the addressed devices—or not established.

#### 72.2.5 Communication attributes

URS Ref.	Туре	Symmetry Up/Down	Distribution	Latency	Bandwidth	Reliability	Setup	Speed
8.12	Bi- directional data	50/50	User-to-User	Normal	Low	High	N/A	High

# 72.2.6 Related URS application interfaces

72.2.6.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application
8.7	Authorisation of application

# 72.2.7 HMI related criteria

72.2.7.1 The interaction between the user and the simultaneous active applications is performed with the minimum of interaction.

- 72.3 Use case: service interworking and service continuation with GSM-R
- 72.3.1 Description
- 72.3.1.1 For migration purposes the service interworking and service continuation between the GSM-R system and FRMCS system for QoS class negotiation and arbitration needs to be clear.
- 72.3.1.2 Depending on the migration scenario a user can be attached to the FRMCS system, to the GSM-R system or both.
- 72.3.1.3 For user-to-user/Multi-user communication the QoS/arbitration information between FRMCS and GSM-R needs to be exchanged.
- 72.3.1.4 This use case only applies to end user devices supporting both FRMCS and GSM-R systems.
- 72.3.2 Post-conditions
- 72.3.2.1 None.
- 72.3.3 Service flows
- 72.3.3.1 For user-to-user/Multi-user communication in the direction from GSM-R to FRMCS the GSM-R priority needs to be exchanged. Mapping of GSM-R priority to FRMCS QoS and arbitration information is performed in the FRMCS system.
- 72.3.3.2 For user-to-user/Multi-user communication in the direction from FRMCS to GSM-R the QoS and arbitration information is mapped to GSM-R priority by the FRMCS system, and needs to be exchanged.
- 72.3.4 Post-conditions
- 72.3.4.1 None.

# 73 Voice communication transfer related use cases

#### 73.1 Introduction

In this chapter the use cases related to the transfer of incoming or ongoing voice communication are defined. The following use cases are defined:

- Transfer of an incoming communication
- Transfer of an ongoing communication
- Activation of automatic transfer of an incoming communication
- Changing the configuration of automatic transfer of an incoming communication
- Deactivation of automatic transfer of an incoming communication
- · Service interworking and service continuation with GSM-R

# 73.2 Use case: Transfer of an incoming communication

# 73.2.1 Description

- 73.2.1.1 When a user receives a communication, and the end user device does not automatically accept the communication, the user, if entitled, is able to transfer the communication to another user, in the phase of alerting.
- 73.2.1.2 The transfer of an incoming communication functionality is applicable for both user-to-user and multi-user voice communication.

# 73.2.2 Pre-conditions

73.2.2.1 The user is or is not part of an ongoing communication.

# 73.2.3 Service flows

- 73.2.3.1 When the incomming communication is received by the end users device, an option is presented to the user allowing the transfer of the incomming communication to another user.
- 73.2.3.2 After initiating the transfer procedure, the user selects the new recipient out of a list (e.g. telephone book) or entered manually.
- 73.2.3.3 The arbitration is managed by the arbitration application.

# 73.2.4 Post-conditions

73.2.4.1 The communication is transferred to the new recipient.

#### 73.2.5 Communication attributes

URS Ref.	Туре	Symmetry Up/Down	Distribution	Latency	Bandwidth	Reliability	Setup	Speed
	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A

# 73.2.6 Related URS application interfaces

73.2.6.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application
8.7	Authorisation of application

# 73.2.7 HMI related criteria

73.2.7.1 None.

- 73.3 Use case: Transfer of an ongoing communication
- 73.3.1 Description
- 73.3.1.1 When a user is part of an ongoing communication, the user, if entitled, is able to transfer that call to another user.
- 73.3.1.2 The transfer of an outgoing communication functionality is applicable for both user-to-user and multi-user voice communication.
- 73.3.2 Pre-conditions
- 73.3.2.1 The user is part of an ongoing communication.
- 73.3.3 Service flows
- 73.3.3.1 Whilst in an ongoing communication, the end users device provides an option to the user allowing the transfer of the current communication to another user.
- 73.3.3.2 After initiating the transfer procedure, the user selects the new recipient out of a list (e.g. telephone book) or entered manually.
- 73.3.4 Post-conditions
- 73.3.4.1 The communication is transferred to the new recipient.
- 73.3.5 HMI related criteria
- 73.3.5.1 None.

# 73.4 Use case: Activation of automatic transfer of an incoming communication

# 73.4.1 Description

- 73.4.1.1 The user, if entitled, is able to set redirection of incoming calls to a predefined recipient.
- 73.4.1.2 The activation of automatic transfer of an incoming communication functionality is applicable for both user-to-user and multi-user voice communication.

#### 73.4.2 Pre-conditions

73.4.2.1 None.

## 73.4.3 Service flows

- 73.4.3.1 The settings for the automatic transfer function are bound to the user identity and/or functional identity and not bound to the end user device.
- 73.4.3.2 The user selects the alternative recipient out of a list (e.g. telephone book) or entered manually.
- 73.4.3.3 Based on configuration, or set by the user, communication can be added to the automatic transfer function. Examples are:
  - Transfer all communciation, for which transfer is allowed;
  - Transfer if user not reachable;
  - Transfer if user is part of an ongoing communication;
  - Transfer if user is part of an ongoing communication and transfer applies after a configurable time;
  - Transfer if user is not answering and transfer applies after a configurable time.
- 73.4.3.4 The user activates the automatic transfer function.

#### 73.4.4 Post-conditions

73.4.4.1 The automatic transfer function is active.

# 73.4.5 HMI related criteria

73.4.5.1 None.

# 73.5 Use case: Changing the configuration of automatic transfer of an incoming communication

# 73.5.1 Description

- 73.5.1.1 The user, if entitled, is able to change the configuration of the automatic transfer function.
- 73.5.1.2 The changing of the configuration of automatic transfer of an incoming communication functionality is applicable for both user-to-user and multi-user voice communication.
- 73.5.2 Pre-conditions
- 73.5.2.1 Automatic transfer mode is active.
- 73.5.3 Service flows
- 73.5.3.1 The user is able to change the configuration of the automatic transfer function (like recipient, cause, time values).
- 73.5.4 Post-conditions
- 73.5.4.1 The alternative recipient has been changed.
- 73.5.4.2 The automatic transfer function is still active.
- 73.5.5 HMI related criteria
- 73.5.5.1 None.

- 73.6 Use case: Deactivation of automatic transfer of an incoming communication
- 73.6.1 Description
- 73.6.1.1 The user, if entitled, is able to deactivate the automatic transfer function.
- 73.6.1.2 The deactivation of automatic transfer of an incoming communication functionality is applicable for both user-to-user and multi-user voice communication.
- 73.6.2 Pre-conditions
- 73.6.2.1 Automatic transfer function is active.
- 73.6.3 Service flows
- 73.6.3.1 The user deactivates the automatic transfer function.
- 73.6.4 Post-conditions
- 73.6.4.1 The automatic transfer function is deactivated.
- 73.6.5 HMI related criteria
- 73.6.5.1 None.

# 73.7 Use case: service interworking and service continuation with GSM-R

73.7.1.1 Service interworking and service continuation for the automatic transfer function is not required. The recipient of a transferred communication can be a GSM-R user.

# 74 Applications Manager

# 74.1 Introduction

Based on this assumptions the following use cases are defined:

- Release and configuration management
- · Service interworking and service continuation with GSM-R

# 74.2 Use case: Release and configuration management

# 74.2.1 Description

74.2.1.1 In order to assure that the users are at any time provided with the applications and setting required to perform the railway operations, the FRMCS system implements a reliable configuration and release management of the applications.

## 74.2.2 Pre-conditions

74.2.2.1 The applications manager software module is authorised to perform the download/upload from an applications repository, the installation or update, the configuration and the enabling of the application embedded on a user device.

# 74.2.3 Service flows

Installation of an application

- 74.2.3.1 A user and/or the applications manager is able to request the installation/update of an application on a user device.
- 74.2.3.2 The FRMCS system can trigger the installation of an application on a user device based on:
  - Identity of the user logged into the user device and/or:
  - Functional identity of the equipment and/or;
  - Functional identities registered by the user and/or;
  - Location of the user device and/or;
  - Selected network identity and/or;
  - A timeframe.
- 74.2.3.3 Upon this request/trigger, the software required on the user device to enable the application is downloaded from a software repository.
- 74.2.3.4 The installation starts after user approval or automatically based on some preconditions (e.g. the user device is switched on but no user logged in). The software required on the user device is then installed and automatically configured in order to cope with the available resources on the user device.
- 74.2.3.5 The FRMCS system is triggering the update of the software installed on the user devices in order to always provide the latest released version of each application (auto-update).

Enabling/Disabling of an application

- 74.2.3.6 The FRMCS system is enabling/disabling the application on the user device based on:
  - Identity of the user logged into the user device and/or;

- Functional identities registered by the user and/or;
- Location of the user device and/or;
- Selected network identity and/or;
- A timeframe.
- 74.2.3.7 When an application is enabled on the user device, the user is able to activate the application depending on his operational needs (e.g. the SBB shunting application is enabled when the user device is connected to SBB FRMCS network and then the user activates this application when he needs to perform shunting operations).

# 74.2.4 Post-conditions

74.2.4.1 The correct version of the applications required to allow a user to perform the railway operations are enabled on his user device.

# 74.2.5 HMI related criteria

74.2.5.1 The configuration and release management is performed by the FRMCS system in the most transparent way for the users. The interaction required for downloading, installation and configuration of the applications is reduced to the minimum. However, the user is able to identify univocally the version of each application.

# 74.3 Use case: service interworking and service continuation with GSM-R

74.3.1.1 No service interworking and service continuation with GSM-R is required.

÷

# 75 Billing information related use cases

# 75.1 Introduction

In this chapter the use cases related to billing are defined. The following use cases are defined:

- Obtaining billing information
- · Service interworking and service continuation with GSM-R

# 75.2 Use case: Obtaining billing information

# 75.2.1 Description

- 75.2.1.1 The network operator may have the obligation or the desire to charge users of the FRMCS system or to use billing information for statistical reasons.
- 75.2.1.2 An entitled user is able to obtain information for any type of on-network communication from the FRMCS system, in order to be able to generate bills.

#### 75.2.2 Pre-conditions

75.2.2.1 An entitled user is logged on to the FRMCS system.

#### 75.2.3 Service flows

- 75.2.3.1 The entitled user requests billing information for one user or a group of users.
- 75.2.3.2 The entitled user is able to select defined criterias (timeframe, incoming, outgoing, numbers, etc.) to get more detailed results.
- 75.2.3.3 The entitled user is able to configure the FRMCS system to generate the billing information once or periodically.

#### 75.2.4 Post-conditions

75.2.4.1 The requested billing information is generated.

# 75.2.5 Communication attributes

URS Ref.	Туре	Symmetry Up/Down	Distribution	Latency	Bandwidth	Reliability	Setup	Speed
10.1	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A

# 75.2.6 Related URS application interfaces

75.2.6.1 This section provides information relating to the relationships that exist between this use case and other applications specified in the URS.

Ref	Title of related application
8.7	Authorisation of application

# 75.2.7 HMI related criteria

75.2.7.1 The request for billing information is achieved with the minimum of interaction.

	_	1.1		A CONTRACT OF THE SECOND	The second second	4.0	111 0014 0
15	٠.٦	TICA CACA!	CARVICA	INTORWORKING	and carvica	COntinuation	$M/Iff$ ( $=$ $\leq$ $N/I$ $\approx$
75		USE Case.	SCIVICE	IIILEI WOLKIIIG	and service	continuation	WILLI GOIVI-LI

75.3.1.1 No service interworking and service continuation with GSM-R is required.

# 76 References

**[URS]** FRMCS User Requirements Specification v2.0

[QoS] System principle use case Quality of Service, see FRMCS AT-1408

# Appendix A – URS vs Use case matrix

URS Ref.	Application	Use	Туре	Chapter in this document
5.1	On-train outgoing voice communication from the train driver towards the controller(s) of the train	Critical	Comms	6
5.2	On-train incoming voice communication from the controller towards a train driver	Critical	Comms	7
5.3	Multi-Train voice communication for drivers including ground user(s)	Critical	Comms	8
5.4	Banking voice communication	Critical	Comms	9
5.5	Trackside Maintenance Voice communication	Critical	Comms	10
5.6	Shunting Voice Communication	Critical	Comms	11
5.7	Public emergency call	Critical	Comms	12
5.8	Ground to ground voice communication	Critical	Comms	13
5.9	Automatic Train Control communication	Critical	Comms	14
5.10	Automatic Train Operation communication	Critical	Comms	15
5.11	Data communication for Possession Management	Critical	Comms	16
5.12	Trackside Maintenance Warning System communication	Critical	Comms	17
5.13	Remote control of Engines	Critical	Comms	18
5.14	Monitoring and control of critical infrastructure	Critical	Comms	19
5.15	Railway Emergency Communication	Critical	Comms	20
5.16	On-train safety device to ground communication	Critical	Comms	21
5.17	Public train emergency communication	Critical	Comms	22
5.18	Working alone	Critical	Comms	23
5.19	Voice recording and access	Critical	Comms	24
5.20	Data recording and Access	Critical	Comms	25
5.21	Shunting data communication	Critical	Comms	26
5.22	Train integrity monitoring data communication	Critical	Comms	27
5.23	Public emergency warning	Critical	Comms	28
5.24	On-train outgoing voice communication from train staff towards a ground user	Critical	Comms	29
5.25	On-train incoming voice communication from a ground user towards train staff	Critical	Comms	30
5.26	Railway staff emergency communication	Critical	Comms	31
5.27	Critical real time video	Critical	Comms	32

URS Ref.	Application	Use	Туре	Chapter in this document
5.28	Critical Advisory Messaging services- safety related	Critical	Comms	33
5.29	Virtual coupling data communication	Critical	Comms	34
5.30	On-train wireless backbone communications	Critical	Comms	35
5.31	Train parking protection	Critical	Comms	36
6.1	Deleted			
6.2	Deleted			
6.3	Multi-Train voice communication for drivers excluding ground user(s)	Performance	Comms	37
6.4	On-train voice communication	Performance	Comms	38
6.5	Lineside telephony	Performance	Comms	39
6.6	On-train voice communication towards passengers (Public Address)	Performance	Comms	40
6.7	Station Public Address	Performance	Comms	41
6.8	Communication at stations and depots	Performance	Comms	42
6.9	On-Train Telemetry communications	Performance	Comms	43
6.10	Infrastructure Telemetry communications	Performance	Comms	44
6.11	On-train remote equipment control	Performance	Comms	45
6.12	Monitoring and Control of Non-Critical Infrastructure	Performance	Comms	46
6.13	Non critical real time video	Performance	Comms	47
6.14	Wireless on-train data communication for train staff	Performance	Comms	48
6.15	Wireless internet for railway staff on platforms	Performance	Comms	49
6.16	Deleted			
6.17	Train driver advisory train performance	Performance	Comms	50
6.18	Train Departure data communications	Performance	Comms	51
6.19	Messaging Services	Performance	Comms	52
6.20	Transfer of data	Performance	Comms	53
6.21	Record and broadcast	Performance	Comms	54
6.22	Transfer of CCTV archives	Performance	Comms	55
6.23	Real time video call	Performance	Comms	56
6.24	Augmented reality data communication	Performance	Comms	57
7.1	Information Help Point for public	Business	Comms	58
7.2	Emergency Help Point for public	Business	Comms	59
7.3	Wireless internet on-train for passengers	Business	Comms	60
7.4	Wireless internet for passengers on platforms	Business	Comms	61
8.1	Assured voice communication	Critical	Support	62
8.2	Multi user talker control	Critical	Support	63

URS Ref.	Application	Use	Туре	Chapter in this document
8.3	Role management and presence	Critical	Support	64
8.4	Location services	Critical	Support	65
8.5	Authorisation of voice communication	Critical	Support	66
8.6	Authorisation of data communication	Critical	Support	66
8.7	Authorisation of application	Critical	Support	67
8.8	QoS class negotiation	Critical	Support	68
8.9	Safety application key management communication	Critical	Support	69
8.10	Assured data communication	Critical	Support	70
8.11	Inviting-a-user messaging	Critical	Support	71
8.12	Arbitration	Critical	Support	72
10.1	Billing information	Business	Support	75

# Appendix B – use cases where off-network use is required

As a definition all use cases in FU-7110 shall work in the on-network case unless otherwise specified. In the FU-7110 document per use case it is defined if the functionality is required in off network environment.

Definition: off-network functionality is required in the cases where no network coverage or network services are available, either due to network failure (like coverage, capacity, etc.) (be it dedicated or public) or due to lack of coverage (remote area's). In some applications, off-network functionality may be the intended way of communication for that specific use case.

To further detail this, in column D of this sheet use cases that are most likely to be used in off-network situation (remote area's) are marked. In addition, in column E, the applications that may make use of off-network communication in all situations for some specific use cases are marked as "YES?" to indicate that they can potentially be configured as default to use always offnet for these use cases, but the decision is to be taken by the network operator.

URS ref	URS Use case	Off network required?	Individual use cases that shall be supported in off network	Default off- network use case	Frequency of use
-	Generic preconditions	No		No	Low
-	Device Power on and shut-down related use cases	Yes	Offnet is required in use cases 5.2 & 5.3	No	Low
5.1	On-train outgoing voice communication from the train driver towards the controller(s) of the train	No		No	Low
5.2	On-train incoming voice communication from the controller towards a train driver	No		No	Low
5.3	Multi-Train voice communication for drivers including ground user(s)	No		No	Low
5.4	Banking voice communication	Yes	Offnet is required in use cases 9.3 & 9.7	No	Low
5.5	Trackside Maintenance Voice communication	Yes	Offnet is required in use cases 10.2 & 10.3 & 10.4	No	Low
5.6	Shunting Voice Communication	Yes	Offnet is required in use cases 11.2 & 11.3 & 11.4 & 11.5 & 11.6	No	Low
5.7	Public emergency call	No		No	Low
5.8	Ground to ground voice communication	No		No	Low
5.9	Automatic Train Control communication	Yes		No	Low
5.10	Automatic Train Operation communication	Yes	Offnet is required in use cases 15.3 and 15.4.	No	Low
5.11	Data communication for Possession Management	No		No	Low

URS ref	URS Use case	Off network required?	Individual use cases that shall be supported in off network	Default off- network use case	Frequency of use
5.12	Trackside Maintenance Warning System communication	Yes	Offnet is required in use cases 17.3 & 17.4	No	Low
5.13	Remote control of Engines Communication	Yes	Offnet is required in use cases 18.3 & 18.4	Yes?	Low
5.14	Monitoring and control of critical infrastructure	No		No	Low
5.15	Railway Emergency Communication	No		No	Low
5.16	On-train safety device to ground data communication	No		No	Low
5.17	Public train emergency communication	No		No	Low
5.18	Working alone	No		No	Low
5.19	Voice recording and access to the recorded data	Yes	Offnet is required in use cases 24.2	No	Low
5.20	Data recording and Access	Yes	Offnet is required in use cases 25.2	No	Low
5.21	Shunting data communication	Yes	Offnet is required in use cases 26.2 & 26.3 & 26.4	No	Low
5.22	Train integrity monitoring data communication	Yes	Offnet is required in use cases 27.3 and 27.4	Yes?	Low
5.23	Public emergency warning	No		No	Low
5.24	On-train outgoing voice communication from train staff towards a ground user	No		No	Low
5.25	On-train incoming voice communication from a ground user towards train staff	No		No	Low
5.26	Railway staff emergency communication	No		No	Low
5.27	Critical real time video	Yes	Offnet is required in use cases 32.2 & 32.3	No	Low
5.28	Critical Advisory messaging services - safety related	No		No	Low
5.29	Virtual Coupling data communication	Yes	Offnet is required in use cases 34.3 & 34.4	Yes?	Low
5.30	On-train wireless backbone communications	Yes	Offnet is required in use cases 35.2 & 35.3	Yes?	Low
5.31	Train parking protection	No		No	Low
6.1	Deleted	-		No	Low
6.2	Deleted	-		No	Low
6.3	Multi-Train voice communication for drivers excluding ground user(s)	No		No	Low

URS ref	URS Use case	Off network required?	Individual use cases that shall be supported in off network	Default off- network use case	Frequency of use
6.4	On-train voice communication	Yes	Offnet is required in use cases 38.2 & 38.3 & 38.4 & 38.5	No	Low
6.5	Lineside telephony	No		No	Low
6.6	On-train voice communication towards passengers (Public Address)	Yes	Offnet is required in use cases 40.2 & 40.3	No	Low
6.7	Station Public Address	No		No	Low
6.8	Communication at stations and depots	Yes	Offnet is required in use cases 42.2 & 42.3 & 42.4 & 42.5	No	Low
6.9	On-Train Telemetry communications	Yes	Offnet is required in use cases 43.2 & 43.3	No	Low
6.10	Infrastructure Telemetry communications	No		No	Low
6.11	On-train remote equipment control	Yes	Offnet is required in use cases 45.2 & 45.3	No	Low
6.12	Monitoring and Control of Non- Critical Infrastructure	No		No	Low
6.13	Non-critical real time video	No		No	Low
6.14	Wireless on-train data communication for train staff	No		No	Low
6.15	Wireless internet for railway staff on platforms	No		No	Low
6.16	Deleted			No	Low
6.17	Train driver advisory -train performance	No		No	Low
6.18	Train Departure related communications	Yes	Offnet is required in use cases 51.2 & 51.3	No	Low
6.19	Messaging Services	No		No	Low
6.20	Transfer of data	No		No	Low
6.21	Record and broadcast	No		No	Low
6.22	Transfer of CCTV archives	No		No	Low
6.23	Real time video call	No		No	Low
6.24	Augmented reality data communication	No		No	Low
7.1	Information Help Point for public	No		No	Low
7.2	Emergency Help Point for public	No		No	Low
7.3	Wireless internet on-train for passengers	No		No	Low
7.4	Wireless internet for passengers on platforms	No		No	Low

URS ref	URS Use case	Off network required?	Individual use cases that shall be supported in off network	Default off- network use case	Frequency of use
8.1	Assured voice communication	Yes	Offnet is required in use cases 62.2 & 62.3 & 62.4 & 62.5	No	Low
8.2	Multi user talker control	Yes	Offnet is required in all use cases.	No	Low
8.3	Role management and presence	No		No	Low
8.4	Location services	No		No	Low
8.5	Authorisation of voice communication	Yes	Offnet is required in use case 66.2.	No	Low
8.6	Deleted			No	Low
8.7	Authorisation of application	Yes	Offnet is required in use case 67.2. Default profile is used in offnet.	No	Low
8.8	QoS class negotiation	No		No	Low
8.9	Safety application key management communication	No		No	Low
8.10	Assured data communication	Yes	Offnet is required in use cases 70.3 & 70.4	No	Low
8.11	Inviting-a-user messaging	Yes	Offnet is required in use cases 71.2 & 71.3 & 71.4 & 71.5 & 71.6.	No	Low
8.12	Arbitration	Yes	Offnet is required in use cases 72.2.	No	Low
10.1	Billing information	No		No	Low

# Part 2:

# **Future Railway Mobile Communication System**

**System Principle use cases** 

**Document History** 

Version	Date	Details
1.0.0	14.02.2019	Doc approved by ATWG
0.0.9	23.10.2018	Use Cases added
0.0.8	27.06.2018	Use Cases updated
0.0.7	19.06.2018	Use Cases updated
0.0.6	11.05.2018	Use Cases updated
0.0.5	23.04.2018	Use Cases added
0.0.4	20.12.2017	Format changes
0.0.3	20.12.2017	Change History added
0.0.2	22.11.2017	Use Cases added
0.0.1	10.11.2017	First draft

0	Definitions and abbreviations	461
1	Use Case: Interworking between GSM-R and FRMCS	464
2	Use Case: Bearer Flexibility	471
3	Use Case: QoS in a Railway Environment	477
4	Use Case: Positioning Accuracy	489
5	Use Case: FRMCS System Security Framework	493
6	Use Case: Interworking to External Networks	497
7	Use Case: On-/Off-Net Communication	501
8	Use Case: Allocation and isolation of FRMCS communication ressources	507
9	Use Case: FRMCS Equipment capabilities for multiple FRMCS Users	510
10	Use Case: FRMCS System/FRMCS User roaming capabilities	512
11	Use Case: Availability increasing measures	517
12	Use Case: Flexible Use of the Frequency Spectrum	519

# 0 Definitions and Abbreviations

# **Change History**

24.10.2018 Import from 3GPP TR 22.889 V16.4.0 Ch. 3 Definitions, and abbreviations

# 0.1 Definitions

For the purposes of the present document, the terms and definitions given in 3GPP TR 21.905 [1] and the following apply. A term defined in the present document takes precedence over the definition of the same term, if any, in 3GPP TR 21.905.

**Balise:** An electronic beacon or transponder placed between the rails of a railway as part of an automatic train control or operation (ATC/ATO) system.

**Business communication applications:** communication applications that support the railway business operation in general, such as wireless internet, etc.

**Controller (Train Controller):** A Ground FRMCS User provided with special capabilities by the FRMCS System.

**Driver (Train Driver):** A Mobile FRMCS User provided with special capabilities by the FRMCS System.

**External System(s):** A general category of stationary FRMCS Users. For example, External Systems could be systems monitoring for trains passing a red light to initiate a railway emergency call.

**FRMCS Application:** The application on a 3GPP UE offering railway specific communication services to the FRMCS User by making use of the communication capabilities offer by the 3GPP UE and the 3GPP network.

FRMCS Equipment Identity: The identity by which a FRMCS equipment can be addressed.

**FRMCS Equipment Type**: Indicates the purpose the FRMCS equipment is being used for, FRMCS equipment of different equipment type do have different capabilities.

**FRMCS Equipment:** The FRMCS Equipment consists of a 3GPP UE and a FRMCS Application residing on it. It may be combined with legacy railway communication equipment (e.g. GSM-R or TRS)

**FRMCS Functional Identity:** The identity related to a user or related to the equipment, as specified in 9.3 "Role management and presence" indicating its special Role (e.g. as Driver of a specific train, usually a train number) can be addressed.

**FRMCS Network**: this is a sub-part of the FRMCS System.

**FRMCS Roaming**: The ability for a FRMCS User to make use of FRMCS Applications in a Visited (FRMCS) Network.

**FRMCS System:** The system providing railway specific communication constituted of the FRMCS Equipment, the 3GPP transport and the application servers in the network. Legacy networks are not included in the FRMCS System.

**FRMCS User Identity:** The identity by which a FRMCS User can be addressed.

**FRMCS User:** A human user or a machine making use of the railway specific communication. FRMCS Users can be connected via 3GPP RAT, wired connectivity or other radio technology

**Ground FRMCS User:** A general category of FRMCS Users that are predominantly stationary. Mostly they are connected via wired connectivity but may be using also wireless in certain conditions.

**Home FRMCS Network**: The Home FRMCS Network is the network in which the FRMCS User is engaged in a subscription.

**Mobile FRMCS User:** A general category of FRMCS Users that are mobile. Thus they are connected via wireless connectivity all the time.

**Performance communication applications:** applications that help to improve the performance of the railway operation, such as train departure, telemetry, etc.

**Radio Block Centre:** A train sends its position and speed information periodically to RBC. The RBC uses the received information to decide movement authority of the train.

**Rail Infrastructure Manager**: A company that owns or manages rail infrastructure; within this document the Rail Infrastructure Manager owns, adminstrates and operates the FRMCS Network.

**Railways Undertaking**: A company that offers train freight or passenger transportation services, making use of FRMCS network for their operational communication needs that is operated by a Rail Infrastructure Manager.

**Role (Functional Role):** The function a FRMCS User or a FRMCS Equipment is currently performing. Examples of Roles are Driver, Controller or shunting staff, etc. This is indicated by the FRMCS Functional Identity.

**Shunting:** manoeuvring trains in order to change their location or composition.

**Trackside staff:** Staff working as trackside maintenance and/or shunting members

**Trainborne equipment:** FRMCS Equipment which is physically embedded in train

**Visited (FRMCS) Network**: A Visited (FRMCS) Network can be either another FRMCS Network than the Home FRMCS Network, or a Public Land Mobile Network (PLMN).

# 0.2 Abbreviations

For the purposes of the present document, the abbreviations given in 3GPP TR 21.905 [1] and the following apply.

An abbreviation defined in the present document takes precedence over the definition of the same abbreviation, if any, in 3GPP TR 21.905.

ATC Automatic Train Control
ATO Automatic Train Operation
AVC Assured Voice Communication

DoS Denial of Service

GNSS Global Navigation Satellite System

LMR Land Mobile Radio

MACN Multi Access Core Network

NA Naming Authority

OATP On-board Automatic Train Protection

PSAP Public Safety Answering Point

RBC Radio Block Centre

REC Railway Emergency Communication

TRS Trunked Radio System

WATP Wayside Automatic Train Protection

# 1 Use Case: Interworking between GSM-R and FRMCS

Change History					
19.01.2018	Update from FW-AT 1405 V0.1.1				
22.11.2017	Import from FW-AT 1405 V0.1.0 SP Use Case Interworking between GSM-R and FRMCS				
11.05.2018	Import from 3GPP TR 22.889 V16.2.0 (2018-03), Ch.12.2-12.5 and Ch. 12.8				
23.10.2018	Update from 3GPP TR 22.889 V16.4.0 (2018-09), Ch. 12.2-12.5 and Ch. 12.8				

# 1.1 Area Broadcast Group Communication interworking between GSM-R and FRMCS Users

# 1.1.1 Description

This use case describes an area broadcast group communication between FRMCS User(s) and GSM-R User(s), and vice versa.

#### 1.1.2 Pre-condition

FRMCS User A and GSM-R User B and User C are authorized Users to perform group communication together by the FRMCS System.

User A and User B and User C are in the same group communication area defined by the FRMCS System.

#### 1.1.3 Service flow

# FRMCS System to GSM-R

FRMCS User A initiates a new area broadcast group communication (based on location, presence etc, of GSM-R User B and C).

FRMCS User A broadcasts group communication invitations to all Users in the same area.

GSM-R User B and User C receive the group communication invitations.

GSM-R User B and User C accept the invitation and join the group communication. Or GSM-R User B and User C automatically join this group communication.

# **GSM-R to FRMCS**

GSM-R User B initiates a new group call (based on location, presence etc., of FRMCS User A and GSM-R User C).

GSM-R User B broadcasts group call invitations to all Users in the same area.

FRMCS User A and GSM-R User C receive the group call invitations.

FRMCS User A and GSM-R User C accept the invitation and join the group call. Or FRMCS User A and GSM-R User C automatically join this group call.

#### 1.1.4 Post-condition

FRMCS User A, GSM-R User B and User C can communicate among each other in a group call.

# 1.1.5 Potential requirements

Reference Number	Requirement text	Application / Transport	SA1 spec covering	Comments
[12.2-001]	FRMCS System shall provide a means to initiate group communication between FRMCS Users and GSM-R Users.	A	Not covered	Transport of the interconnection is needed, but not considered in this use case
[12.2-002]	FRMCS System shall provide means to FRMCS Users to join the group calls of GSM-R	A	Not covered	Transport of the interconnection is needed, but not considered in this use case

# 1.2 Location Service interworking between GSM-R and FRMCS Users

# 1.2.1 Description

This use case allows FRMCS System and GSM-R system to obtain and share the location information of their users.

### 1.2.2 Pre-condition

User A is an authorized FRMCS User.

User B is an authorized GSM-R User.

User A and User B are affiliated to a group that consists of FRMCS User(s) and GSM-R User(s).

# 1.2.3 Service flow

# FRMCS System to GSM-R

FRMCS User A sends a location request to the specific GSM-R User B.

GSM-R User B accepts and return his location information as requested.

# GSM-R to FRMCS System

GSM-R User B sends a location request to the specific FRMCS User A.

FRMCS User A accepts and returns his location information as requested.

#### 1.2.4 Post-condition

FRMCS User A's location information is sent to GSM-R User B.

GSM-R User B's location information is sent to FRMCS User A.

# 1.2.5 Potential requirements

Reference Number	Requirement text	Application / Transport	SA1 spec covering	Comments
[12.3-001]	FRMCS System shall provide a means to obtain and share with FRMCS User the location information of GSM-R User(s).	A	Not covered	Transport of the interconnection is needed, but not considered in this use case
[12.3-002]	FRMCS System shall provide means to provide location information of FRMCS User to GSM-R.	A	Not covered	Transport of the interconnection is needed, but not considered in this use case

FRMCS User

# 1.3 Presence interworking between GSM-R and FRMCS Users

# 1.3.1 Description

This use case allows FRMCS User(s) to see the status of GSM-R user(s), and vice versa. For example, FRMCS User(s) can see the status of a GSM-R user, including user ID, states (available, busy, etc.), vice versa.

# 1.3.2 Pre-condition

User A is an authorized FRMCS User.

User B is an authorized GSM-R Users.

GSM-R system detects the change status of GSM-R User B

FRMCS System detects the change status of FRMCS User A

# 1.3.3 Service flow

# FRMCS System to GSM-R

FRMCS System receives the GSM-R User B's changed status.

FRMCS System sends the changed status to FRMCS User A.

# GSM-R to FRMCS System

GSM-R receives the User A's changed status.

GSM-R sends the changed status to User B

# 1.3.4 Post-condition

The changed status of GSM-R User B is presented in FRMCS User A.

The changed status of FRMCS User A is presented in GSM-R User B.

# 1.3.5 Potential requirements

Reference Number	Requirement text	Application / Transport	SA1 spec covering	Comments
[12.4-001]	FRMCS System shall provide a means for an FRMCS User to present the presence status of GSM-R User, including user ID, states (e.g., available, busy, etc.), etc.	A	Not covered	Transport of the interconnection is needed, but not considered in this use case
[12.4-002]	FRMCS System shall provide a means to share the presence status of FRMCS User(s) to GSM-R, including user ID, states (e.g., available, busy, etc.), etc.	A	Not covered	Transport of the interconnection is needed, but not considered in this use case

# 1.4 Point to Point communication between GSM-R and FRMCS Users

# 1.4.1 Description

This use case allows a FRMCS User to communicate with a GSM-R User, vice versa.

# 1.4.2 Pre-condition

User A is an authorized FRMCS User.

User B is an authorized GSM-R Users.

# 1.4.3 Service flow

# FRMCS System to GSM-R

FRMCS User A initiates a point to point communication to GSM-R User B.

GSM-R User B accepts the communication and joins the communication.

# **GSM-R to FRMCS System**

GSM-R User B initiates a point to point call to FRMCS User A.

FRMCS User A accepts the call and joins the call.

# 1.4.4 Post-condition

GSM-R User B and FRMCS User A are communicating with each other.

# 1.4.5 Potential requirements

Reference Number	Requirement text	Application / Transport	SA1 spec covering	Comments
[12.5-001]	FRMCS System shall provide a means for point to point communication between an authorized FRMCS User and a GSM-R User,	A	Not covered	Transport of the interconnection is needed, but not considered in this use case

**FRMCS System** 

# 1.5 Interworking between GSM-R and FRMCS

# 1.5.1 Introduction

GSM-R is the widely used wireless communication system of the railways. It provides the bearer service for current critical and supportive railway applications. The deployment of FRMCS and the migration to FRMCS is expected to encompass a large timeframe estimated currently at 10 years. During this period, coexistence and interworking of both communication systems is required. Interworking between the FRMCS System and GSM-R system shall be provided.

Interworking on functional level e.g. numbering plan alignment is not part of this use case.

1.5.2 GSM-R system and FRMCS System interconnection – Circuit Switched communication

#### 1.5.2.1 Description

# **Background:**

Circuit switched bearer services are used in GSM-R for voice and data communication. That encompasses user-to-user as well as multiuser voice communication.

# **Description:**

FRMCS and the GSM-R will coexist for a period estimated currently at 10 years that demands an interconnection for circuit switched bearer services to cover voice. It requires the necessary circuit switched transport adaptation, the necessary conversion of the signalling and the user data coding among the systems.

#### 1.5.2.2 Pre-conditions

GSM-R user is attached to the GSM-R system.

FRMCS Users is attached to the FRMCS System.

## 1.5.2.3 Service flows

GSM-R user establishes a user-to-user voice communication to a FRMCS-user.

GSM-R user establishes a multiuser communication including FRMCS-users.

FRMCS User establishes a user-to-user voice communication to a GSM-R user.

FRMCS User establishes a multiuser voice communication including GSM-R users.

#### 1.5.2.4 Post-conditions

User-to-user voice communication between GSM-R user and FRMCS-user are established.

Multiuser voice communication between GSM-R user and FRMCS-users are established.

# 1.5.2.5 Potential requirements and gap analysis

Reference Number	Requirement text	Application / Transport	SA1 spec covering	Comments
[R-12.8.2-001]	FRMCS-system to GSM-R circuit switched signalling and bearer service shall be supported for user-to-user and multiuser voice communication.	A/T		[Needs analysis]
[R-12.8.2-002]	FRMCS System shall support the current voice codecs used by GSM-R.	A/T		[Needs analysis]
[R-12.8.2-003]	The FRMCS System shall be able to support interworking of GSM-R MLPP based call priorities to the priority mechanisms of the FRMCS System.	Α		[Need analysis]
[R-12.8.2-004]	The FRMCS System shall be able to support interworking between the arbitration scheme used in GSM-R and the arbitration scheme used in the FRMCS System.	Α		[Need analysis]

# 1.5.3 GSM-R system and FRMCS System interconnection – Packet Switched communication

#### 1.5.3.1 Description

Packet switched bearer services i.e. GPRS/EGPRS are used in GSM-R for data communication e.g. ATC. FRMCS and the GSM-R will coexist for a period estimated currently at 10 years that demands an interconnection for packet switched based communication. It requires the necessary packet switched transport adaptation to FRMCS, the conversion of the signalling and the user data coding among the systems.

# 1.5.3.2 Pre-conditions

GSM-R user is attached to the GSM-R system.

FRMCS Users are attached to the FRMCS System.

#### 1.5.3.3 Service flows

GSM-R user establishes a user-to-user packet switched communication to a FRMCS-user.

FRMCS User establishes a user-to-user packet switched communication to a GSM-R user.

#### 1.5.3.4 Post-conditions

Packet Switched communication among GSM-R user and FRMCS-user are established.

# 1.5.3.5 Potential requirements and gap analysis

Reference Number	Requirement text	Application / Transport	SA1 spec covering	Comments
[R-12.8.3-001]	FRMCS-system to GSM-R packet switched interconnection shall be supported.	A/T		[Needs analysis]

# 1.5.4 GSM-R system and FRMCS System interconnection – SMS Interworking

# 1.5.4.1 Description

SMS has been widely used in GSM-R.

FRMCS and GSM-R will coexist for some period. So, interworking between the FRMCS System and Short Message Service in GSM-R is needed.

A possible scenario is that a GSM-R user sends a short message to a FRMSC User to transfer some information.

## 1.5.4.2 Pre-conditions

GSM-R user is attached to the GSM-R system.

FRMCS User is attached to the FRMCS system.

## 1.5.4.3 Service Flows

A GSM-R user sends a short message to a FRMSC User to transfer some information.

#### 1.5.4.4 Post-conditions

The FRMCS User can communicate with the GSM-R user.

# 1.5.4.5 Potential requirements and gap analysis

Reference Number	Requirement text	Application / Transport	SA1 spec covering	Comments
[R-12.8.4-001]	The FRMCS System shall be able to interwork with the Short Message Service in GSM-R.	A	Not covered.	

# 2 Use Case: Bearer Flexibility

	Change History					
22.11.2017	Import from RT(17)065059r1_Change_Request_TR_22_889_version_15_0_0_chap_12_b earer_flex					
11.05.2018	Update from 3GPP TR 22.889 V16.2.0 (2018-03), Ch.12.9 Use Case: Bearer flexibility					
23.10.2018	Update from 3GPP TR 22.889 V16.4.0 (2018-09), Ch. 12.9 Use Case: Bearer Flexibility					

# 2.1 Description

FRMCS envisages bearer flexibility to allow a certain level of independence between Railway Applications and the underlying transport system. FRMCS includes wireless and wireline access. It comprises multiple access systems and shall support various voice and data applications.

The rationale behind these requirements is that the lifecycle of railway applications is in general much longer than the lifecycle of telecommunication access/transport systems. Moreover, bearer flexibility aims at improving service availability and performance.

The characteristics of bearer flexibility are:

- 1. A Railway Application may use one or several access systems as appropriate.
- Connection of FRMCS Equipment to different access systems is dynamic (i.e. the most appropriate 3GPP or non-3GPP access technologies are selected automatically, potentially using multiple access technologies for one or more Railway Applications).
- 3. The set of access systems chosen meets the defined QoS and the service requirements e.g. FRMCS User mobility and connectivity which are necessary to guarantee the functionality.
- 4. The introduction of a new access system should not negatively impact existing Railway Applications.

The approach taken within FRMCS allows the integration of 3GPP and non-3GPP radio access evolution.

IP is used as a generic interface towards Railway Applications, facilitating connectivity, quality of service control, security and the separation of transport system and applications. NOTE: Non-3GPP access can consist of non-terrestrial e.g. Satellite as well as of terrestrial access systems.

#### 2.2 Pre-conditions

The Railway Adaptation Sub-System as part of the FRMCS System is embedded between the Railway Applications and the Multi Access Core Network (MACN) and enables the access system independence towards those applications. This Sub-System adapts application characteristics to the access systems. It manages e.g. QoS, address conversion, functional roles and train location information.

The MACN has the ability to manage and interwork with wireless access systems (i.e. 3GPP and non-3GPP) as well as with wireline access systems. It encompasses for example the management of FRMCS User mobility, FRMCS User session/communication handling and control of end-to-end communication prioritisation. The MACN interworks with legacy communication systems and other FRMCS Systems.

The Access Control & Management function of the FRMCS Equipment is able to manage the different access systems as well as access via GSM-R (for roaming and simultaneous operation).

#### 2.3 Service flows

#### Case 1 (data communication)

As an example the Automatic Train Control (ATC) application of a train establishes a data communication session with the applicable ground communication entity which is connected via the fixed network service. For ATC message exchange, the on-board system can encompass a railway operated private 3GPP 4G access system and a public 3GPP 5G access system (e.g. a VPN service) as part of the FRMCS System. ATC periodically reports train position information and receives Control Command instructions from the ground communication entity. The FRMCS Equipment is registered to both access systems and uses these simultaneously if applicable.

Simultaneous use of radio access systems may improve communication resilience, availability, and QoS and increases bandwidth.

The concept as described here can generally be extended to other data communication applications and (non-)3GPP access systems.

#### Case 2 (voice railway emergency communication)

The on-board FRMCS Users are registered to the FRMCS System. An on-board FRMCS User establishes a Railway Emergency Communication (REC) from a specific location in the FRMCS network. This particular communication request takes into account the most appropriate radio access system, for example the railway-operated private 3GPP network. The FRMCS System notifies the applicable users determined by the location of the initiator of the communication by using all available access system(s) e.g. 3GPP (public and private), WLAN or wireline. The applicable Controller is notified via the wireline access system. The intended recipients of the call may be using different access systems.

The concept as described here can in general be extended to other voice group communication applications and point to point communication services.

#### Case 3 (telemetry operation at a railway depot)

A train is located in a railway depot where only WLAN coverage (non-3GPP access) as part of the FRMCS System is provided. FRMCS Users of this train are attached to the FRMCS System. An FRMCS User starts a data session towards the applicable vehicle diagnostic entity. At that point in time WLAN provides the radio access system for this telemetry communication. Once the train leaves the depot and enters into a 3GPP coverage area, the FRMCS Equipment adapts the transmission of the telemetry data session to the most QoS effective radio access system (3GPP access). The telemetry session continues uninterrupted when the train changes its location.

The concept as described here can in general be extended to other voice and data applications where other combinations of access systems at specific locations are possible.

## Case 4 (Backup operation/resilience)

In a certain area with dedicated 3GPP access, coverage fails. Despite unavailability of the dedicated railway 3GPP access, FRMCS Users have the capability to continue communications by using public 3GPP access using an access system which may support the required or some degraded form of QoS and which is provided in the area and which serves as a backup or complementary system. Communication applications on trains continue to operate, service continuity is preserved. When the functionality of the dedicated 3GPP access system is restored, the FRMCS Equipment resumes operation on that system.

The concept as described here can generally be extended to any combination of access systems, e.g. WLAN and private 3GPP access.

# Case 5 (Notification of radio bearer availability)

In general, there is only little radio spectrum resources allocated to railways in most regions. These should be preferably used for operational rail communication purposes. In parallel, there are communications that require broadband wireless communication services. The availability of broadband wireless access can be limited e.g. to railway stations. Thus, the FRMCS System is able to take into account radio bearer availability at the FRMCS User's position allowing to start communication such as a file download/upload not harming operational rail communication.

#### **Case 6 (Use of Satellite Communication)**

In some regions, trains are circulating in rural areas, on low traffic lines. For such situation, deploying dedicated rail terrestrial radio access is not economically viable and public mobile operator's service is very limited due to low population density rate. Satellite access is foreseen as an alternative to terrestrial radio access that reduces investment in access infrastructure. In this first approach, satellite access is considered as an enabler to extend communication service of rail lines with FRMCS.

Some rail applications require service continuity for railways operation. In some situation, rail traffic is stopped when communication services are not available. To overcome situations of temporary outage or total destruction of terrestrial access, use of non-terrestrial access systems by the FRMCS system could be envisaged to deliver a highly resilient transport service. In this second approach, satellite access is foreseen as a backup from terrestrial radio access.

It is envisaged that the FRMCS application could be configured with preconditions that trigger an alternate mode of operation.

## 2.4 Post-conditions

#### Case 1 (data communication)

The train controlled by ATC arrives on time without service interruptions of the communication .

# Case 2 (voice railway emergency communication)

Railway emergency voice communication is established to all FRMCS-users in the designated area independent of the used access network.

# Case 3 (telemetry operation at a railway depot)

Telemetry communication continued while relocating the train/vehicle.

# Case 4 (Backup operation/resilience)

Communication continued when the private 3GPP access is unavailable in an area.

# Case 5 (Notification of radio bearer availability)

none

# **Case 6 (Use of Satellite Communication)**

Communication continued when the 3GPP terrestrial radio access coverage is physically not provided in an area.

Communication continued when the 3GPP terrestrial radio access is temporarily not available in an area.

# 2.5 Potential requirements and gap analysis

Reference Number	Requirement text	Application / Transport	SA1 spec covering	Comments
[R-12.9-001]	The FRMCS System shall be able to manage 3GPP access systems and non-3GPP access systems (terrestrial and non-terrestrial) simultaneously.	A/T	TS 22.278 TS 22.261	TS 22.278 sub-clause 5.0 TS 22.261 sub-clause 6.3.2.1
[R-12.9-002]	If provided by the FRMCS Equipment, the FRMCS Application on the FRMCS Equipment shall be able to make use of 3GPP and non-3GPP access systems simultaneously.	A	TS 22.278 TS 22.261	TS 22.278 sub-clause 6.2 TS 22.261 sub-clause 6.3.2.1
[R-12.9-003]	The FRMCS User shall not experience service interruptions in the usage of applications due to a change of an access system.	A	TS 22.278 TS 22.261	TS 22.278 sub-clause 5.0 TS 22.261 sub-clause 6.2.3 broader functional spectrum
[R-12.9-004]	The FRMCS transport system including 3GPP and non-3GPP access shall be agnostic to Railway Applications.	Т	TS 22.278 TS 22.261	TS 22.278 sub-clause 5.0 TS 22.261 sub-clause 6.2.1/6.2.3 broader functional spectrum
[R-12.9-005]	New access technology shall not require changes for the pre-existing application layer to be able to make use of this new access technology.  Note: Changes are required if the application layer wants to make use of the new capabilities of a new access technology.	A/T	TS 22.261	TS 22.278 only partially compliant because of missing satellite access support
[R-12.9-006]	The transport layer shall allow using IP as a generic interface.	Т	TS 22.278 TS 22.261	TS 22.278 sub-clause 7.2 TS 22.261 sub-clause 5.1.2.3
[R-12.9-007]	For recording purposes, the FRMCS System shall be able to provide communication content as well as the associated communication related information.	A	TS 22.280 TS 22.278 TS 22.261	TS 22.280 sub-clause 6.15.4 TS 22.278 sub-clause 9.2 TS 22.261 sub-clause 8.6

[R-12.9-008]	The FRMCS System shall be able to make use of one or more of the followings: 3GPP radio access (i.e. 4G and/or 5G) through railway-dedicated licensed spectrum 3GPP radio access (i.e. 4G and/or 5G) provided by public providers 3GPP radio access (e.g. LTE-U) through unlicensed spectrum Non-3GPP radio access (e.g. IEEE 802.11 based	Т	TS 22.261	TS 22.278 reduced capabilities; partially encompasses only 4G access
	and/or satellite based) Wireline access Note 1: GSM-R, TETRA, and P25 are not considered as a radio access technology of FRMCS. Note 2: Not all of the radio access technologies may support all of the FRMCS requirements.			
[R-12.9-009]	The FRMCS System shall consider the availability of radio bearer services at the position of the FRMCS User to allow communication.	A	None	Requires an update of TS 22.289 or others.
[R-12.9-010]	The FRMCS System shall select appropriate radio bearer service with consideration of the FRMCS applications configurable preconditions (e.g. ranking of the available bearer services).	Т		[Need analysis]
[R-12.9-011]	The FRMCS System shall provide indication to FRMCS application on which bearer service is being used .	Т		[Need analysis]

Note: Session continuity between 3GPP access and non-3GPP access might lead to service disruption but the session does not require FRMCS Users intervention to recover.

# 3 Use Case: QoS in a Railway Environment

	Change History
22.11.2017	Import from FW-AT 1408 V0.1.0 SP Use Case QoS in railway environment
19.01.2018	Previous import from 22.11.2017 discarded.
	Import from Document S1-170034 from 3GPP TSG-SA WG1 Meeting #76-bis
11.05.2018	Import from 3GPP TR 22.889 V16.2.0 (2018-03), Ch.12.10 Use Case: QoS in a railway environment
23.10.2018	Update from 3GPP TR 22.889 V16.4.0 (2018-09), Ch.12.10 Use Case: QoS in a Railway Environment

#### 3.1 Introduction

This system principle use case provides the framework for Quality of Service within the FRMCS System including the railway applications. The main purpose is to specify the list of attributes applicable to the FRMCS bearer service.

Rail applications exhibit different characteristics, e.g., in terms of latency or bandwidth. On the other hand, the transport system offers bearer services with different properties.

In this context, two types of applications can be distinguished:

- 1. Applications that are aware of their service requirements and that are able to request those from the FRMCS transport system.
- 2. Applications that are not aware of their service requirements and that are therefore not able to request those.

Only On-Net communication is considered.

Railway applications require a QoS classification ranging from high to low as low is "best effort". The most important QoS parameters that determine the quality of the transport system are latency of the user data and reliability of the communication. In addition, guaranteed bandwidth assures the continuation of critical communication.

QoS impacts train punctuality and the entire utilisation of the track system. Therefore, the FRMCS System has to consider the various QoS requirements.

Apart from high train speed operation, which goes up to 500kmh<sup>-1</sup>, other fundamental factors affect wireless communication. Railways are facing various radio signal propagation conditions such as in free space and in tunnels. Free space encompasses various structural and constructional scenarios. Railway corridors in hilly terrain or forest aisle are some examples.

Radio propagation in large railway stations and shunting yards is different from the one of the main lines. Moving trains in stations or moving cargo wagons in shunting yards cause different propagation conditions.

Radio tower site-to-site distance requires special attention. This distance varies depending on the type of area (rural or urban) and is determined by the boundary conditions of the RF signal (e.g. frequency band and power budget). Railways clearly require to deploy FRMCS while keeping the same distance between the radio towers in order to reuse the infrastructure deployed for GSM-R.

Voice communication is commonly used during rail operation to give instructions to a driver of a locomotive in shunting operation, track maintenance etc. Rail environmental conditions like slowdown or movement of a train can impact the understandability of the voice. Radio propagation conditions in a rail environment are quite specific. For example train speed up to 500km/h or the insertion loss of the radio signal into a train. Staff has to work in the train, beside a train or under the train etc. while voice communication is ongoing. Such

Radio spectrum constraints in some regions require high efficiency in terms of radio bandwidth utilisation where voice communication coexists with other communication types simultaneously. The resulting voice codec has to consider these specific conditions.

# 3.2 Use case: Quality of Service and railway environment

conditions shall not lower the intelligibility of the voice.

#### 3.2.1 Description

The basis for this use case is the UIC FRMCS URS wherein communication attributes define the QoS to be achieved for the various kinds of railway applications. These attributes are not part of the functional use case description but relevant for the FRMCS System and therefore subject of this use case.

Regarding the URS communication attributes, not all attributes are covered in the QoS use case. The following items are considered:

- Type of communication
- Latency, the delay between action and reaction
- Session Reliability
- Setup of communication, the time to establish a voice or data communication session
- Talker assignment time in group communication
- Audio (Voice) Quality

For further details, refer to the corresponding use cases in chapters 5-9. In these chapters the QoS requirements are specified on functional level. A reference is used which refers to real values' in this QoS use case.

- 3.2.2 Pre-conditions
- 3.2.3 The pre-conditions of the functional use cases out of chapter 5 9 are applicable. Service flows

The service flows of the functional use cases out chapter 5 - 9 are applicable.

#### **Application categories**

Application categories describe the data transfer characteristic to be achieved by a bearer service. The FRMCS System shall consider the following user plane application categories:

**Voice** for user to user or multiuser communication; Voice follows the typical conversational pattern and requires low delay inside the transport system;

**Critical Voice** follows the voice conversational pattern but requires immediate session setup;

**Video** used for general observations purposes, e.g. maintenance;

Critical Video with indirect impact on train operation, e.g. passenger surveillance;

**Very Critical Video** with direct impact on safety- related critical train control and operation, e.g. used in driverless (e.g GoA3/GoA4) operation for automated detection of objects (no human in the loop) or video-based remote control (human in the loop).

**Very critical data** for future rail applications;

**Critical data** follows the response pattern and requires high reliable transport. This category comprises future and legacy applications e.g. ETCS;

**Non-Critical data** used for the exchange of railway system or communication relevant information; requires high reliable transmission and preservation of the response pattern;

**Messaging** for the exchange of non-critical short information messages, recorded voice (for example voicemail), data, pictures, video; requires reliable transmission;

# **Priority Level**

In order to reach the QoS applicable for each application category, transport priority levels are required to differentiate among the communication urgency. Priority handling of communication service encompasses the assignment of a priority to a communication and involves the seizing of resources, which are in use by a communication having a lower ranking in the absence of idle resources. Priority handling includes as well discontinuation of an ongoing communication having a lower priority to allow an incoming communication of higher priority. Priority handling needs to be provided to a FRMCS User for all communications.

Priorities are treated by the FRMCS User/Equipment in the FRMCS System based on the following conditions:

- The priority level depends on the FRMCS User initiating the communication.
- The communication can have the priority level selected by the FRMCS User at setup
  or the priority level is predefined at registration. The treatment of priority level also
  applies when the FRMCS User is registered to a visited FRMCS network.
- The definition of the priority level which may cause pre-emption of another ongoing communication needs to be stored and can be changed by the FRMCS User.
- The FRMCS System is able to allocate setup classes i.e. communication setup time requirements and resource pre-emption capabilities to each priority level.
- In case of resource pre-emption, the pre-empted FRMCS user needs to be provided with a suitable indication.
- The priority level can be selected by the FRMCs User on a per communication basis.

The FRMCS User may select any priority level up to the authorised priority level. The maximum priority level needs to be stored on the UICC. At communication setup, the FRMCS Equipment and the FRMCS System verify the priority level at setup against the maximum authorised priority level. If the FRMCS User has not selected a priority level at setup, the FRMCS System applies a FRMCS User specific default priority level. If the FRMCS User has selected at setup a priority level higher than the maximum authorised priority level, the maximum authorised priority level is applied for the communication.

#### **Service Attributes**

From FRMCS User point of view there are two main service attributes latency and communication reliability.

For the **Latency** two classifications are applicable:

Low User data delay harms the functioning of the application.

Normal User data delay does not harm the sequence and progress of the application.

From FRMCS System point of view, latency quantifies the end-to-end user data transport delay between the involved communication entities.

**Reliability** (in accordance to TS 22.261): the amount of sent network layer packets successfully delivered to a given node within the time constraint required by the targeted service, divided by the total number of sent network layer packets.

Two levels are to be taken into account:

High The packet loss at transport level is exceptional rare.

Normal The packet loss at transport level is seldom.

From the FRMCS System point of view, transport reliability quantifies the end-to-end packet loss (from one FRMCS Equipment to another FRMCS Equipment) between the involved communication entities.

To meet the different application characteristics e.g. conversational pattern, real-time or critical data further itemisation is necessary. The mapping of the service attributes latency and reliability among functional requirements and FRMCS System as well as their target values are summarised in Table 1-1.

Service Attribute	FRMCS - Functional Requirement	FRMCS – System Requirement	Service Attribute value
Latency	Low	Ultra-Low	≤10ms
		Low	≤100ms
	Normal	Normal	≤500ms
		Best Effort	>500ms
Transport reliability -	High	Ultra-Low	99.9999%
Packet Loss (%)		Low	99.9%
. ,	Normal	Normal	99%

Table 12.10-1 - Service attribute mapping

Some application categories are time stringent e.g. critical voice or critical data.

The range of latency and reliability requirements have a certain dependency on the speed of the trains. In general, the requirement is that the service attributes can be guaranteed up to 500kmh<sup>-1</sup>. Certain combinations of latency and reliability apply only to **Low Speed** (≤ 40kmh<sup>-1</sup>).

The applications are considered as real-time when the FRMCS functional requirement for the latency is specified as "Low" and "Ultra Low", according to table 12.10 1.

## **Session handling**

**Setup time** of a communication session is essential because of their safety related character. Communication session setup encompasses the value of the elapsed time between the communication establishment request and the indication of successful communication session establishment. The FRMCS User requires two classes:

**Immediate** The FRMCS-user requires immediate setup of the communication session. The duration of the immediate communication session establishment shall not exceed 1 second.

**Normal** Normal communication session setup time range does not harm the use of the application. The time duration of the normal communication session establishment shall not exceed 3 seconds.

**Talker assignment time** comprises the timeframe between talker request and the permission to talk applicable to group communication. This timeframe shall be lower than 300ms. Talker assignment time assumes that a group communication has been set up.

**Session Loss Rate (SLR)** indicates the number of sessions released unintentionally per accumulated session time. SLR shall be <10<sup>-2</sup>/h.

## **Communication and QoS assignment**

In order to provide the required level of communication quality, the FRMCS System will request the applicable resources as required for the communication service from the underlying 3GPP transport system and if appropriate also from non-3GPP transport systems. The transport resources are characterised by latency, reliability, guaranteed bitrate/non-guaranteed bitrate and communication service priority.

If no specific resources characteristics are required for a certain communication service, the FRMCS System is able to apply a predefined default.

Each communication service resource characteristic can be requested independently of the others.

As result of the request to the underlying transport system, the FRMCS System may offer different values than the ones requested but which fit to the categories summarised in Table 12.10-1.

The available radio spectrum in certain regions, for example in Europe is rather limited, therefore the FRMCS System might apply different resources for the same communication service in different regions to achieve a radio resource efficient use of the available bandwidth.

#### **Audio quality**

Voice intelligibility strongly depends on the audio bandwidth. FRMCS System has to consider for voice communication following minimum requirements:

- Encoding of speech encompass in minimum the range of 200-7000 Hz;
- The codec meets the local radio channel and capacity requirements of the FRMCS system;
- The coding of speech signals is robust to radio impairments sacrificing voice clarity;

## 3.2.4 Post-conditions

3.2.5 The post conditions of the functional use cases out of chapter 5 – 9 are applicable. Potential requirements and gap analysis

Reference Number	Requirement text	Application / Transport	SA1 spec covering	Comments
[R-12.10.2-001]	The FRMCS System shall be capable of providing different levels of QoS.	A/T		[Needs analysis]
[R-12.10.2-002]	The FRMCS-system service attributes shall be allocated unambiguously per application and/or per session and/or per FRMCS-user.	A/T		[Needs analysis]
[R-12.10.2-003]	The FRMCS System shall support the efficient use of the radio resources.	A/T		[Needs analysis]
[R-12.10.2-004]	The FRMCS System shall provide service attribute control on a peer to peer basis.	A/T		[Needs analysis]
[R-12.10.2-005]	The FRMCS System shall provide a mapping between application characteristics and the bearer service attributes.	A/T		[Needs analysis]
[R-12.10.2-006]	The FRMCS System shall be able to support different QoS for uplink and downlink of asymmetric bearers.	A/T		[Needs analysis]
[R-12.10.2-007]	The FRMCS System shall be able to modify service attributes during an active communication session.	A/T		[Needs analysis]

Reference Number	Requirement text	Application / Transport	SA1 spec covering	Comments
[R-12.10.2-008]	The FRMCS System shall detect and process the various user data traffic characteristics, latency and session reliability requirements. These requirements are summarised in Table 12.10-2.	A/T		[Needs analysis]
[R-12.10.2-009]	The FRMCS System shall support the applicable QoS requirements up to a train speed of 500kmh-1 at all locations along the track.	Т		[Needs analysis]
[R-12.10.2-010]	To prioritize among the application categories and their related QoS, the FRMCS System shall support 15 priority levels.	Т		[Needs analysis]
[R-12.10.2-011]	The FRMCS System shall be able to request resource characteristics (latency, reliability, guaranteed bitrate/ non-guaranteed bitrate and priority) from the underlying 3GPP transport system and if appropriate also from non-3GPP transport systems.	Т		[Needs analysis]
[R-12.10.2-012]	The FRMCS System shall be able to apply predefined default resource characteristics.	Т		[Needs analysis]
[R-12.10.2-013]	The FRMCS System shall be able to request each communication service resource characteristic independently of the others.	Т		[Needs analysis]

Reference Number	Requirement text	Application / Transport	SA1 spec covering	Comments
[R-12.10.2-014]	The FRMCS System shall be able to assess whether the communication service resource characteristics received from the underlying transport system are sufficient to support the communication service fully or in a restricted way.	T		[Needs analysis]
[R-12.10.2-015]	The FRMCS System shall be able to keep the communication priority independent from the QoS parameters latency, transport reliability, guaranteed/non-guaranteed bitrate.	Т		[Needs analysis]
[R-12.10.2-016]	The FRMCS System shall provide a radio resource efficient allocation of the communication bandwidth.	Т		[Needs analysis]
[R-12.10.2-017]	Talker assignment time, the timeframe between talker request and the permission to talk in a multi-user voice communication, shall be lower than 300ms.	A/T		[Needs analysis]
[R-12.10.2-018]	FRMCS system shall support at least encoding of speech signals between 200–7000 Hz.	A/T		[Needs analysis]
[R-12.10.2-019]	The FRMCS voice codec shall be robust to meet different radio channel impairments caused by the different working conditions in the train, beside or under the train.	A/T		[Needs analysis]
[R-12.10.2-020]	The encoding of speech signals in the FRMCS system shall be efficient to meet limited radio resource availability.	A/T		[Needs analysis]

Reference Number	Requirement text	Application / Transport	SA1 spec covering	Comments
[R-12.10.2-021]	Priority handling of communication service in the FRMCS System shall encompass the assignment of a priority to a communication and involves the seizing of resources, which are in use by a communication having a lower ranking in the absence of idle resources.	A/T		[Needs analysis]
[R-12.10.2-022]	Priority handling of the FRMCS System shall support discontinuation of an ongoing communication having a lower priority to allow an incoming communication of higher priority.	A/T		[Needs analysis]
[R-12.10.2-023]	The FRMCS System shall always consider the priority of the FRMCS User initiating the communication.	A		[Needs analysis]
[R-12.10.2-024]	The FRMCS System shall consider for a communication the priority level selected by the FRMCS User at setup or the priority level predefined at registration.	A		[Needs analysis]
[R-12.10.2-025]	The FRMCS System shall treat the communication priority levels when the FRMCS User is registered to a FRMCS network.	A		[Needs analysis]
[R-12.10.2-026]	The definition of the priority level which may cause preemption of another ongoing communication shall be stored and can be changed by the FRMCS User.	A		[Needs analysis]

Reference Number	Requirement text	Application / Transport	SA1 spec covering	Comments
[R-12.10.2-027]	The FRMCS System shall be able to allocate setup classes i.e. communication setup time requirements and resource pre-emption capabilities to each priority level.	A/T		[Needs analysis]
[R-12.10.2-027]	In case of resource pre- emption, the pre-empted FRMCS user shall be provided with a suitable indication.	A		[Needs analysis]
[R-12.10.2-029]	The priority level shall be selected by the FRMCS User on a per communication basis.	A/T		[Needs analysis]
[R-12.10.2-030]	The FRMCS User shall be able to select any priority level up to the authorised priority level. The maximum priority level shall be stored on the UICC.	A		[Needs analysis]
[R-12.10.2-031]	At communication setup, the FRMCS Equipment/UE and the FRMCS System shall verify the priority level at setup against the maximum authorised priority level.	A		[Needs analysis]
[R-12.10.2-032]	If the FRMCS User has not selected a priority level at setup, the FRMCS System shall apply a FRMCS User specific default priority level.	A		[Needs analysis]
[R-12.10.2-033]	If the FRMCS User has selected at setup a priority level higher than the maximum authorised priority level, the maximum authorised priority level shall be applied by the FRMCS System for the communication.	A		[Needs analysis]

Reference Number	Requirement text	Application / Transport	SA1 spec covering	Comments
[R-12.10.2-034]	The FRMCS system shall provide a mechanism to apply service requirements that are requested from an application.			
[R-12.10.2-035]	The FRMCS system shall provide a mechanism to derive the communication characteristics of an application and map those on a data flow with a predefined QoS profile.			
[R-12.10.2-036]	The FRMCS System shall provide a mechanism to derive the communication characteristics of an application and map those on a data flow with a predefined QoS profile.	Т		[Needs analysis]

Application categories and their related service attributes are grouped into specific QoS classe. Table 12.10-2 summarises the QoS classes and their applicable service attributes.

Application Service Attribute Category (according to Table 12.10-1)			Session establishment	Session Loss Rate	
	Latency peer to peer	Reliability			
Voice	Low	Normal	Normal	NA	
Critical Voice	Low	High	Immediate	NA	
Video	Normal	High	Normal	NA	
Critical Video	Low	High	Immediate	NA	
Very Critical Video	Ultra Low or Low Note 1	High	Normal	NA	
Critical Data (future applications)	Low	Ultra-High	Immediate	NA	
Very Critical Data	Ultra-Low or Low (Note 1)	Ultra- High	Immediate	NA	
Critical Data (legacy applications)	Normal	High	Normal	<10 <sup>-2</sup> /h	
Non-Critical data	Normal	High	Normal	NA	
Messaging	Best Effort	High	Normal	NA	

Table 12.10-2 - Service and Service Attribute requirements

# Railway specific conditions

- 1.) Following propagation conditions are to be considered:
  - Free space in general
  - Railway corridors in general and especially in hilly terrain
  - Forest Aisle
  - Underground / tunnel environment
  - Moving trains or objects in a railway station and shunting yards
- 2.) FRMCS System should be able to reuse the existing GSM-R sites. A non-exhaustive example list provides the typical site-to-site deployment scenarios:
  - Rural environment: between 5 7km.
  - Urban environment: <5km.</li>

# 4 Use Case: Positioning Accuracy

Change History			
20.12.2017	Import from RT(17)065030_FW-AT_1404_SP_Positioning_accuracy_0_1_2		
11.05.2018	Update from 3GPP TR 22.889 V16.2.0 (2018-03), Ch.12.14 Use Case:		
	FRMCS Positioning Accuracy		

## 4.1 Introduction


This system principle use case describes the positioning accuracy requirements to position a train, track side worker as well as other stationary and non-stationary object inside the track system. In general, positioning accuracy will become a major building block to increase the automation level of train operation. The main purpose is to specify the accuracy parameter values.

# 4.2 Use case: Quality of Service and railway environment

#### 4.2.1 Description

Today fixed mounted balise are used to derive the train position inside the track-system. This kind of train positioning is precise enough when the train is moving. Static conditions like in stations, push-pull train operation or the frequent change between static and dynamic conditions during shunting operation require hundreds of fixed mounted balise. Thus, a balise without stationary reference shall overcome this circumstance.

According to Figure 12.14-1, individual coaches, trains, track side worker get equipped which such devices that report continuously the process status towards the applicable control centre enriched with the actual position information.

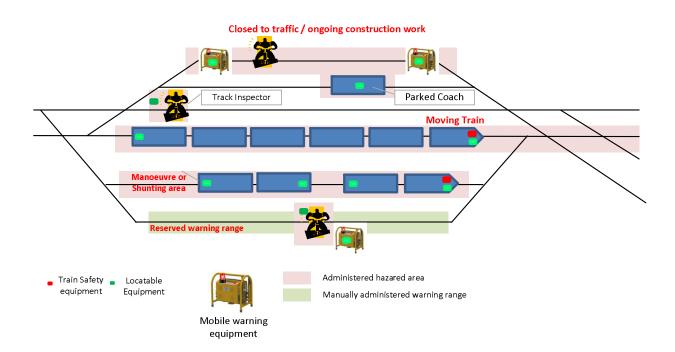

#### Figure 12.14-1 Positioning application areas

Tracks/lines or shunting areas are subdivided into autonomous hazard areas (red blocks see Figure 12.14-1). The continuous processing of positioning information allows the control centre to detect when hazard areas start to overlap. Based on the computed risk integral, the control centre is able to instruct the vehicles or trains in the concerned area to lower the speed up to a full stop.

To guarantee fail-safe operation in deriving the position of the vehicle, track-side worker etc., and independent positioning sources need to be provided. Beside inertial navigation, GNSS and others, the FRMCS System is required to be part of the positioning data acquisition process. This results from rather low predictable availability of satellite systems especially in mountain regions, multilevel railway station as well as in tunnels. In the worst case, "rough" positioning information only derived from the FRMCS – Land Mobile Network is present.

The combination of 3GPP radio access network and the train on-board system is able to support mechanisms that can be used to locate an entire train, stationary as well as non-stationary objects. Together with the positioning information of other sources (see Figure12.14-2) e.g. inertial navigation and GNSS, consolidated positioning information of the train/object will be computed that is able to fulfil higher accuracy of the positioning information. Train Onboard system as well as FRMCS location information system will receive the consolidated location positioning information for further processing by the train safety applications and/or FRMCS location information system.

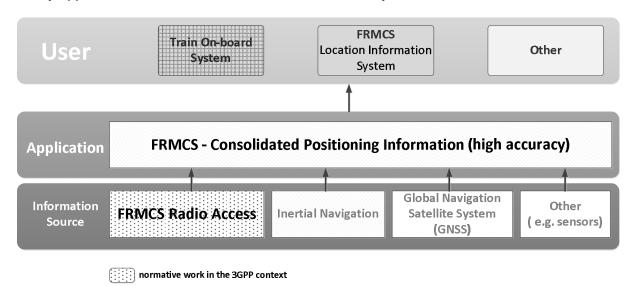


Figure 12.14-2 Consolidation of positioning source information

The subject described is applicable to other FRMCS functional use cases. The resulting positioning requirements in this use case are relevant for the FRMCS System.

#### 4.2.2 Pre-conditions

Railway line consist of station A, B and C. Station B is between station A and C.

FRMCS User 1 is used by an InterRegio train that stops in station A, B and C.

FRMCS User 2 is used by a high speed train that stops in station A and station C.

FRMCS User 3 is used on a parked train in station B.

FRMCS User 4 is used by mobile warning equipment located in station B.

Ground FRMCS User processes the received positioning information of the different train FRMCS Users for safety purposes.

FRMCS Users on the train (safety application) established the communication to the ground FRMCS User (safety application) that is responsible for train safety purposes on the line between the stations A and C including station B.

Base stations are covering the line between station A and station C. The structure of the base station along the line is linear. In some cases dual base stations per site can be used. The distance between adjacent base stations various between 1 and 10km.

Train speed profile ranges between 0 - 500km/h.

The base stations covering the line between station A and C are enhanced cellular base stations that are able to form a carrier grade positioning network.

#### 4.2.3 Service flows

Train FRMCS User 1 (safety application) as part of the InterRegio train approaches station B coming from station A.

Train FRMCS User 2 (safety application) as part of a high speed train passes station B coming from station C.

Train FRMCS User 3 (safety application) as part of the parked train in station B that continuous later.

Train FRMCS User as part of a mobile warning system protects a line section that is under construction.

All train FRMCS Users (safety application) periodically report their current position to the ground FRMCS User (safety application).

#### 4.2.4 Post-conditions

Every train approached his final destination.

No harm to the ongoing construction work in station B.

# 4.2.5 Potential requirements and gap analysis

Reference Number	Requirement text	Applicatio n /	SA1 spec covering	Comments
Number		Transport	Covering	
[R-12.14.2-001]	The consolidated positioning information i.e. the location information resulting from the combination of all positioning sources available to the FRMCS System shall support following absolute positioning accuracy based on the train speed at >= 90% of the occasions:  0 - 40km/h  Longitudinal: ≤1 m lateral: 1 - 3 m  Up to 120km/h  Longitudinal: ≤34m lateral: 1 - 3 m  Up to 160km/h  Longitudinal: ≤45m lateral: 1 - 3 m  Up to 320km/h  Longitudinal: ≤89m lateral: 1 - 3 m  Up to 500km/h  Longitudinal: ≤200m lateral: 1 - 3 m  See [9]	A/T		[Needs analysis]
[R-12.14.2-002]	FRMCS System shall be able to support an initial positioning fix time of ≤5s.	A/T		[Needs analysis]
[R-12.14.2-003]	To avoid large offsets between adjacent hazard areas due to limited track space in a railway station, FRMCS System shall be able to support a sampling interval between two positioning cycles of <1s.	A/T		[Needs analysis]
[R-12.14.2-004]	FRMCS Equipment power consumption due to the use of positioning capabilities shall be minimised.	A/T		[Needs analysis]

# 5 Use Case: FRMCS System Security Framework

# Change History Import from FW-AT 2306 V1.0.1 Attack definition

11.05.2018 Update from 3GPP TR 22.889 V16.2.0 (2018-03), Ch.12.15 Use Case: FRMCS System security framework

#### 5.1 Introduction

22.11.2017

The security framework protects the FRMCS System against attacks and threats, like misuse, Denial of Service (DoS), unauthorized access to services, interception, man-in-the-middle attacks, replay attacks and intended data modification. It encompasses the protection of security attributes confidentiality, privacy, integrity, availability and non-reputation.

# 5.2 Use case: FRMCS System security framework

# 5.2.1 Description

The security framework protects:

- Services provided by the FRMCS System;
- Bearer flexible access including 3GPP as well as non-3GPP access;
- Direct interaction between FRMCS Equipments;
- Interaction between the FRMCS end user devices and FRMCS network;
- Interaction between FRMCS network functions:
- Stored data within the FRMCS System;
- Interworking between a FRMCS System and another FRMCS System;
- Interworking between a FRMCS System and a legacy system.

#### 5.2.2 Pre-conditions

FRMCS System is in use.

#### 5.2.3 Service flows

FRMCS System security framework related service flows cover the following aspects:

- identity management;
- authentication:
- authorization;
- key management;
- data protection (regarding integrity, confidentiality, privacy, non-reputation);
- prevention of attacks;
- detection of attacks;
- reaction on detected attacks.

# 5.2.4 Post-conditions

The FRMCS System is protected.

# 5.2.5 Potential requirements and gap analysis

Reference Number	Requirement text	Application / Transport	SA1 spec covering	Comments
[R-12.15.2-001]	The FRMCS System security framework shall enable the use of unique identities.	A/T		[Needs analysis]
[R-12.15.2-002]	The FRMCS System security framework shall allow the grouping of identities.	A/T		[Needs analysis]
[R-12.15.2-003]	The FRMCS System security framework shall provide mechanisms to authenticate a unique identity.	A/T		[Needs analysis]
[R-12.15.2-004]	The FRMCS System security framework shall provide authentication mechanisms required for the secured interaction between FRMCS network functions.	A/T		[Needs analysis]
[R-12.15.2-005]	The FRMCS System security framework shall provide mechanisms to authorise communications and the use of applications.	A/T		[Needs analysis]
[R-12.15.2-006]	The FRMCS System security framework shall provide a management of identities, passwords and keys required for the protection of FRMCS User communication, the interaction between FRMCS network functions as well as subscribers and service related data.	A/T		[Needs analysis]
[R-12.15.2-007]	The FRMCS System security framework shall be able to block the use of any FRMCS Equipment when it is detected as being stolen or lost.	A/T		[Needs analysis]
[R-12.15.2-008]	The FRMCS System security framework shall be able to unblock the use any recovered stolen or lost FRMCS Equipment.	A/T		[Needs analysis]

	1	T	•
[R-12.15.2-009]	The FRMCS System	Т	[Needs analysis]
	security framework shall		
	protect the		
	services provided by the		
	FRMCS System;		
	bearer flexible access		
	including 3GPP as well as		
	non-3GPP access;		
	interaction between the		
	FRMCS end user devices		
	and FRMCS network;		
	interaction between		
	FRMCS network functions;		
	stored data within the		
	FRMCS System;		
	interworking between a		
	FRMCS System and		
	another FRMCS System;		
	•		
	Interworking between a		
	FRMCS System and a		
[D 10 15 0 010]	legacy system.	Т	[Need englysis]
[R-12.15.2-010]	The FRMCS System	1	[Need analysis]
	security framework shall		
	prevent software based		
	attacks which have an		
	impact on any of the		
	following security		
	attributes:		
	data confidentiality;		
	information privacy;		
	data integrity;		
	non-repudiation of data;		
	FRMCS System		
[D 40 45 0 044]	availability.		
[R-12.15.2-011]	The FRMCS System		
	security framework shall be		
	able to detect software		
	based attacks		
	which have an impact on		
	any of the following		
	security attributes:		
	·		
	data confidentiality;		
	information privacy;		
	data integrity;		
	non-repudiation of data		
	transfer;		
	FRMCS System		
	availability.		
	avaliability.		

[D 40 45 0 040]	The EDMOC Contents		
[R-12.15.2-012]	The FRMCS System		
	security framework shall be		
	able to react on detected		
	software based attacks:		
	which have an impact on		
	any of the following		
	security attributes:		
	data confidentiality;		
	information privacy;		
	data integrity;		
	non-repudiation of data		
	transfer;		
	FRMCS System		
	availability.		
[R-12.15.2-013]	The FRMCS System		
	security framework shall		
	provide procedures and		
	mechanisms for		
	management of FRMCS		
[D 10 15 0 014]	System security.		
[R-12.15.2-014]	The FRMCS System security framework shall be		
	able to track users' actions		
	such as usage of		
	communication services,		
	management operations,		
	configuration changes etc.		
[R-12.15.2-015]	The FRMCS System		
_	security framework shall be		
	able to store security		
	related data for post-		
	analysis, e.g. forensic.		

# 6 Use Case: Interworking to External Networks

Change History				
22.11.2017	Import from FW-AT 1410 V0.1.0 SP_Interworking to external networks			
11.05.2018	Update from 3GPP TR 22.889 V16.2.0 (2018-03), Ch.12.16 Use Case:			
	Interworking to external networks			

## 6.1 Introduction

This section describes the general interworking between FRMCS System, based on 3GPP transport and external communication/data networks.

# 6.2 Use case: FRMCS System external network interworking

#### 6.2.1 Description

Apart from the communication facilities within one FRMCS network, FRMCS User(s) require as well communication facilities to and from other external networks. Thus an FRMCS System has to provide various communication facilities between FRMCS User(s) and external network user(s).

The term "user" is hereby meant as either an individual or an application.

The necessary interworking to external networks is able to provide incoming and outgoing voice- and data bearer services.

The following are considered as external networks:

- Public Switched Telephone Network (PSTN)
- Private Telephone Network
- Private Mobile Radio (PMR)
- Public Land Mobile network (PLMN)
- Other GSM-R networks
- Other FRMCS networks
- Other Wireless Access
- Other packet data networks, e.g. Internet.

#### 6.2.2 Pre-conditions

The FRMCS User is attached to the FRMCS System.

The external network user is attached to the external network.

Authentication and authorization of the FRMCS User(s) and communications initiated by the FRMCS Users are managed within the FRMCS System.

The required Quality of Service is managed by the FRMCS System.

#### 6.2.3 Service flows

# Case 1 (Communication is to be established from FRMCS system towards an external network)

An entitled FRMCS User enters a destination address for establishment of a communication session. The destination address can be of the following formats:

- E.164 address
- Uniform Resource Identifier (URI) (e.g. SIP address, URL, e-mail address...)
- EIRENE functional number
- FRMCS Functional Identity
- FRMCS User Identity
- FRMCS subscriber identity

Based on the destination address, the FRMCS System performs the following:

- Detects the correct bearer type including characteristics
- Translates the destination address to a routable format
- Analyses if the destination is external to FRMCS System
- Selects an available interconnection for the bearer type. (Interconnection selection can be either a direct or indirect connection, e.g. gateway)
- Attempts to setup the communication session

# Case2 (Communication is to be established from an external network towards FRMCS system)

An external network user tries to establish a communication session towards an FRMCS User. The destination address can be of the following formats, depending of the capabilities of the external network:

- E.164 address
- Uniform Resource Identifier (URI) (e.g. SIP address, URL, e-mail address...)
- FRMCS Functional Identity (other FRMCS networks)
- FRMCS User Identity (other FRMCS networks)
- FRMCS subscriber identity (other FRMCS networks)

Based on the destination address, the FRMCS System does the following:

- Locates user(s) within the FRMCS System to detect possible roaming case
- Translates the destination address into a routable format
- Detects the correct bearer characteristics
- Establishes the communication session.

## 6.2.4 Post-conditions

# Case1

An FRMCS User is able to establish voice and/or data communication with intended user(s) in an external network.

## Case2

An external network user is able to establish voice and/or data communication with intended user(s) managed by the FRMCS System.

# 6.2.5 Potential requirements and gap analysis

Reference Number	Requirement text	Application / Transport	SA1 spec covering	Comments
[R-12.16.2-001]	The FRMCS System shall provide interconnection(s) for telephony services to/from external networks.	Т		[Needs analysis]
[R-12.16.2-002]	The FRMCS System shall provide Packet switched (PS) interconnection(s) to/from external networks.	Т		[Needs analysis]
[R-12.16.2-003]	The FRMCS System shall provide the necessary signalling and voice codec adaptation in the context of interworking with external networks.	Т		[Needs analysis]
[R-12.16.2-004]	The FRMCS System shall provide interworking for supplementary services related to the external network.	A		[Needs analysis]
[R-12.16.2-005]	The FRMCS System shall provide interworking communication with external networks in a secured way.	A/T		[Needs analysis]
[R-12.16.2-006]	The FRMCS System shall provide interworking communication with external networks with the required Quality of Service.	Т		[Needs analysis]
[R-12.16.2-007]	The FRMCS System shall be able to select interconnection based on multiple interconnections of the same type.	A/T		[Needs analysis]
[R-12.16.2-008]	The FRMCS System shall select the bearer characteristics based on exchanged signalling information.	Т		[Needs analysis]
[R-12.16.2-009]	The FRMCS System shall select the appropriate interconnection type, e.g. CS or PS based on the destination address of the target user.	Т		[Needs analysis]

# 7 Use Case: On-/Off-Net Communication

	Change History
22.11.2017	Import from FW-AT 1411 v0.1.0 SP UC On_Off_net communication
11.05.2018	Update from 3GPP TR 22.889 V16.2.0 (2018-03), Ch.12.17 Use Case:
	FRMCS On-network/Off-network communication

# 7.1 Introduction

Typical communication will involve the transport capabilities of the FRMCS network but some of the FRMCS communication scenarios require the use of Off-network bearer services. Also a combination of On-network and Off-network bearer services can increase the entire availability of the entire FRMCS transport system which is essential for railways especially in Automated Train Operation.

This results into three global FRMCS communications modes:

- On-network only communication
- Off-network only communication
- Combined On-network and Off-network communication.

Note: The different types of communication use cases related to On-network and/or Off-network are not treated by this section.

# 7.2 Use case: On-network/Off-network communication

## 7.2.1 Description

**On-network** only communication mode uses the bearer services that are provided by the FRMCS land mobile network. It relies on the flexible use of 3GPP and non 3GPP bearer services and allows user to user as well as multi-user communication.




Figure 12.17-1 FRMCS On-network communication mode

On-network communication is used for Mobile FRMCS User (onboard) to Ground FRMCS User (controller) communication.

**Off-network** only communication mode uses a dedicated radio bearer service for proximity communication which is supported by FRMCS Equipment. It relies on an appropriate 3GPP bearer service that allows user to user as well as multi-user communication without direct

involvement of FRMCS land mobile network. A relay function in Off-network communication mode can extend the range of the communication facilities. FRMCS Equipment may bridge a distance for proximity communications of up to 3km.

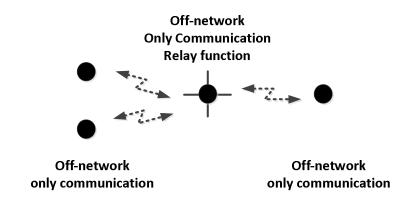


Figure 12.17-2: FRMCS Off-network communication mode

Off-network communication can be used for e.g. shunting or banking communication where not always a ground FRMCS User i.e. controller is necessary. Off-network communication provides also the backup if On-network communication is unavailable.

**Combined On-and Off-network** communication mode encompasses the parallel use of the FRMCS land mobile network and the radio bearer service for proximity communication. There are various sub-categories for this communication mode:

**Relay mode 1:** A FRMCS Equipment uses On-network and Off-network communication and constitutes an On- and Off-network relay function to other FRMCS Equipment's that are in Off-network only communication mode.

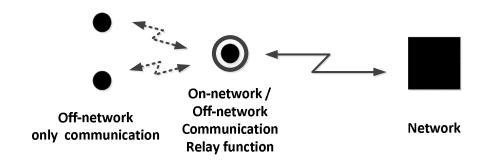


Figure 12.17-3: FRMCS On-network and Off-network communication mode - Relay mode 1

On-network and off network communication mode relay mode 1 bridge over the coupling loss for FRMCS Users in a train that do not have access to the roof antenna. Hence, relay mode 1 helps to overcome radio link issues in a train.

**Relay mode 2:** FRMCS equipment encompasses On-network and Off-network communication that enables Off-network bearer service for an Off-network only communication relay function.

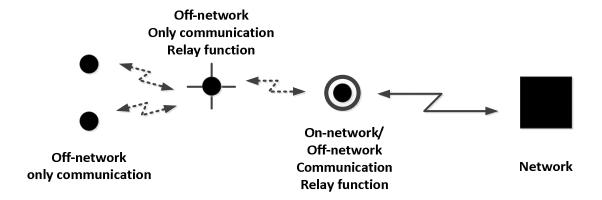


Figure 12.17-4: FRMCS On-network/Off-network communication mode - Relay mode 2

Relay mode 2 is an extension of relay mode 1 that allows e.g. the concatenation of maintenance teams during tunnel maintenance activities.

**Relay mode 3:** FRMCS Equipment encompasses On-network and Off-network communication. Each FRMCS Equipment is able to constitute an On-network and Off-network relay function. Interworking between one and several of such relay functions allows the use of multipath transport facilities for communication purposes.

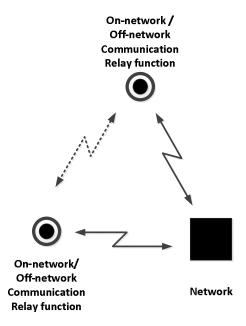


Figure 12.17-5: FRMCS On-network-and Off-network communication mode - Relay mode 3

Relay mode 3 allows multipath transport facilities for FRMCS Applications that require extreme high communication reliability e.g. control command signalling applications like ATC.

#### 7.2.2 Pre-conditions

#### On-network only communication

FRMCS Equipment is authorised to use On-network communication mode.

FRMCS Users are attached to the FRMCS System and is authorised to establish user to user and/or multi-user communication.

## Off-network only communication

FRMCS Equipment is authorised to use Off-network only communication mode. Some of the FRMCS Equipment's are authorised to establish an Off-network communication relay function.

The FRMCS Users are authorised to establish user to user and/or multi-user communication.

#### Combined On-network-and Off-network communication

The FRMCS Users are authorised to establish user to user and/or multi-user communication.

#### **Relay Mode 1**

The FRMCS Equipment that supports in On-network/Off-network relay communication mode is authorised to establish Off-network communication to other FRMCS Equipment's which are in Off-network only communication mode.

# **Relay Mode 2**

FRMCS Equipment that supports Off-network relay communication mode is authorised to establish a communication to other FRMCS Equipment's that are in Off-network communication mode. FRMCS Equipment that is in Off-network relay communication mode is authorised to establish an Off-network communication to an On-network and Off-network relay communication mode FRMCS Equipment.

#### **Relay Mode 3**

FRMCS Equipment's in On-network and Off-network communication mode are authorised to establish On- and Off-network communications.

#### 7.2.3 Service flows

FRMCS Users are involved in the different types of communication modes establishes user to user and/or multi-user communications.

#### On-network only communication

The FRMCS equipment establishes On-network only communication.

# Off-network only communication

The FRMCS Equipment in Off-network relay communication mode and the FRMCS Equipment's in Off-network communication mode establish the Off-network communication.

#### Combined On-network-and Off-network communication

#### Relay Mode 1

The FRMCS Equipment in On-network/Off-network communication mode establishes:

- an On-network communication
- Off-network communication to FRMCS Equipment's in Off-network only communication mode

# **Relay Mode 2**

The FRMCS Equipment in On-network and Off-network communication mode establishes:

- an On-network communication
- Off-network communication to a FRMCS Equipment in Off-network relay communication mode

The FRMCS equipment in Off-network relay communication mode establishes Offnetwork communication to FRMCS equipment's in Off-network only communication mode.

# **Relay Mode 3**

The FRMCS equipment's in On-network and Off-network communication mode establishes:

- an On-network communication
- Off-network communication to a FRMCS Equipment in On-network-and Off-network relay communication mode.

# 7.2.4 Post-conditions

# On-network only communication

User-to-user and/or multi-user communication is established.

# Off-network only communication

User-to-user and/or multi-user communication is established.

# Combined On-network/Off-network communication

User-to-user and/or multi-user communication is established that encompasses both communication modes.

# 7.2.5 Potential requirements and gap analysis

Reference Number		Application / Transport	SA1 spec covering	Comments
[R-12.17.2-001]	FRMCS security requirements according to chapter 12.15 shall apply to On-network and Off- network communication.	Т		[Needs analysis]
[R-12.17.2-002]	FRMCS QoS requirements (reference QoS section 12.10) shall apply to Onnetwork and Off-network communication.	Т		[Needs analysis]
[R-12.17.2-003]	FRMCS positioning accuracy requirements according to chapter 12.14 shall apply to On-network and Off-network communication.	A/T		[Needs analysis]
[R-12.17.2-004]	The FRMCS System requirements applicable for communication recording as specified in the recording and access application use cases shall apply to On-network and Off-network communication.	A/T		[Needs analysis]
[R-12.17.2-005]	FRMCS On-network communication shall support the flexible use of different radio bearers (see Bearer Flexibility).	Т		[Needs analysis]
[R-12.17.2-006]	FRMCS Equipment shall support On-network only as well as On-and Off-network relay communication.	Т		[Needs analysis]
[R-12.17.2-007]	FRMCS shall be able to support Off-network communication that tide over a distance between FRMCS UE's of up to 3km.	Т		[Needs analysis]
[R-12.17.2-008]	FRMCS Equipment shall support Off-network only as well as Off-network relay communication.	Т		[Needs analysis]

# 8 Use Case: Allocation and isolation of FRMCS communication ressources

		Change History
	22.11.2017	Import from RT(17)067023r4_End-to-End_Network_Slicing_for_FRMCS
	11.05.2018	Import from 3GPP TR 22.889 V16.2.0 (2018-03), Ch.12.19 Automatic Train
		Control data communication
1	24.10.2018	Changed title to Allocation and isolation of FRMCS communication ressources
		Update from 3GPP TR 22.889 V16.4.0 (2018-09), Ch. 12.19 Allocation and
		isolation of FRMCS communication ressources

# 8.1 Introduction

Rail communication distinguishes between critical, performance and business applications. It is an essential task of the FRMCS System to support segregation of data transmission, in this context the isolation of railway application data utilizing the same available transport resources. The principle of segregation of data transmission applies to:

- FRMCS communication infrastructure may be shared by multiple railway undertakings;
- Different railway applications of one railway undertaking require isolated and customized communication resources (transport resources and functionalities) for each application.

In general, it is anticipated that isolated transport services can be provided with a predictable and guaranteed QoS.

# 8.2 Use case: Isolation of FRMCS communication resources Description

# Scenario 1: Isolation for individual railway undertakings

An FRMCS System infrastructure manager may have to host different railway undertakings. Due to isolation reasons, these railway undertakings require segregation of their communication and a predictable and guaranteed QoS.

# Scenario 2: Isolation among categories of applications belonging to one railway undertaking

Railway community has classified their application to different categories, i.e. critical, performance and business. Due to isolation reasons, the related communications require segregation of data transmission having a predictable and guaranteed QoS for the different categories of applications.

# 8.2.1 Pre-conditions

# General

Segregation of data transmission is supported by the FRMCS system.

# Scenario 1: Isolation reasons for individual railway undertakings

Railway undertakings need their own segregated transport resources and network functionalities needed for their communications.

# Scenario 2: Isolation among categories of applications belonging to one railway undertaking

Railway undertaking assigns each application category to their own segregated transport resources and network functionalities needed for their communications.

# 8.2.2 Service flows

# Scenario 1: Isolation reasons for individual railway undertakings

Each railway undertaking in a country utilises dedicated and isolated transport resources and network functionalities.

# Scenario 2: Isolation among categories of applications belonging to one railway undertaking

Each application category of one railway undertaking utilises dedicated and isolated transport resources and network functionalities.

# 8.2.3 Post-conditions

#### Scenario1

Each railway undertaking in a country obtains dedicated and segregated transport resources and network functionalities.

#### Scenario2

Each application category of one railway undertaking obtains dedicated and segregated transport resources and network functionalities.

# 8.2.4 Potential requirements and gap analysis

Reference Number	Requirement text	Application / Transport	SA1 spec covering	Comments
[R-12.19.2.5-001]	The FRMCS System shall be able to support the segregation of transport data for different application categories.	A/T	22.261, clause 4	"Flexible network operations are the mainstay of the 5G system. The capabilities to provide this flexibility include network slicing, network capability exposure, scalability, and diverse mobility. Other network operations requirements address the necessary control and data plane resource efficiencies, as well as network configurations that optimize service delivery by minimizing routing between end users and application servers."
[R-12.19.2.5-002]	The FRMCS System shall support dedicated QoS handling for segregation of transport data.	Т	22.261 clause 6.1.1	"Network slicing allows the operator to provide customised networks. For example, there can be different requirements on functionality (e.g., priority, charging, policy control, security, and mobility), differences in performance requirements (e.g., latency, mobility, availability, reliability and data rates), or they can serve only specific users (e.g., MPS users, Public Safety users, corporate customers, roamers, or hosting an MVNO)."

# 9 Use Case: FRMCS Equipment capabilities for multiple FRMCS Users

# **Change History**

24.10.2018

Import from 3GPP TR 22.889 V16.4.0 (2018-09) Ch. 12.20 FRMCS Equipment capabilities for multiple FRMCS Users

# 9.1 Introduction

For communication, rail vehicles today have a dedicated terminal approach. For each type of application, voice or data (e.g. ATC), one (1:1) or several mobile terminals (1: n) are used. Multiple Mobile Terminals for one application are required for operational or availability reasons.

With the introduction of the FRMCS System, the number of applications will multiply. More recent train compositions already have a large number of sensors whose information is exchanged for control or diagnosis between the vehicle and the ground control centre.

With the continuation of the 1:1 principle (application equals mobile terminal) this would correspond to a multiplication of the mobile terminals. In addition, the space required for mobile terminals and roof antennas would significantly increase.

# 9.2 Description

In the case of vehicle/train composition, FRMCS Users can take full advantage of the transport facilities of the 3GPP system while ensuring priority, latency and reliability for each communication. FRMCS User and the associated communication applications need to be decoupled from the FRMCS Equipment.

# 9.3 Pre-conditions

At least one FRMCS Equipment is installed at the vehicle/train that provides transport capabilities between vehicle/train to ground or vice versa.

# 9.4 Service flows

Multiple FRMCS Users starts communication, for example:

- ATC;
- ATO;
- · Sensor information exchange.

# 9.5 Post-conditions

FRMCS Users on the vehicle/train are able to communicate to FRMCS Users on the ground or to other vehicles/trains.

# 9.6 Potential requirements and gap analysis

Reference Number	Requirement text	Application / Transport	SA1 spec covering	Comments
[R-12.20.5-001]	Multiple FRMCS Users in the vehicle/train shall be able to use one FRMCS Equipment simultaneously.	A/T		[Need analysis]
[R-12.20.5-002]	The service capabilities of an FRMCS Equipment shall be attributable individually to multiple FRMCS Users.	A/T		[Need analysis]
[R-12.20.5-003]	When an FRMCS Equipment is simultaneously used by multiple FRMCS Users, the communication for each of the FRMCS Users shall receive its required priority and QoS (latency and reliability) within the FRMCS System.	T		[Need analysis]
[R-12.20.5-004]	When an FRMCS Equipment is simultaneously used by multiple FRMCS Users, each of the FRMCS Users shall be individually addressable.	A		[Need analysis]

# 10 Use Case: FRMCS System/FRMCS User roaming capabilities

Change History				
23.04.2018	Import from FW-AT 2406 v0.0.4 SP UC FRMCS Roaming			
24.10.2018	Update from 3GPP TR 22.889 V16.4.0 (2018-09) Ch. 12.21 FRMCS			
	System/FRMCS User roaming capabilities			

# 10.1 Introduction

FRMCS Roaming use cases address the ability for an FRMCS User to make use of FRMCS Applications when he is provided service by a network different from his Home FRMCS Network. A specific use case applies for FRMCS Functional Identities (see 12.21.3 use case).

It is essential for the operation of international trains, transporting passenger or freight across borders, that FRMCS Users are using the capabilities and services of other FRMCS networks.

The situations envisaged also encompass situations where trains are moving to an area where a dedicated FRMCS network has been deployed for an urban area, for a region, for a rail track operated by a different company in a tunnel, in a large industrial area.

Other cases are pertinent for rail operation such as trains running in countries or regions where communications services provided by the local responsible Rail Infrastructure Manager are different from the one where they have subscription or where service can only be provided by a Public Mobile Network Operator.

FRMCS Roaming capabilties are necessary to ensure that Railways Undertaking will be able to use a single FRMCS Equipment for their FRMCS Users while roaming.

# 10.2 Use Case: FRMCS User is relocating towards a Visited (FRMCS) Network

# 10.2.1 Description

This use case addresses the situation where an FRMCS User is moving beyond the coverage of its Home FRMCS Network and where communications services can be provided by another Visited (FRMCS) Network. Following scenarios for an FRMCS User are:

- Relocation from Home FRMCS Network to a Visited (FRMCS) Network and vice versa:
- Relocation from a Visited (FRMCS) Network to another Visited (FRMCS) Network.

#### 10.2.2 Pre-conditions

The Visited (FRMCS) Network is capable to retrieve FRMCS Users information from applicable Home FRMCS network.

# 10.2.3 Service flows

FRMCS User is relocating from Home FRMCS Network to Visited (FRMCS) Network, or from a Visited (FRMCS) Network to another Visited (FRMCS) Network.

FRMCS User makes use of FRMCS Applications that are applicable in the Home FRMCS Network and the FRMCS Application that are applicable in the Visited (FRMCS) Network.

# 10.2.4 Post-conditions

FRMCS User is able to use FRMCS Applications after relocating to a Visited (FRMCS) Network.

FRMCS User has not experienced service interruption of FRMCS Application while relocating.

# 10.2.5 Potential requirement

Reference Number	Requirement text	Application / Transport	SA1 spec covering	Comments
[R-12.21.2-001]	The FRMCS System shall provide the technical means to allow communication services between FRMCS Users that are belonging to different administrative realms of the FRMCS System i.e. Home FRMCS Network and Visited (FRMCS) Network.	A/T		[Need analysis]
[R-12.21.2-002]	The FRMCS System shall provide communication services to FRMCS Users visiting another administrative realm i.e. Visited (FRMCS) Network.	A/T		[Need analysis]
[R-12.21.2-003]	The FRMCS System shall support a mechanism for an administrator to determine if a FRMCS User is able to use communication services in the Visited (FRMCS) Network.	A		[Need analysis]
[R-12.21.2-004]	The FRMCS System shall be able to provide service continuity when relocating between FRMCS Network without the FRMCS User noticing the change.	A/T		[Need analysis]
[R-12.21.2-005]	The FRMCS system shall be able to provide the same Quality of Service for the use of FRMCS Applications regardless of whether the FRMCS User is using the Home FRMCS Network or Visited (FRMCS) Network.	A/T		[Need analysis]

# 10.3 Use Case: Functional Identities in FRMCS Roaming situations

# 10.3.1 Description

This use case addresses the situation where an FRMCS User or FRMCS Equipment is moving beyond the coverage of its Home FRMCS Network and where communications services can be provided by another Visited (FRMCS) Network.

An FRMCS User or FRMCS Equipment in FRMCS Roaming situations (referring to 12.21.2 use case) shall be able to make use of FRMCS Functional Identities, from its Home FRMCS Network and, when applicable, from Visited (FRMCS) Networks. For instance, an FRMCS User or FRMCS Equipment in a train can be registered to a permanent FRMCS Functional Identity with its Home FRMCS Network (associated with the engine), and an FRMCS

Functional Identity registered with a Visited (FRMCS) Network. For train cross border operations (e.g. FRMCS Roaming situations), some registered FRMCS Functional Identities shall remain valid for the duration of the train international run, the same FRMCS Functional Identity keeping the same association to FRMCS Equipment while border crossing.

Each FRMCS Network shall maintain its own FRMCS Functional Identity addressing scheme. For the purpose of FRMCS roaming, an international FRMCS Functional Identity scheme will be used and national scheme will align on it. If a train (e.g. an FRMCS User) is involved in cross border operation, the FRMCS System shall detect automatically if an activated FRMCS Functional Identity requires a re-association to the local applicable addressing domain. The responsible local functional addressing entity in the Visiting (FRMCS) Network aligns the Home FRMCS Network functional addressing entity about FRMCS Functional Identity re-association. The activation status of the re-associated FRMCS Functional Identity will be aligned accordingly. The responsible entity of the functional address is keeping the status (active/inactive).

#### 10.3.2 Pre-conditions

FRMCS User is registered to at least one FRMCS Functional Identity F1 with its Home FRMCS Network.

FRMCS Equipment is associated with a permanent Functional Identity administrated by the Home FRMCS Network.

The Visited (FRMCS) Network is capable to retrieve FRMCS Users information from applicable Home FRMCS network.

# 10.3.3 Service flows

FRMCS User is relocating from Home FRMCS Network to Visited (FRMCS) Network, or from a Visited (FRMCS) Network to another Visited (FRMCS) Network.

FRMCS Users and FRMCS Equipment register to at least one FRMCS Functional Identity F2 with the Visited (FRMCS) Network.

FRMCS User makes use of FRMCS Functional Identities associated with the Home FRMCS Network, at least F1, and the FRMCS Functional Identities associated with the Visited (FRMCS) Network, at least F2.

#### 10.3.4 Post-conditions

An FRMCS User and FRMCS Equipment in FRMCS Roaming situations are able to use FRMCS Functional Identities associated with both Home FRMCS Network and Visited (FRMCS) Networks.

# 10.3.5 Potential requirement

Reference Number	Requirement text	Application / Transport	SA1 spec covering	Comments
[R-12.21.3-001]	The FRMCS System shall be able to establish communication services based on FRMCS Functional Identity(ies) between FRMCS Users or FRMCS Equipment associated with different FRMCS Networks.	A/T		[Need analysis]
[R-12.21.3-002]	The FRMCS System shall be able to establish a communication services based on FRMCS Functional Identity(ies) associated with different FRMCS Networks.	A/T		[Need analysis]
[R-12.21.3-003]	The FRMCS System shall provide the necessary means for a FRMCS User or FRMCS Equipment to register and deregister FRMCS Functional Identity(ies) with the Home FRMCS Network and/or with the Visited (FRMCS) network.	A/T		[Need analysis]
[R-12.21.3-004]	When the FRMCS User or FRMCS Equipment is relocating between networks, the FRMCS System shall provide a mechanism to perform necessary registration/deregistration of one or multiple FRMCS Functional Identity(ies) with the Visited (FRMCS) Network operator and inform the Home FRMCS Network.	A/T		[Need analysis]

# 11 Use Case: Availability increasing measures

# **Change History**

24.10.2018 Import from RT(18)070034r1 TR 22.889 SP UC Availability increasing measure 14.02.2019 Import from RT(18)070034r2 TR 22.889 SP UC Availability increasing measure

# 11.1 Description

In some regions railways are a major constituent for the economy. Disturbance in the complex railway system can have a significant impact for example in the manufacturing process if components cannot be delivered in-time. There are significant improvements in train punctuality and track utilisation by using Automatic Train Control (ATC) systems. Unavailability of the FRMCS System, FRMCS sub-systems or simple components can cause a significant impact to railway operation.

ATC provides different levels of operation. The moving block mode is the most demanding one that requires multiple times more information in one second, e.g., position reports from the train towards the ground controlling entity which computes continuously the risk that consecutive trains can collide.

In order to minimise the risk of FRMCS System unavailability, Single Point of Failures (SPOF) need to be eliminated. There are different strategies such as duplication of components, subsystems or the entire system. The mode of system redundancy ranges from hot-standby, warm-standby to cold-standby. Hot-standby is the most demanding mode and requires an instantaneous continuation of the end-to-end service. Also the use of only one spectrum block represents a SPOF. In case one spectrum block become unavailable due to wideband jamming or similar, the FRMCS System needs to be able to make flexible use of spectrum to minimize the risk of radio path unavailability.

FRMCS System or sub-system maintenance may cause outages of some minutes or hours. Today, a high utilisation of rail tracks already reduces the number of maintenance windows. A redundant deployment of the radio access sub-system allows continuation of rail operation while one part of radio access sub-system is under maintenance.

#### 11.2 Pre-conditions

The basis for setting up the FRMCS System takes into account the elimination of Single Point Of Failure which encompasses:

- Usage of multiple independent spectrum blocks;
- Duplication of system functionalities/entities of the FRMCS System.

# 11.3 Service Flow

#### Case 1:

During train control operation, some portion of the used spectrum block is disturbed, e.g., through interference from an external source.

# Case 2:

During train control operation a FRMCS sub-system fails or has been put under maintenance.

# 11.4 Post-conditions

The communication service continues without interruption.

Train operation efficiency is not affected in any way despite the disturbances caused by:

- Interference (intentional or unintentional);
- Unavailability of FRMCS sub-systems due to planned (maintenance) or unplanned (outage) reasons.

# 11.5 Potential requirements

- R1: The FRMCS System shall be able to provide a mechanism to allow independent transmission paths making use of multiple spectrum blocks.
- R2: The FRMCS System shall provide a mechanism that minimizes the risk of single point of failure.

# 12 Use Case: Flexible Use of the Frequency Spectrum

Change History				
23.04.2018	FW-AT 2103			
23.04.2018	Import from FW-AT 2304 SP_Flexible use of the frequency spectrum_0.0.6			
24.10.2018	Update from RT(18)070033r2 TR 22.889 SP UC - Flexible use of spectrum			

# 12.1 Introduction

Globally, different contiguous spectrum block(s) with related bandwidth(s) may be available for rail communication in different areas. An FRMCS Equipment may also support different contiguous spectrum block(s) with related bandwidth(s) than the infrastructure deployed in the area. The use case addresses the general requirements related to the ability of the FRMCS System to flexibly use the maximum extent of rail spectrum available in an area, also considering the capabilities of the FRMCS Equipment that is served.

# 12.2 Description

It is essential that the FRMCS system can flexibly utilize the available bandwidth of the contiguous spectrum block(s), for both On-network and Off-network communication, also considering the contiguous spectrum block(s) and related bandwidth(s) supported by served FRMCS Equipment.

#### 12.3 Pre-conditions

In certain areas, specific contiguous spectrum block(s) and related bandwidth(s) are available for rail communication. An FRMCS Equipment served in the area supports (possibly different) specific contiguous spectrum block(s) and their related bandwidth(s).

# 12.4 Service flows

The FRMCS System obtains information about the specific contiguous spectrum block(s) and their related bandwidth(s) supported by the FRMCS Equipment.

The FRMCS System allocates the locally available contiguous spectrum block(s) and their related bandwidth(s), and serves FRMCS Equipment according to its supported contiguous spectrum block(s) and their related bandwidth(s).

# 12.5 Post-conditions

The FRMCS System is able to flexibly use the maximum extent of rail spectrum available in a given area, also considering the capabilities of the FRMCS Equipment that is served.

# 12.6 Potential requirement

R1: The FRMCS System shall be able to support:

- a) Utilization of spectrum blocks allocated for either FDD or TDD;
- For individual contiguous spectrum blocks, bandwidths less than 5 MHz (e.g. 1.4 MHz or 3 MHz);
- c) For individual contiguous spectrum blocks, bandwidths of 5 MHz or multiple of 5 MHz;

- d) Use of multiple spectrum blocks simultaneously.
- R2: The FRMCS System shall provide mechanisms that allow FRMCS Equipment to inform/report about its capabilities to support spectrum block(s).

Printed by

International Union of Railways

16, rue Jean Rey 75015 Paris - France

March 2017

Dépôt légal March 2017

ISBN 978-2-7461-2605-3